



# Process controller with PROFIBUS DP and Modbus Master/Slave

## 1/8 DIN - 48 x 96

### X5000 line

Platinum™  
S E R I E S


User manual • M.I.U.X5000 -2/01.01 • Cod. J30-478-1AX5 SEA



ATHENA CONTROLS, INC.  
5145 Campus Drive  
Plymouth Meeting  
PA 19462 U.S.A.  
Tel: (610) 828-2490  
Fax: (610) 828-7084  
AthenaControls.com

**Process controller  
with PROFIBUS DP  
and Modbus Master/Slave  
1/8 DIN - 48 x 96  
X5000 line**

---

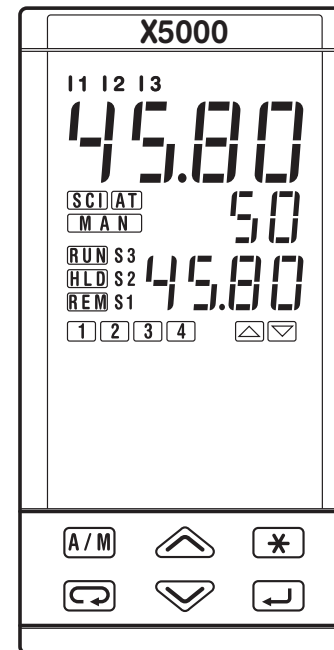

**CE**  
**NOTES**  
**ON ELECTRIC**  
**SAFETY AND**  
**ELECTROMAGNETIC**  
**COMPATIBILITY**

**Please, read carefully these instructions before proceeding with the installation of the controller.**

**Class II instrument, rear panel mounting.**

This controller has been designed with compliance to:

**Regulations on electrical apparatus** (appliance, systems and installations) according to the European Community directive 73/23 CEE amended by the European Community directive 93/68 CEE and the Regulations on the essential protection requirements in electrical apparatus EN 61010-1 (IEC 1010 - 1) : 90 +A1:92 + A2:95.

**Regulations on Electromagnetic Compatibility** according to the European Community directive n089/336/CEE, amended by the European Community directive n° 92/31/CEE and the following regulations:

Regulations on RF emissions

EN50081 - 1 residential environments

EN50081 - 2 for industrial environments

Regulation on RF immunity

EN500082-2 for industrial equipment and system

**It is important to understand that it's responsibility of the installer to ensure the compliance of the regulations on safety requirements and EMC. This device has no user serviceable parts and requires special equipment and specialised engineers.**

Therefore, a repair can be hardly carried on directly by the user. For this purpose, the manufacturer provides technical assistance and the repair service for its Customers.

Please, contact your nearest Agent for further information.

**All the information and warnings about safety and electromagnetic compatibility are marked with the  sign, at the side of the note.**

# TABLE OF CONTENTS

<b>1</b>	<b>INTRODUCTION</b> .....	page 4	<b>5</b>	<b>DISPLAYS</b> .....	page 53
	1.1 <b>PRODUCT CODING</b> .....	page 5	<b>6</b>	<b>COMMANDS</b> .....	page 54
<b>2</b>	<b>INSTALLATION</b> .....	page 6	6.1 <b>COMMANDS FROM KEYBOARD</b> .....	page 55	
	2.1 <b>DESCRIPTION</b> .....	page 6	6.2 <b>COMMANDS FROM DIGITAL INPUTS</b> .....	page 58	
	2.2 <b>OPERATING CONDITIONS</b> .....	page 8	6.3 <b>COMMANDS FROM SERIAL COMMUNICATION</b> (PLEASE, REFER THE ADDENDUM ON THE SERIAL COMMUNICATION)		
	2.3 <b>INSTALLATION</b> .....	page 9	<b>7</b>	<b>SETPOINT PROGRAMMER ( OPTIONAL )</b> .....	page 59
<b>3</b>	<b>ELECTRICAL CONNECTIONS</b> .....	page 10	7.1 <b>PROGRAM ORGANISATION</b> .....	page 59	
	3.1 <b>TERMINATION UNIT</b> .....	page 10	7.2 <b>OPERATING CONDITIONS</b> .....	page 60	
	3.2 <b>CABLING LAYOUT</b> .....	page 11	7.3 <b>PARAMETERISATION - PROGRAM MENU</b> .....	page 62	
	3.3 <b>EXAMPLE OF WIRING DIAGRAM</b> .....	page 12	7.4 <b>PROGRAM STATUS DISPLAYING</b> .....	page 64	
<b>4</b>	<b>OPERATIONS</b> .....	page 22	7.5 <b>RUN/STOP OF A PROGRAM</b> .....	page 65	
	4.1 <b>KEYS FUNCTIONS AND DISPLAY</b> .....	page 22	<b>8</b>	<b>TECHNICAL SPECIFICATIONS</b> .....	page 69
	4.2 <b>DATA SETTING</b> .....	page 24			
	4.3 <b>CONFIGURATION</b> .....	page 25			
	4.4 <b>PARAMETERISATION</b> .....	page 34			
	4.5 <b>PARAMETERS</b> .....	page 42			
	4.6 <b>ACCESS LEVELS</b> .....	page 50			


# 1 INTRODUCTION

## POWERFUL FEATURES AND A WIDE RANGE OF FUNCTIONALITIES

Congratulations for having chosen these universal controllers. They are the best result of our experience in designing and manufacturing of smart, powerful and high reliable controllers.

The process controllers of the X5000 series have been designed for the industrial environment, are provided with a complete set of functions, as a true universal instrument.

They can be used as Controllers-Programmers with 4 Setpoint profiles of 16 segments.

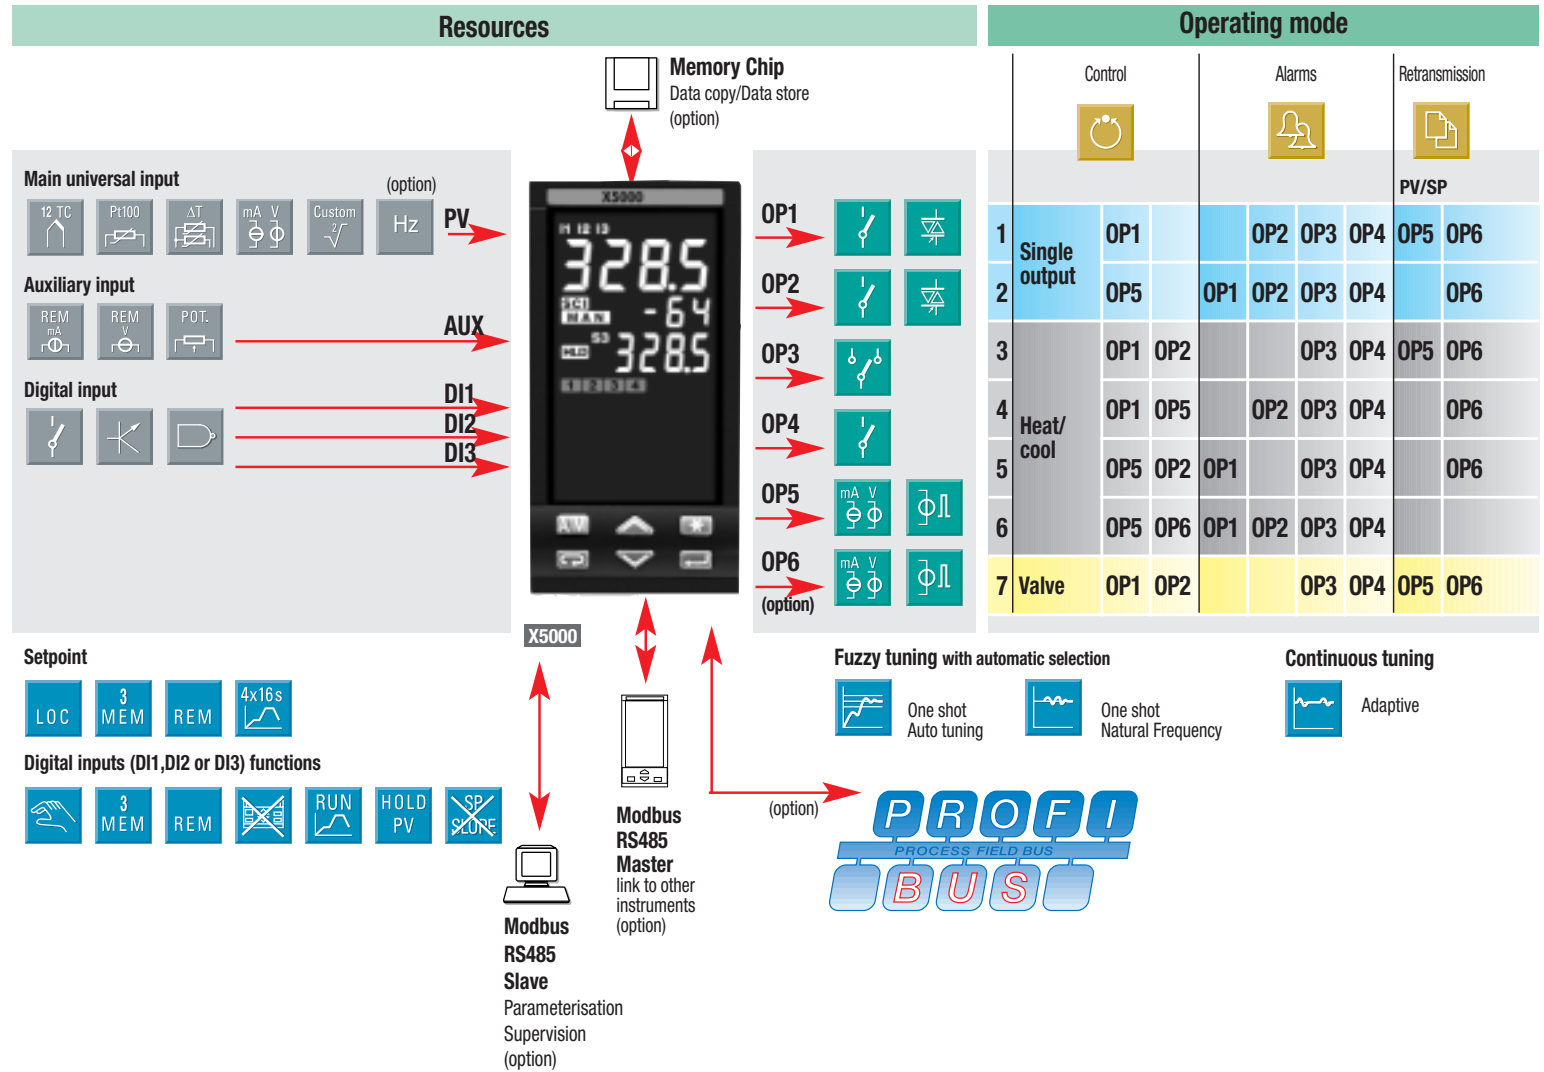


**1.1 MODEL CODE**


The complete code is displayed on the instrument label.

The information about product coding are accessible from the front panel by mean of a particular procedure described at section 5.1 page 53.

Basic product code

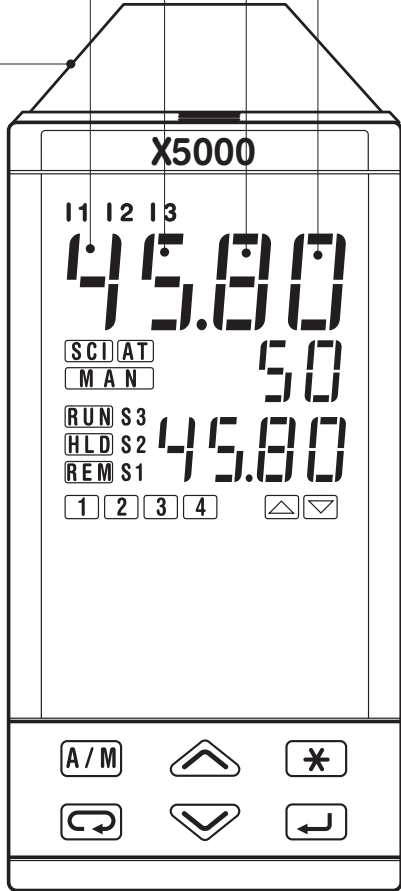

Instrument label

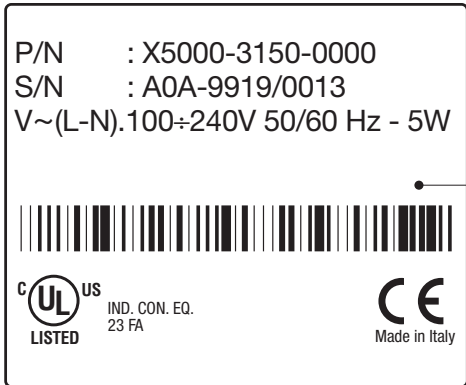

Line                      Modello basic                      Accessories  
 Model: **X5000** – **A B C D** – **E F G H**

Power supply		A
100 - 264Vac 48/63 Hz		3
18-28Vac 48/63 Hz and 20-30Vdc		5

OUTPUT 1&2 [1]	OUTPUT 3&4 [1]	OUTPUT 5 [2]	B
Relay -Relay	Relay - Relay (alarm only)	Analog or Logic	1
Triac - Triac	Relay - Relay (alarm only)	Analog or Logic	5

Option 1 [2]		C
None		0
RS485 Modbus/Jbus Slave + Math Package		5
RS485 Modbus/Jbus Slave + Master + Math Package		6
PROFIBUS DP		7
PROFIBUS DP + RS485 Modbus/Jbus Slave + Math Package		8

Option 2 [3]		D
None		0
Frequency Input		1
Second Analog Output (OP6)		4
Frequency Input + Second Analog Output (OP6)		6

Option 3 [4]	User manual	E	F
Not provided	Standard English/Spanish manual	0	3
Setpoint Program 4/16	Standard English/Spanish manual	4	3

Front Bezel colour		G	H
Dark Grey (standard)		0	0
Beige		1	0


**Notes**

- [1] Relay Output 1,2,4 are SPST N.O. 2A/250Vac, Relay Output 3 is SPDT N.O. 2A/250Vac, Triac 1A/250Vac, Logic 24Vdc at 30mA. Output 3&4 are alarms only, Output 5 is field configurable for analog or Logic output via software
- [2] Math functions of add, subtract, multiply, divide, and hi/lo

- select are only available via configuration software
- [3] Analog Output 5&6 are field configurable for control or retransmission output as 0-20mA or 4-20mA. The addition of Analog Output 6 (OP6) does not affect any of the other five outputs
- [4] Four setpoint programs with up to 16 segments each

## INSTALLATION

**Installation must only be carried out by qualified personnel.**


Before proceeding with the installation of this controller, follow the instructions illustrated in this manual and, particularly the installation precautions marked with the  symbol, related to the European Community directive on electrical protection and electromagnetic compatibility.




To prevent hands or metal touching parts that may be electrically live, **the controllers must be installed in an enclosure and/or in a cubicle.**

### 2.1 GENERAL DESCRIPTION


**IP 20 Termination Unit**  
EN61010 - 1 (IEC1010 - 1)

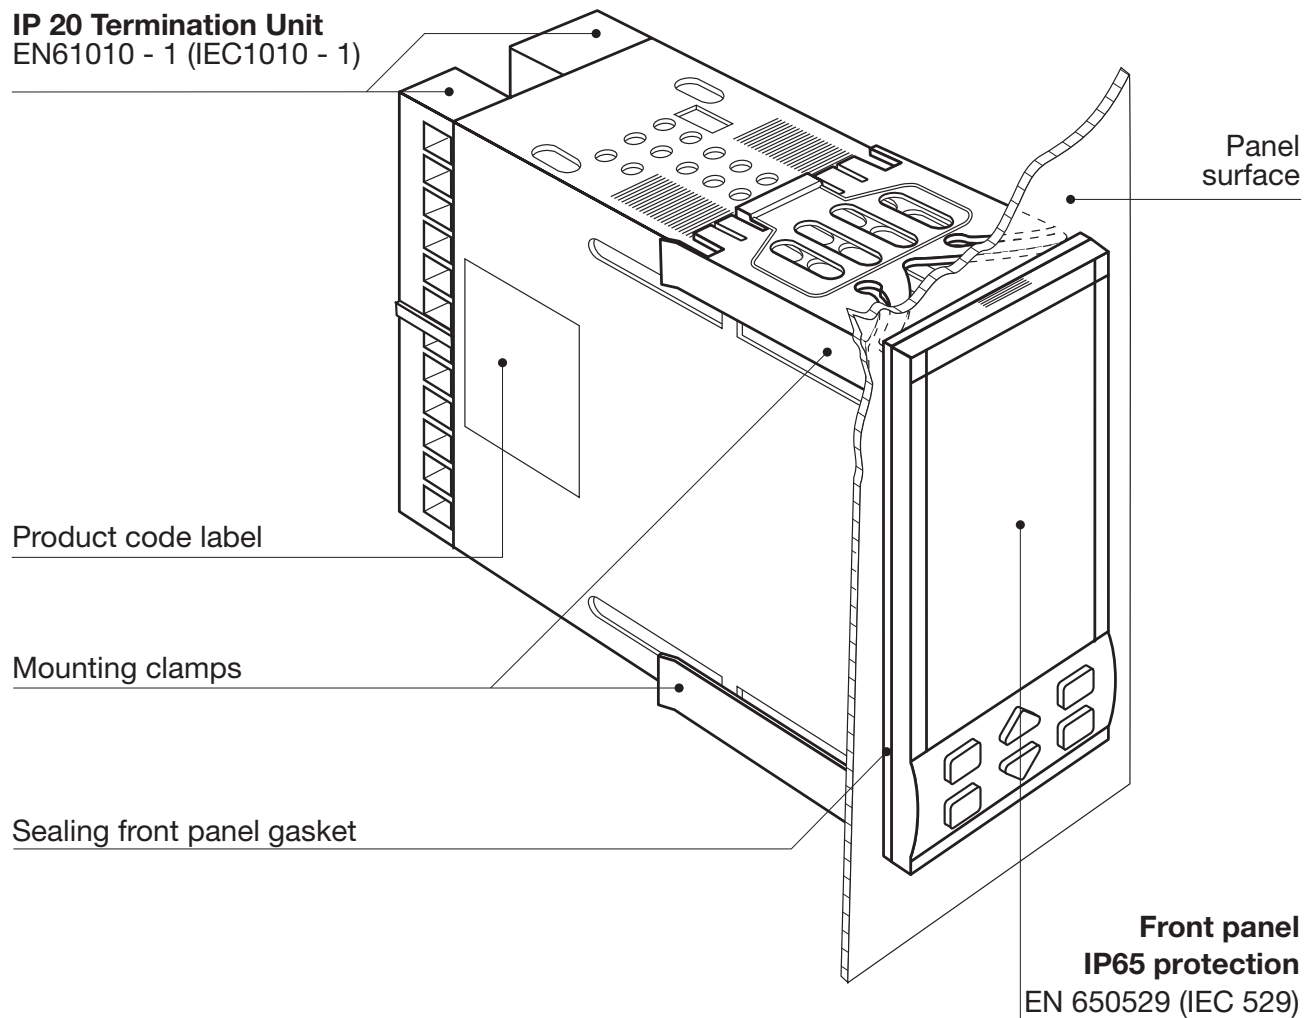

### 2.1.1 DIMENSIONAL DETAILS

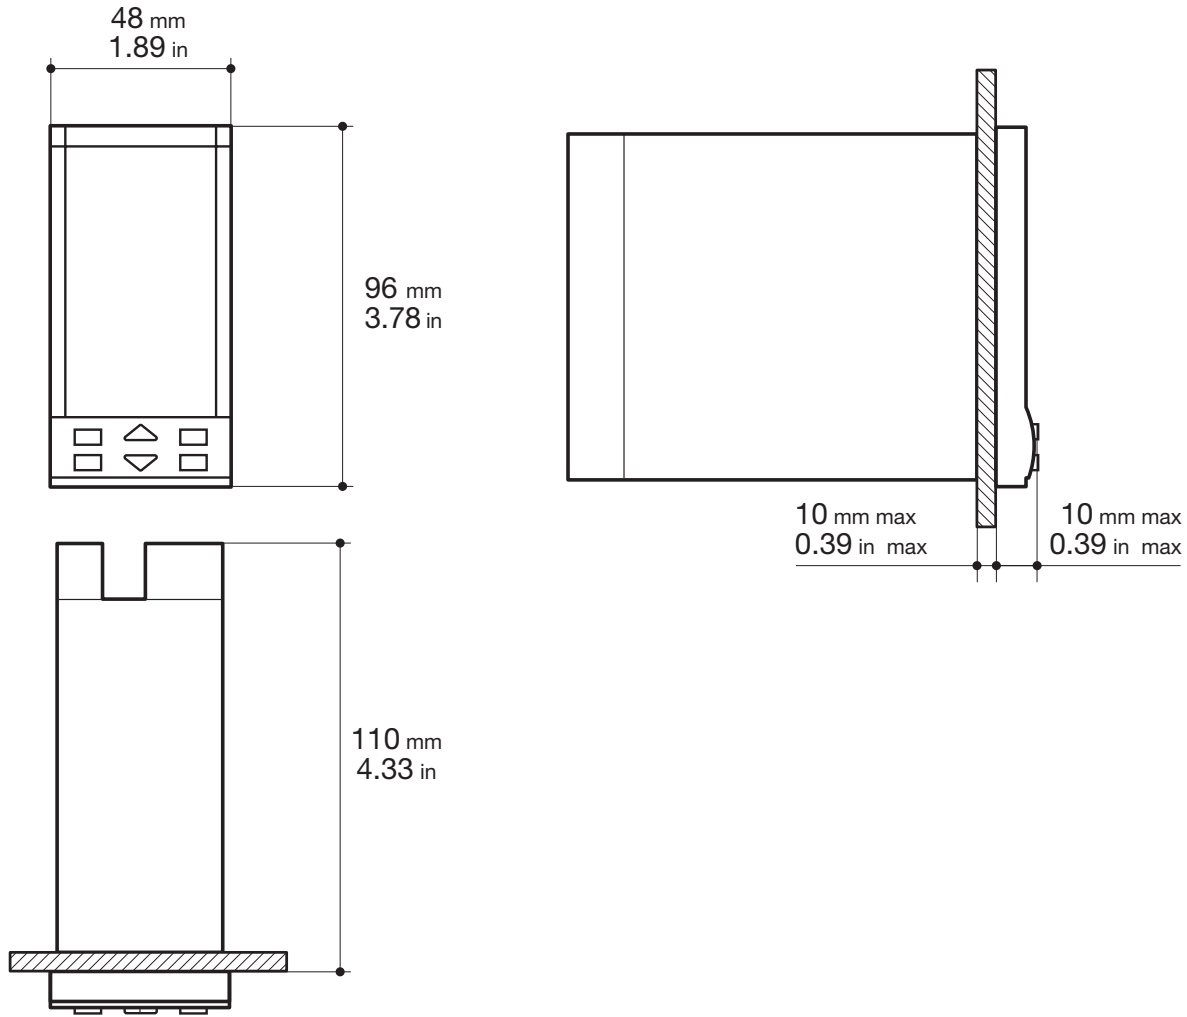

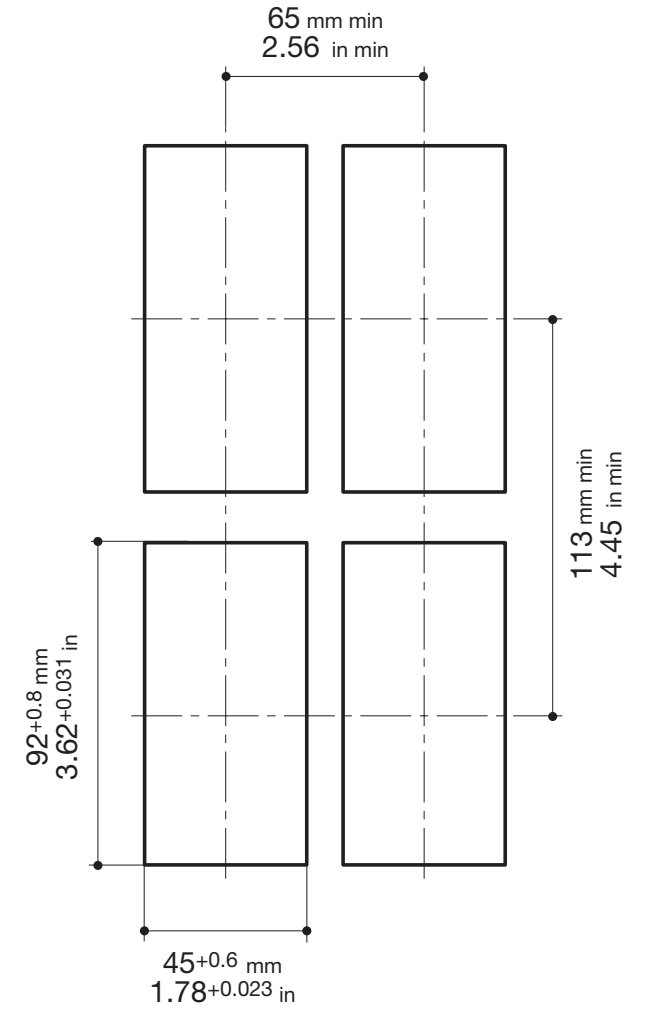

### 2.1.2 PANEL CUT-OUT










**2.2 ENVIRONMENTAL RATINGS****Operating conditions**

	Altitude up to 2000 m
	Temperature 0...50°C
%Rh	Relative humidity 5...95 % non-condensing

**Special conditions**

<b>Special conditions</b>		<b>Suggestions</b>
	Altitude > 2000 m	Use 24V~ supply version
	Temperature >50°C	Use forced air ventilation
%Rh	Humidity > 95 %	Warm up
	Conducting atmosphere	Use filter


**Forbidden Conditions** 

	Corrosive atmosphere
	Explosive atmosphere

## 2.3 PANEL MOUNTING


### 2.3.1 INSERT THE INSTRUMENT

- 1 Prepare panel cut-out
- 2 Check front panel gasket position
- 3 Insert the instrument through the cut-out

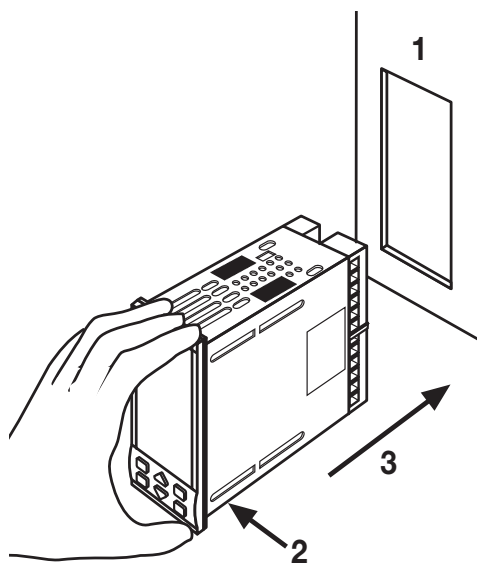


### 2.3.2 INSTALLATION SECURING

- 1 Fit the mounting clamps
- 2 Push the mounting clamps towards the panel surface to secure the instrument

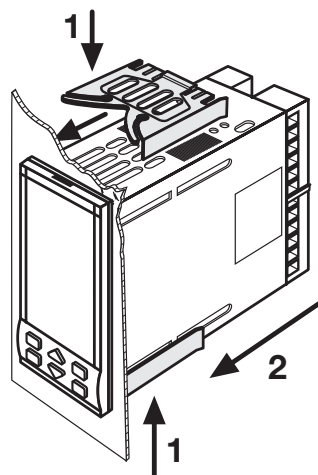

### 2.3.3 CLAMPS REMOVING

- 1 Insert the screwdriver in the clips of the clamps
- 2 Rotate the screwdriver

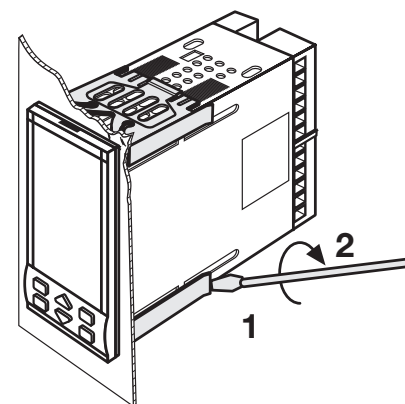

#### UL Note

For use on a Flat Surface of a Type 2 and Type 3 "raintight" Enclosure

### 2.3.4 INSTRUMENT UNPLUGGING




- 1 Push and
- 2 Pull to remove the instrument

Electrostatic discharges can damage the instrument




Before removing the instrument the operator must discharge himself to ground

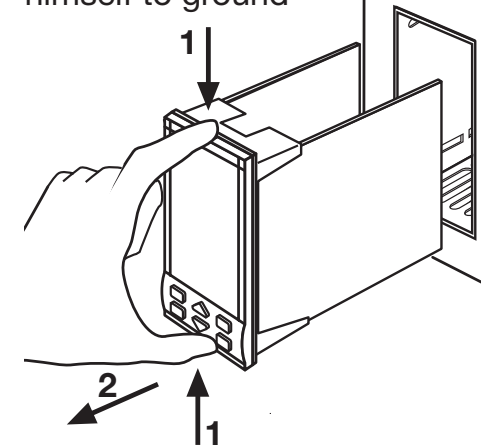


# 3 ELECTRICAL CONNECTIONS

## 3.1 TERMINATION UNIT

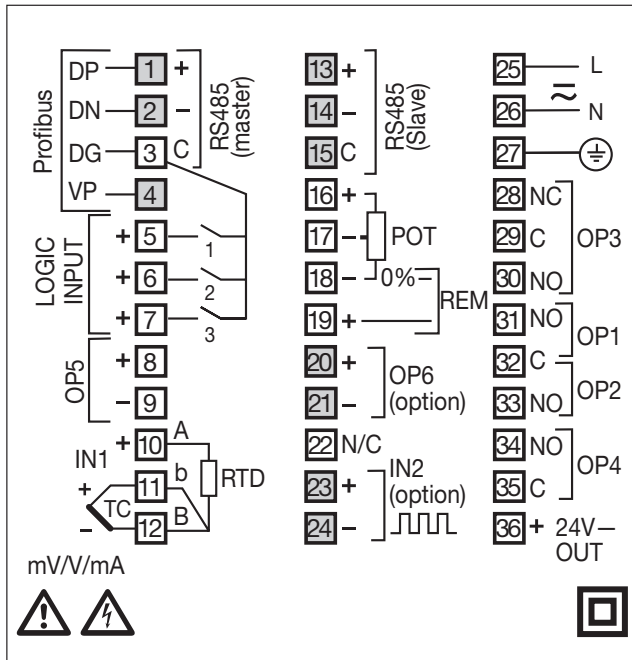


### UL Note

Use 60/70 °C copper (Cu) conductor only.

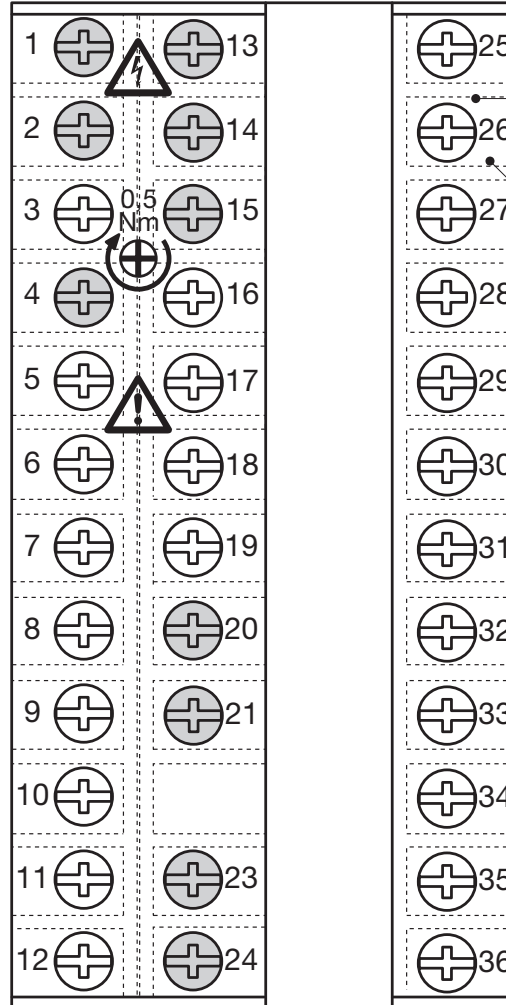

Rear terminal cover

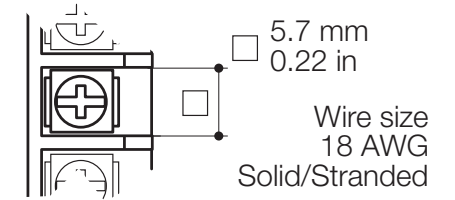

- 35 screw terminals M3
- Option terminals
- Holding screw 0.5 Nm
- Positive screw driver PH1
- Negative screw driver 0,8 x 4 mm

### Terminals

- Pin connector  
Ø 1.4 mm 0.055 in max
- Fork-shape AMP 165004  
Ø 5.5 mm - 0.21 in
- Stripped wire  
L 5.5 mm - 0.21 in

**PRECAUTIONS**

Despite the fact that the instrument has been designed to work in an harsh and noisy environmental (level IV of the industrial standard IEC 801-4), it is recommended to follow the following suggestions.




All the wiring must comply with the local regulations.

The supply wiring should be routed away from the power cables. Avoid to use electromagnetic contactors, power Relays and high power motors nearby.


Avoid power units nearby, especially if controlled in phase angle

Keep the low level sensor input wires away from the power lines and the output cables.

If this is not achievable, use shielded cables on the sensor input, with the shield connected to earth.

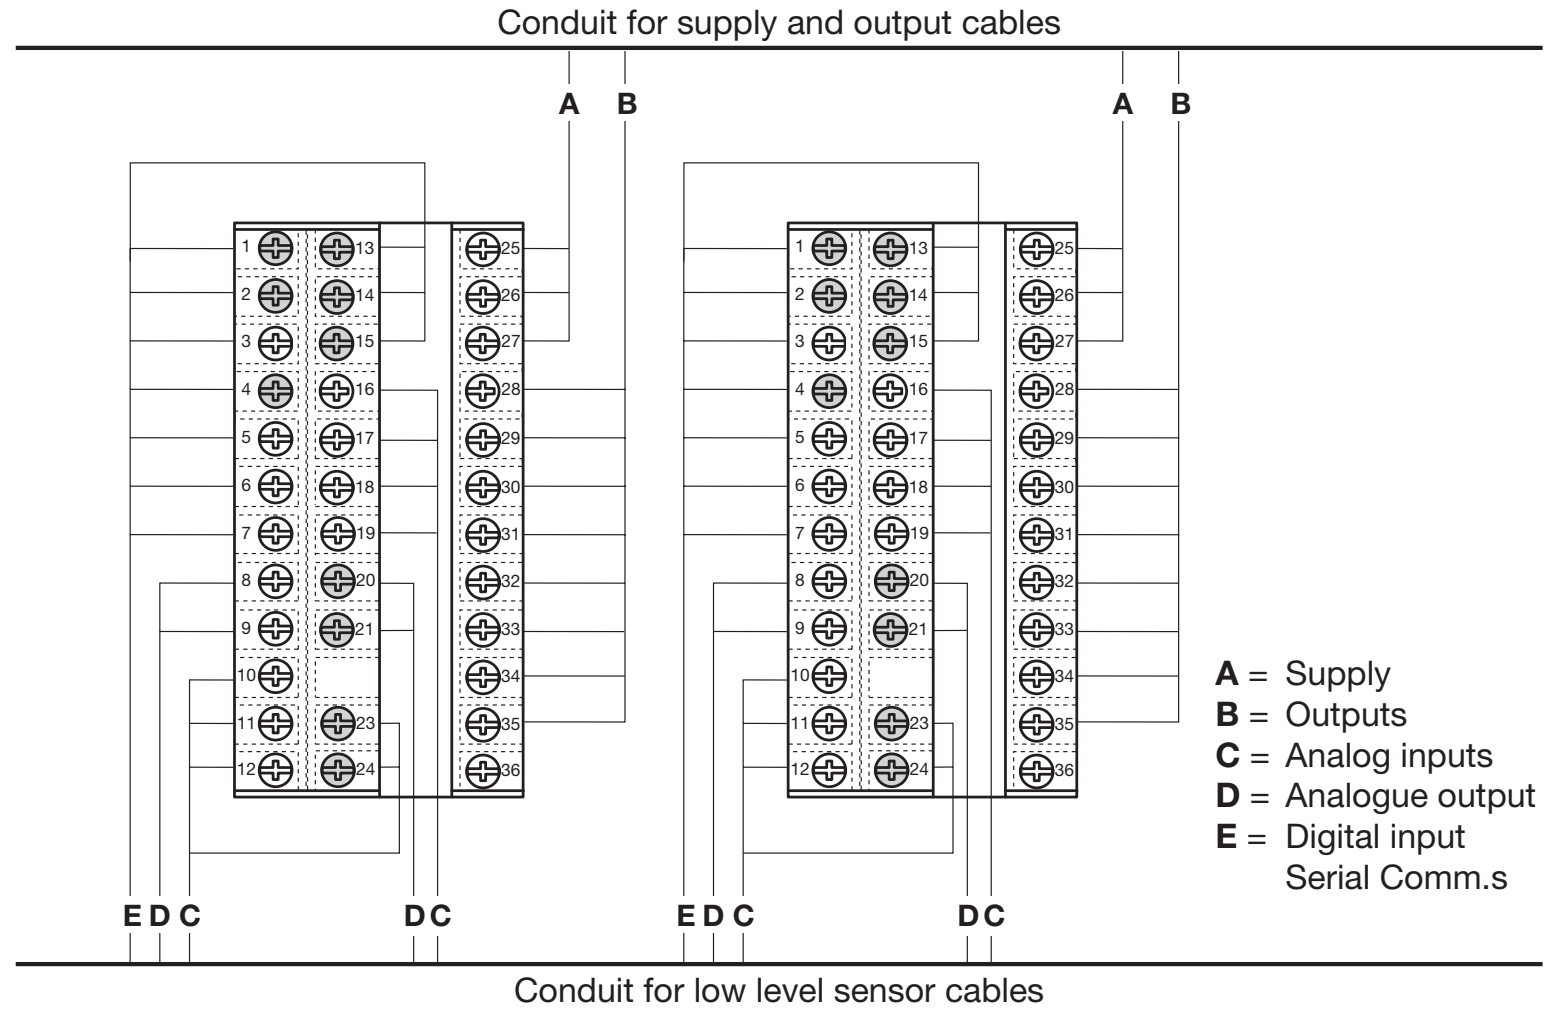**3.2 PRECAUTIONS AND ADVISED CONDUCTOR COURSE**

### 3.3 EXAMPLE OF WIRING DIAGRAM (VALVE CONTROL)

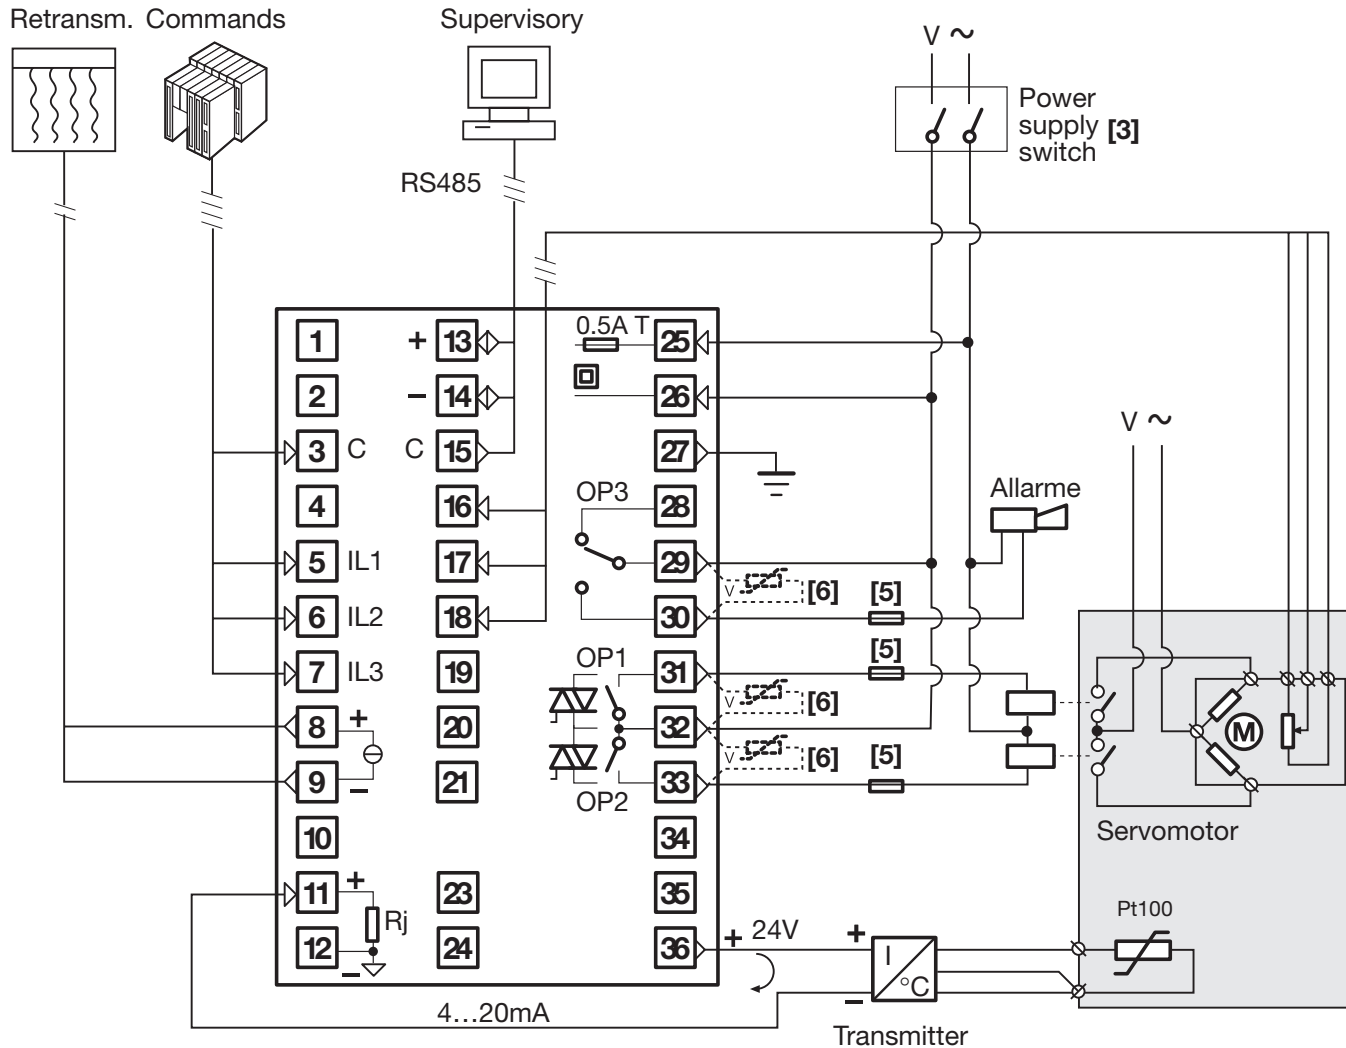


**Notes:**

- 1) Make sure that the power supply voltage is the same indicated on the instrument.
  - 2) Switch on the power supply only after that all the electrical connections have been completed.
  - 3) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument. The power supply switch shall be easily accessible from the operator.
  - 4) The instrument is protected with a 0.5 A ~ T fuse. In case of failure it is suggested to return the instrument to the manufacturer for repair.
  - 5) To protect the instrument internal circuits use:
    - 2 A ~ T fuses for Relay outputs
    - 1 A ~ T fuses for Triac outputs
  - 6) Relay contacts are already protected with varistors.
- Only in case of 24 V ~ inductive loads, use model A51-065-30D7 varistors (on request)**

### 3.3.1 POWER SUPPLY

Switching power supply with multiple isolation and internal fuse

- **Standard version:**  
nominal voltage:  
100 - 240V~ (-15% + 10%)  
Frequency 50/60Hz
- **Low Voltage version:**  
Nominal voltage:  
24V~ (-25% + 12%)  
Frequency 50/60Hz  
or 24V- (-15% + 25%)  
Power consumption 3VA max

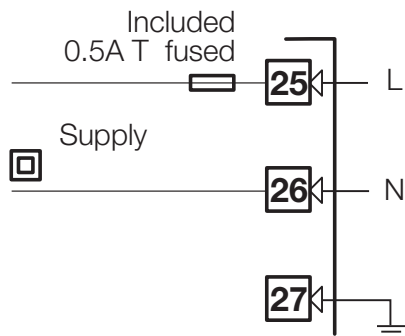


For better protection against noise, it is recommended not to connect the earth clamp provided for civilian installations.

### 3.3.2 PV CONTROL INPUT


#### A L-J-K-S-R-T-B-N-E-W thermocouple type

- Connect the wires with the polarity as shown
- Use always compensation cable of the correct type for the thermocouple used
- The shield, if present, must be connected to a proper earth.

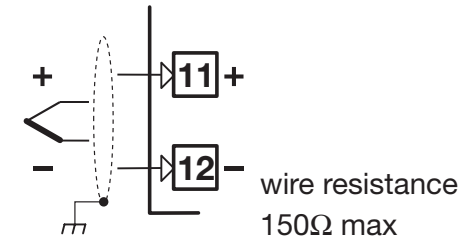


#### B For Pt100 resistance thermometer


- If a 3 wires system is used, use always cables of the same diameter (1mm<sup>2</sup> min.)  
Line 20 Ω/lead maximum resistance
- When using a 2 wires system, use always cables of the same diameter (1,5mm<sup>2</sup> min.) and put a jumper between terminals 11 and 12

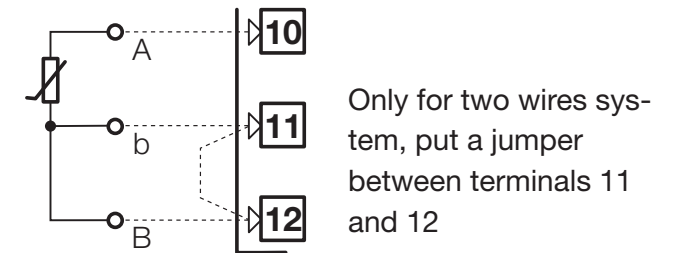

#### C For ΔT (2x RTD Pt100) Special

-  When the distance between the controller and the sensor is 15 mt. using a cable of 1.5 mm<sup>2</sup> diameter, produces an error on the measure of 1°C.


**R1 + R2 must be <320Ω**

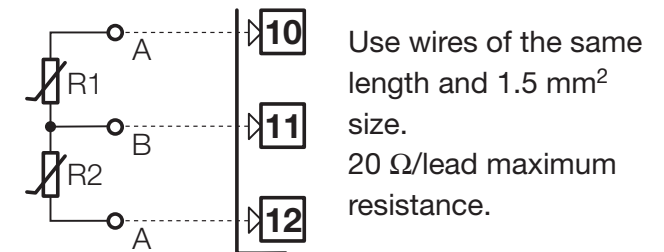

### 3.3.2 PV CONTROL INPUT




#### C For mA, mV

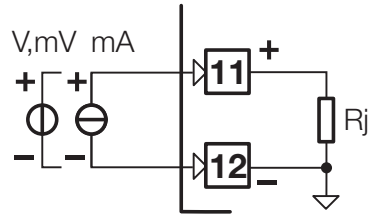


Input resistance =  $30\Omega$  per mA  
 Input resistance >  $10M\Omega$  per mV  
 Input resistance =  $10K\Omega$  per Volt

#### C1 With 2 wires transducer

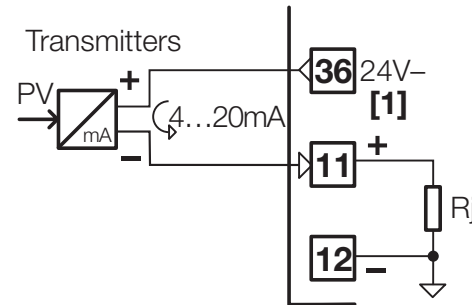

#### C2 With 3 wires transducer

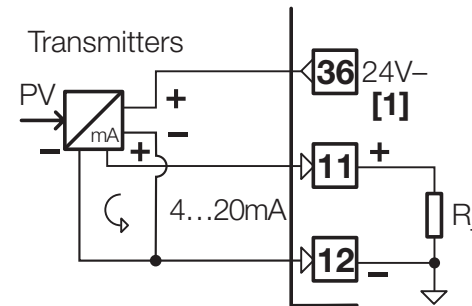


[1] Auxiliary power supply for external transmitter 24V-  $\pm 20\%$ /30mA max without short circuit protection

### 3.3.3 PV CONTROL INPUT - IN2 FREQUENCY INPUT



Using the frequency input - IN2, the IN1 input is no more available

- Low level: 0...2Volt / 0.5mA max
- High level: 3...24Volt /  $\sim 0$  mA max
- Frequency range: 0...2KHz / 0...20KHz selectable in configuration mode
- Use sensors with an NPN output or a clean contact

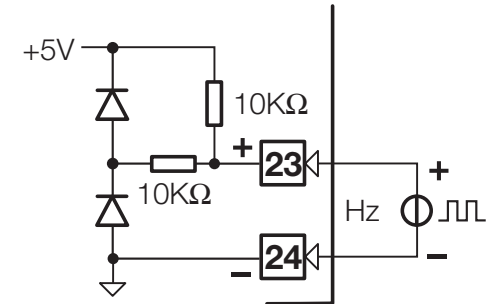

### 3.3.4 AUXILIARY INPUT




#### A - From Remote Setpoint

Current 0/4...20mA

Input resistance = 30Ω

Voltage 1...5V, 0...5V, 0...10V

Input resistance = 300KΩ


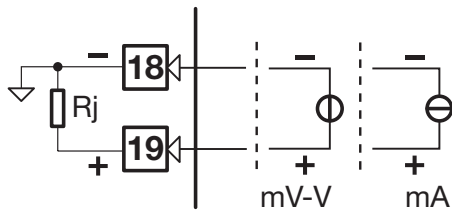


Not available with frequency input

#### B- From Potentiometer

for the measure of the position of the motor or the valve


100% from 100Ω to 10KΩ max

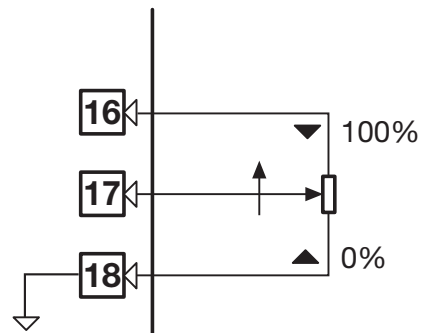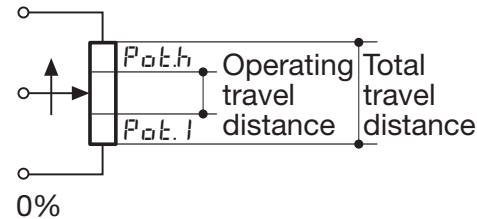

### 3.3.5 DIGITAL INPUT



- The input is active when the logic state is ON, corresponding to the contact closed
- The input is inactive when the logic state is OFF, corresponding to the contact open

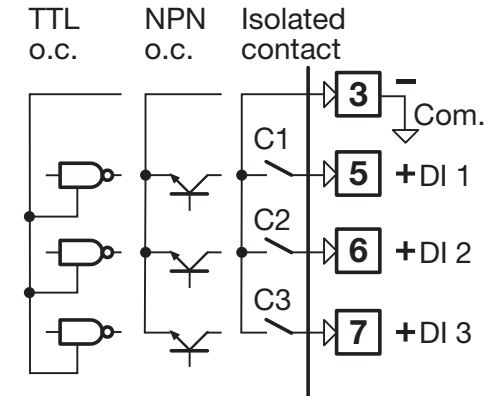



**3.3.6 OP1 - OP2 - OP3 - OP4 - OP5 - OP6 OUTPUTS (OPTION)**

The functionality associated to each of the OP1, OP2, OP4, OP5 and OP6 output is defined during the configuration of the instrument.


The suggested combinations are:

		Control outputs		Alarms				Retransmission	
		Main (Heat)	Secondary (Cool)	AL1	AL2	AL3	AL4	PV / SP	
<b>A</b>	Single output	OP1			OP2	OP3	OP4	OP5	OP6
<b>B</b>		OP5		OP1	OP2	OP3	OP4		OP6
<b>D</b>	Heat/cool	OP1	OP2			OP3	OP4	OP5	OP6
<b>E</b>		OP1	OP5		OP2	OP3	OP4		OP6
<b>F</b>		OP5	OP2	OP1		OP3	OP4		OP6
<b>G</b>		OP5	OP6		OP2	OP3	OP4		
<b>L</b>	Valve drive	OP1 ▲	OP2 ▼			OP3	OP4	OP5	OP6



where:

<b>OP1 - OP2</b>	Relay or Triac output
<b>OP3 - OP4</b>	Relay outputs
<b>OP5 - OP6</b>	Analogue/ logic control or retransmission outputs


**3.3.6-A SINGLE ACTION RELAY (TRIAC) CONTROL OUTPUT**

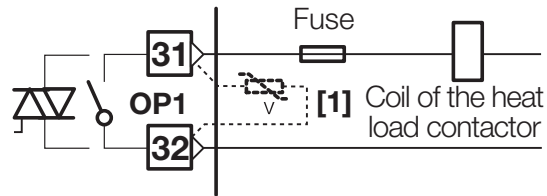



**3.3.6-C DOUBLE ACTION RELAY (TRIAC)/RELAY (TRIAC) CONTROL OUTPUT**

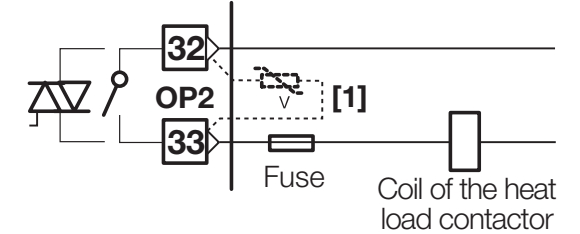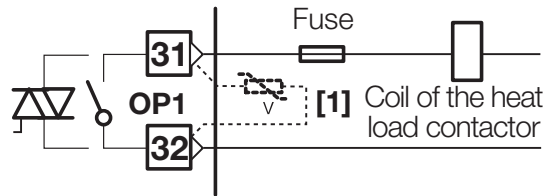


**3.3.6-B1 SINGLE ACTION LOGIC CONTROL OUTPUT**

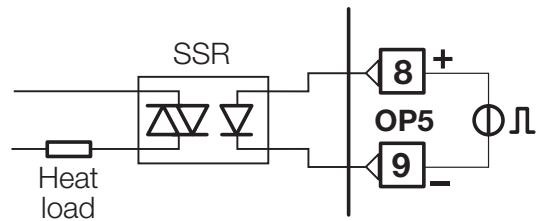



**3.3.6-D1 DOUBLE ACTION RELAY (TRIAC)/LOGIC CONTROL OUTPUT**

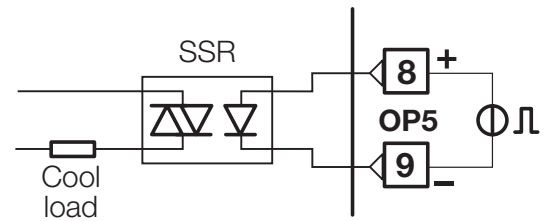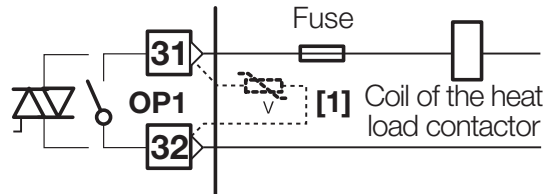



**3.3.6-B2 SINGLE ACTION ANALOGUE OUTPUT**

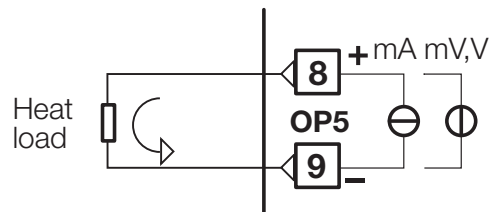



**3.3.6-D2 HEAT / COOL CONTROL OUTPUT RELAY (TRIAC)/ANALOGUE**

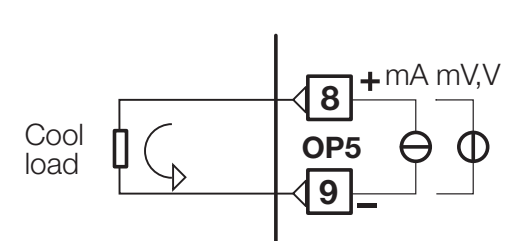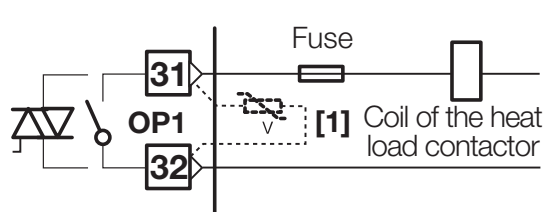



**3.3.6-E1 DOUBLE ACTION CONTROL OUTPUT  
LOGIC / RELAY (TRIAC)**

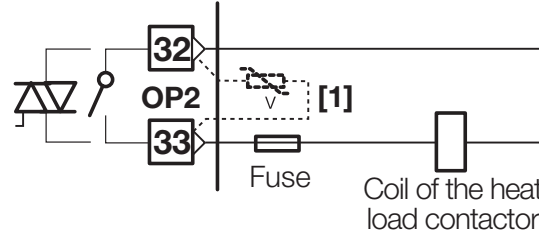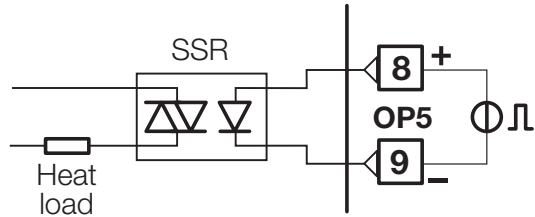

**3.3.6-E2 HEAT / COOL CONTROL OUTPUT  
ANALOGUE/RELAY(TRIAC)**

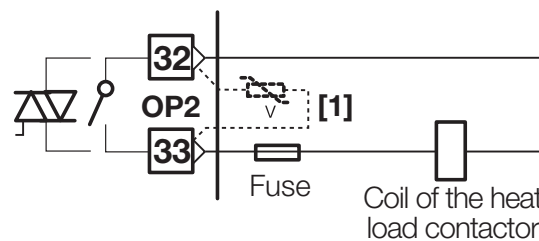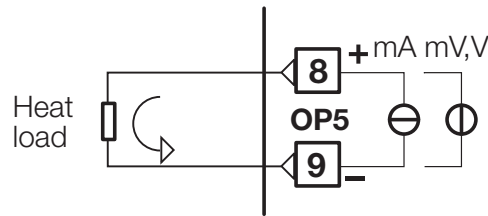

**3.3.6-F1 DOUBLE ACTION CONTROL OUTPUT  
LOGIC / LOGIC**

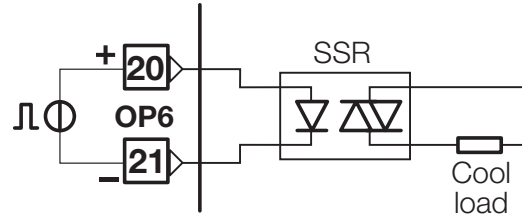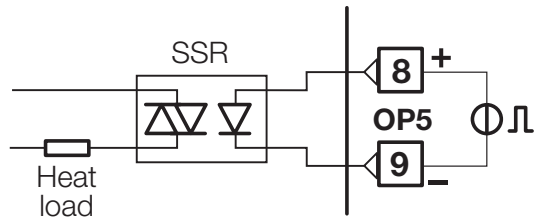

Notes for pages 17 - 18 - 19

**OP1 - OP2 Relay output**

- SPST Relay N.O., 2A/250 V~ for resistive load,
- Fuse 2A~ T

**OP1 - OP2 Triac output**

- N.O. contact for resistive load of up to 1A/250 V~ max
- Fuse 1A ~ T

**Isolated logic outputs OP5-OP6**

- 0...24V-, ±20%, 30 mA max

**Isolated analogue outputs OP5-OP6**

- 0/4...20mA, 750Ω / 15V max
- 0/1...5V, 0...10V, 500Ω / 20mA max

[1] Varistor for inductive load 24V~ only


**3.3.6-F2 DOUBLE ACTION CONTROL OUTPUT  
LOGIC / ANALOGUE**



**3.3.6-F3 DOUBLE ACTION CONTROL OUTPUT  
ANALOGUE / LOGIC**




**3.3.6-F4 DOUBLE ACTION CONTROL OUTPUT  
ANALOGUE / ANALOGUE**

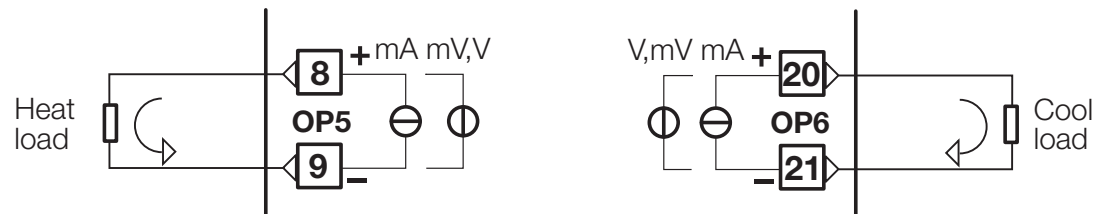


**3.3.6-G MOTOR POSITIONER OUTPUT  
RELAY (TRIAC) / RELAY (TRIAC)**


Valve drive PID  
**without** potentiometer  
 3 pole output with NO contacts  
 (open, stop, close)

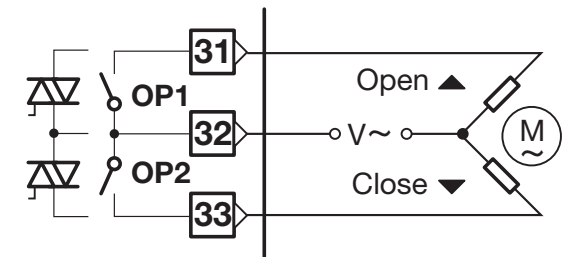


### 3 - Electrical Connections

#### 3.3.7 OP1-2-3-4 ALARM OUTPUTS

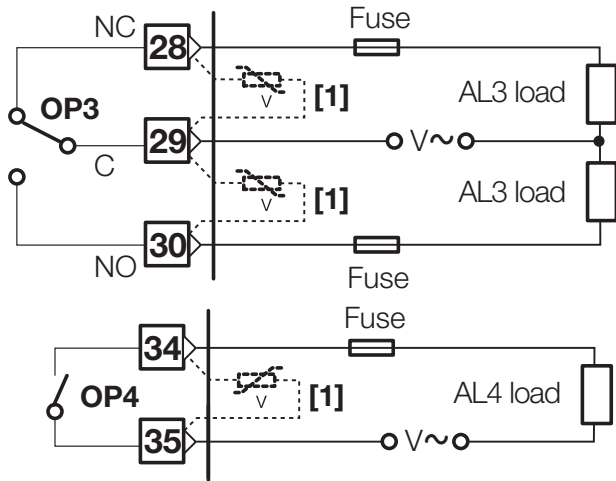


 The relay/triac output OP1, OP2, can be used as alarm outputs only if they are not used as control outputs.

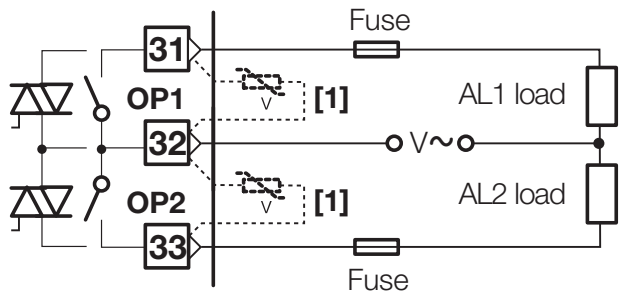

[1] Varistor for inductive load 24V~ only

20


#### 3.3.8 OP5 AND OP6 (OPTION) ANALOGUE CONTROL OUTPUTS

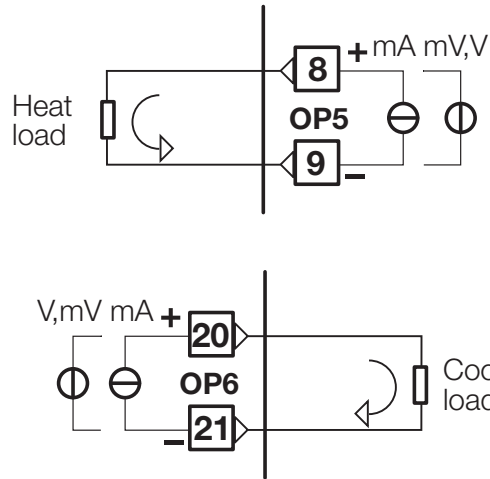


OP5 and OP6 outputs can be configured for control action or PV / SP retransmission


- Galvanic isolation 500V~ / 1 min
- 0/4...20mA, 750Ω / 15V- max
- 0/1...5V, 0...10V, 500Ω / 20mA max

#### 3.3.9 SERIAL COMMUNICATIONS (OPTION)

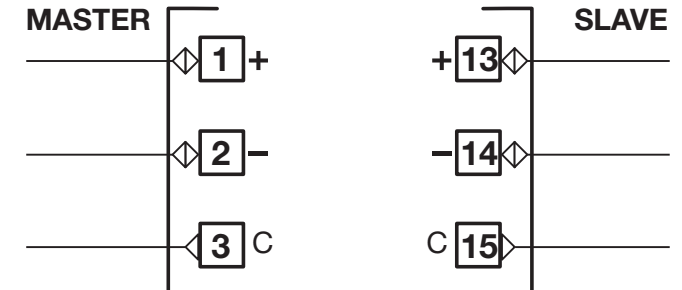


- Galvanic isolation 500V~ / 1 min
- Compliance to the EIA RS485 standard for Modbus/Jbus
- Termination setting dip switches

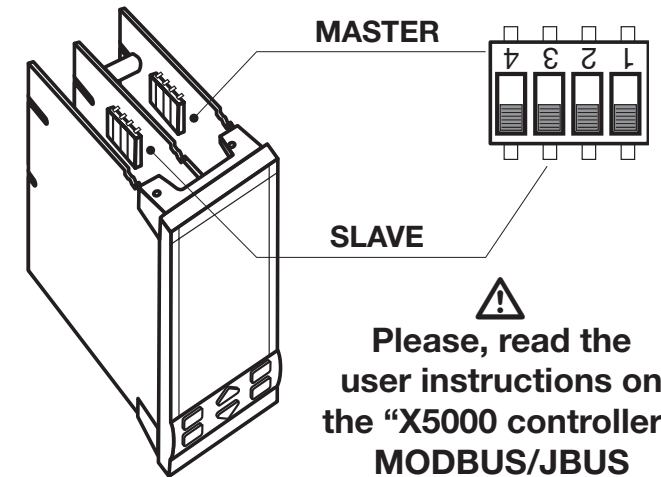


 Please, read the user instructions on the "X5000 controllers MODBUS/JBUS protocol"



### 3.3.10 PROFIBUS DP (OPTION)

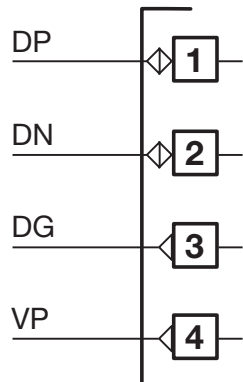


Termination resistors 220Ω and 390Ω (1/4 W, ±5%) for external mounting on the initial and ending PROFIBUS stations only.

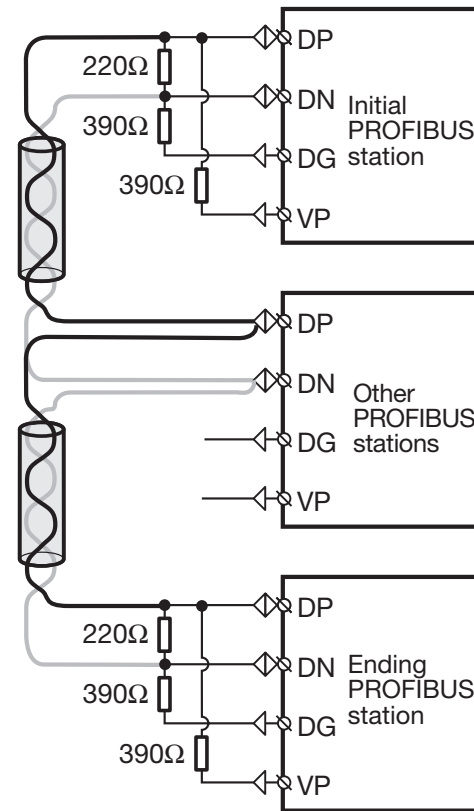

- Galvanic isolation 500 V~ / 1 min
- Compliance to the EIA RS485 standard for PROFIBUS DP
- Connecting cable: twisted pair cable as per PROFIBUS spec.s (e.g. Belden B3079A)
- Max lenght: 100 m at 12 Mb/sec

To make the connections easier, a D-Sub type (9 poles) connector: model **AP-ADP-PRESA-DSUB/9P** Must be used with a 9PIN male ERNI type part no. 103648 or similar connector.

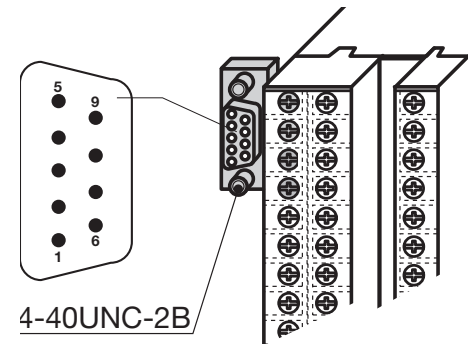

X5	D-SUB 9 poles	Signal	Description according to PROFIBUS specifications
1	3	RxD/TxD-P (DP)	Receive data/transmission data plus
2	8	RxD/TxD-N (DN)	Receive data/transmission data negative
3	5	DGND (DG)	Data transmission potential (ground to 5V)
4	6	VP (VP)	Supply voltage of the terminating resistance-P, (P5V)

Detailed information concerning wiring and cables can be found on the PROFIBUS Product Guide or on Internet at: <http://www.profibus.com/online/list>

# 4 OPERATION

## 4.1.1 KEY FUNCTIONS AND DISPLAYS IN OPERATOR MODE

### Digital input status LEDs (yellows)

- I 1 - DI1 active
- I 2 - DI2 active
- I 3 - DI3 active



### Status LEDs (greens)

- SCI** Communications running
- AT** Tuning running
- MAN** Manual operating mode
- RUN** Timer/Program running
- HLD** Program Waiting
- REM** Remote Setpoint active
- S1** First stored Setpoint active
- S2** Second stored Setpoint active
- S3** Third stored Setpoint active

### Alarm status LEDs (reds)

- 1 AL1 ON
- 2 AL2 ON
- 3 AL3 ON
- 4 AL4 ON

### Auto/Man

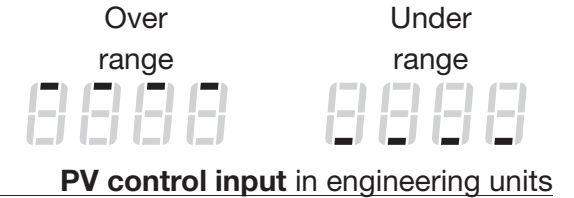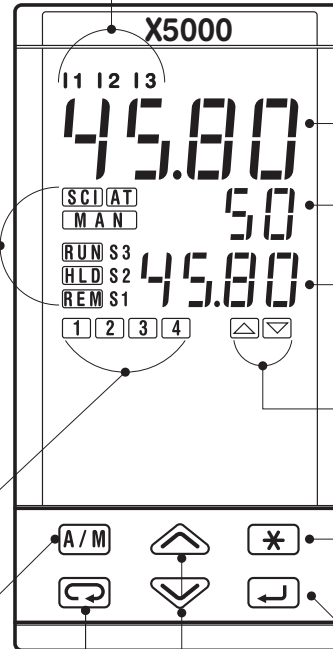

**% Control output**  
or **Program status** (see page 64)  
**SP operating Setpoint**  
(Local/Remote or Stored)

**Control output LEDs (red)**  
▲ OP1/OP4 ON - ▼ OP2/OP4 OFF

**Run/stop Timer or a program**

**Entry key for selection and value setting confirmation**

**Setpoint setting**

**Menu access**

**4.1.2 KEYS FUNCTIONS AND DISPLAY IN PROGRAMMING MODE**




The parameter setting procedure has a timeout. If no keys are pressed for, at least, 30 seconds, the controller switches back, automatically, to the operator mode.

After having selected the parameter or the code, press and to display or modify the value.

The value is entered when the next parameter is selected, by pressing the key.

Pressing the back key or after 30 seconds from the last modification, the value doesn't change.

From every parameter, pressing the key, the controller switches to the operator mode.

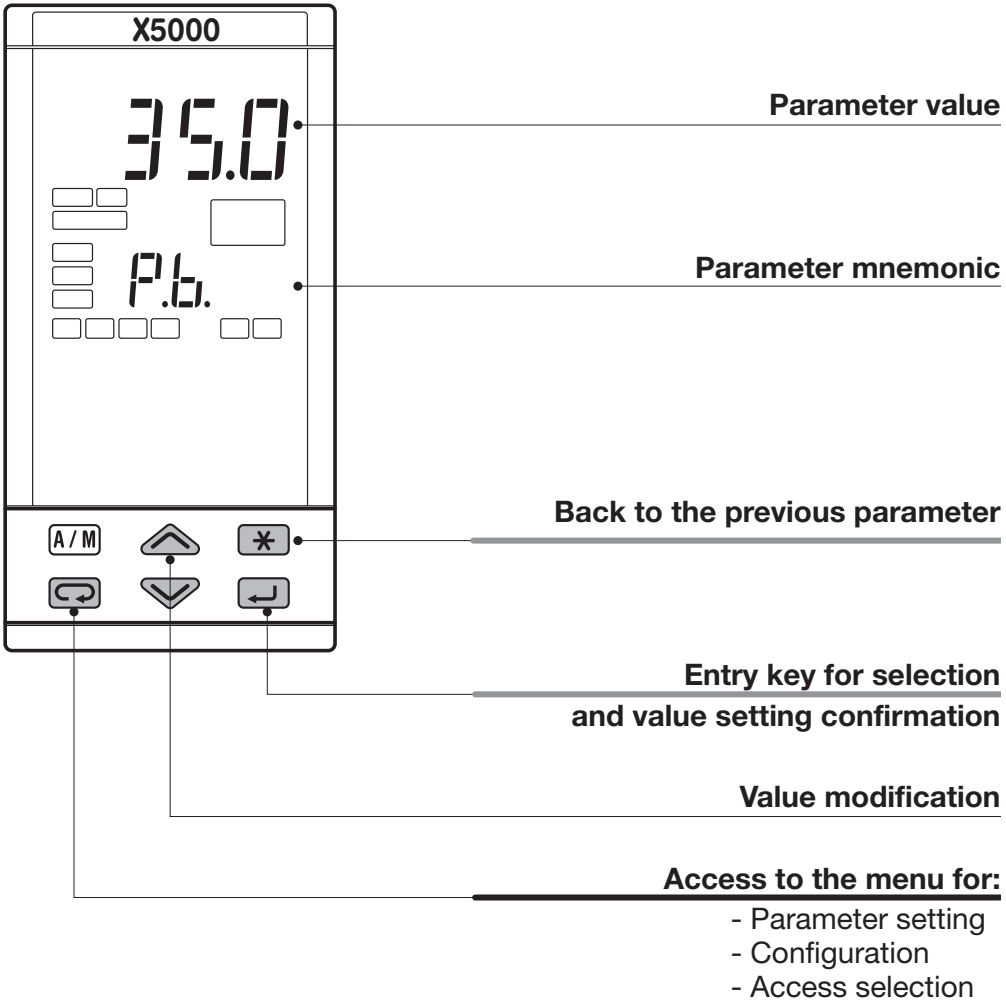







## 4.2 PARAMETER SETTING

### 4.2.1 NUMERIC ENTRY

(i.e. the modification of the Setpoint value from 275.0 to 240.0)


Press  or  momentarily to change the value of 1 unit every push

Continued pressing of  or  changes the value, at rate that doubles every second. Releasing the button the rate of change decreases.

In any case the change of the value stops when it has reached the max/min limit set for the parameter.



**In case of Setpoint modification:** press  or  once to display the local Setpoint instead of working Setpoint.

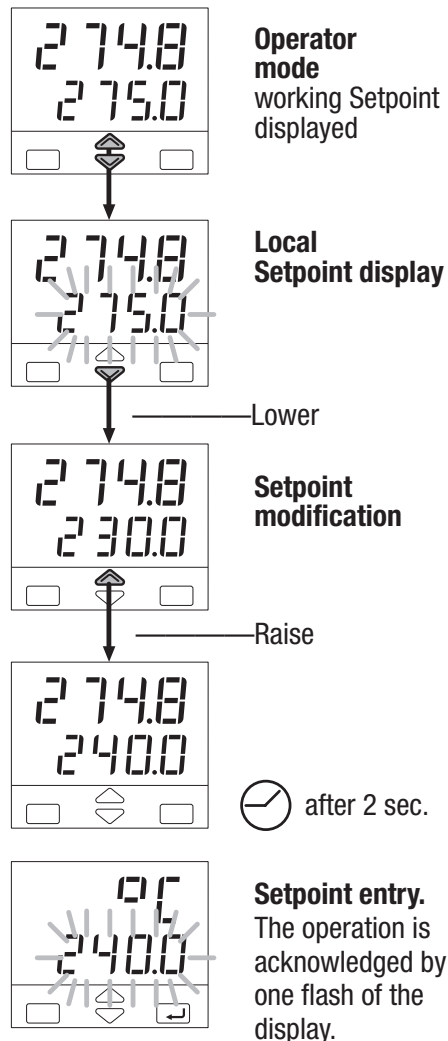

**To evidence this change the display flashes once. Then the Setpoint can be modified**




### 4.2.2 MNEMONIC CODES SETTING


(e.g. configuration see page 26)

Press the  or  to display the next or previous mnemonic for the selected parameter.


Continued pressing of  or  will display further mnemonics at a rate of one mnemonic every 0.5 sec. The mnemonic displayed at the time the next parameter is selected, is the one stored in the parameter.

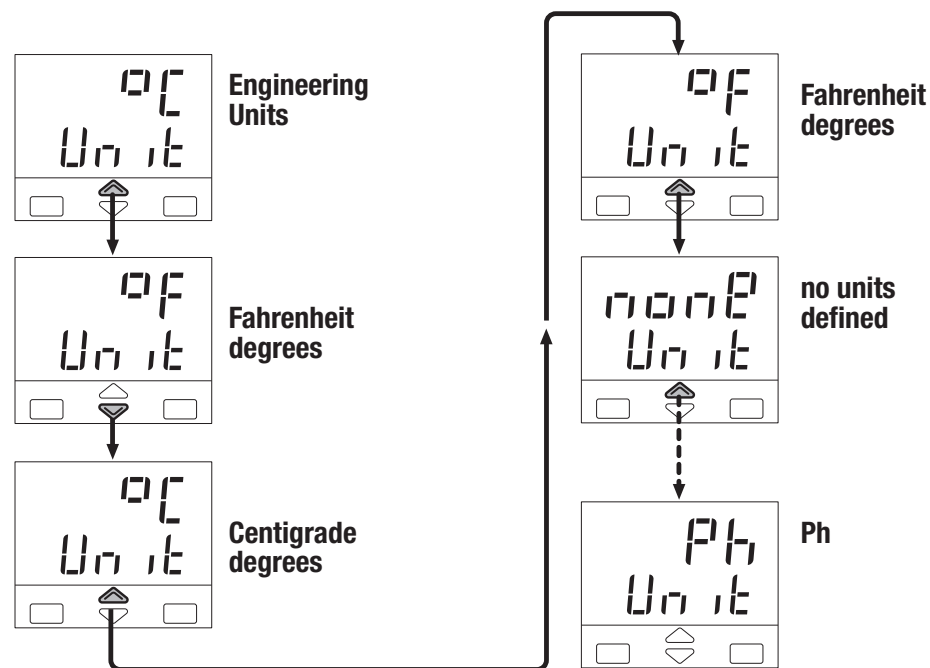

4.3 CONFIGURATION PROCEDURE

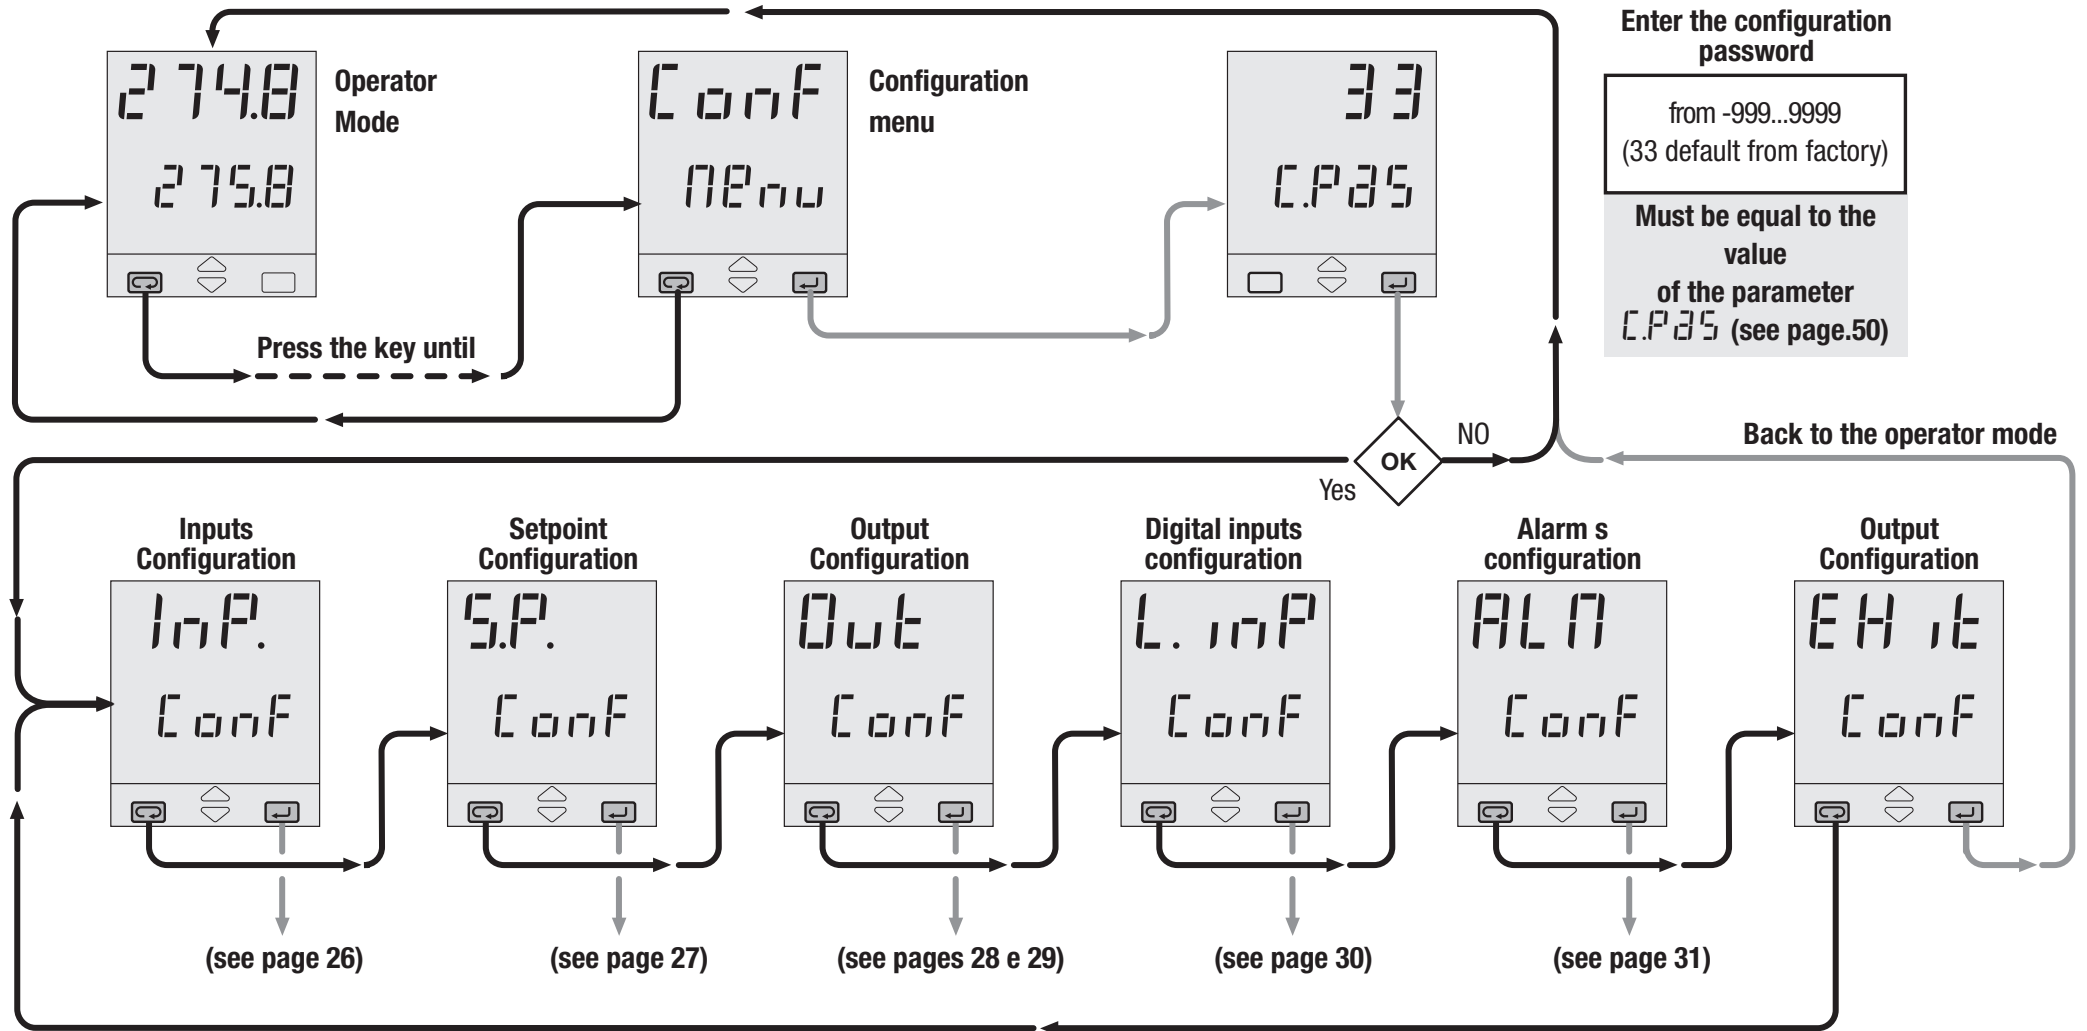

### 4.3.1 INPUTS CONFIGURATION

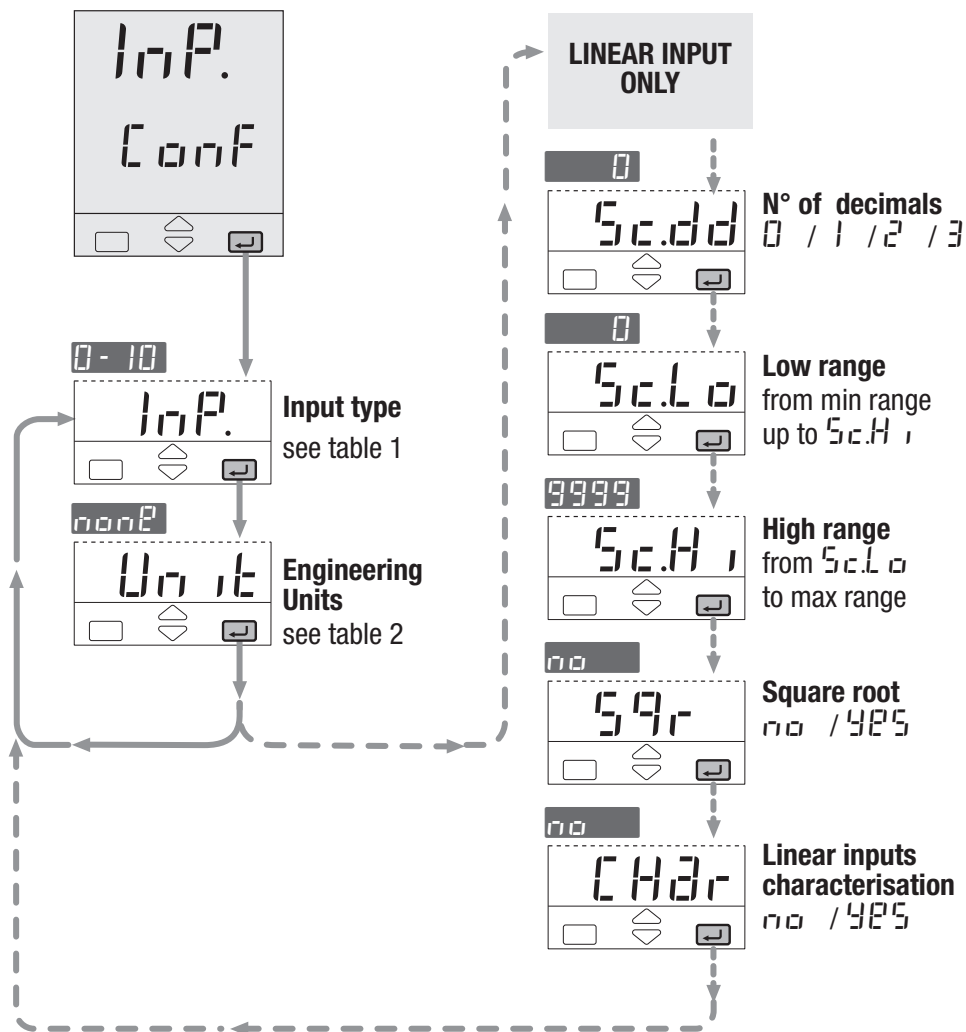


**Tab. 1 Input type**

Value	Description	InP.
t.c. d	0...600°C	32...1112°F
t.c. e	0...1200°C	32...2192°F
t.c. l	0...600°C	32...1112°F
t.c. s	0...1600°C	32...2912°F
t.c. r	0...1600°C	32...2912°F
t.c. t	-200...400°C	-328...752°F
t.c. b	0...1800°C	32...3272°F
t.c. n	0...1200°C	32...2192°F
t.c.n.1	0...1100°C	32...2012°F
t.c.U3	0...2000°C	32...3632°F
t.c.U5	0...2000°C	32...3632°F
t.c. E	0...600°C	32...1112°F
c.u5t	Custom range on request	
r.t.d.1	-200...600°C	-328...1112°F
r.t.d.2	-99.9...300.0°C	-99.9...572.0°F
d.P.L.t	-50.0...50.0°C	-58.0...122.0°F
n.50	0...50 mV	Engineering units
n.300	0...300 mV	
0-5	0...5 Volt	
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	Frequency (option)
4-20	4...20 mA	
F.r.9.L	0...2.000 Hz	
F.r.9.H	0...20.000 Hz	

**Tab. 2 Engineering units**

Value	Description	Unit
none	None	
°C	Centigrade degrees	
°F	Fahrenheit degrees	
mA	mA	
mV	mV	
V	Volt	
bar	bar	
PSI	PSI	
Rh	Rh	
Ph	Ph	
Hz	Hertz	

## 4.3.2 SETPOINT CONFIGURATION

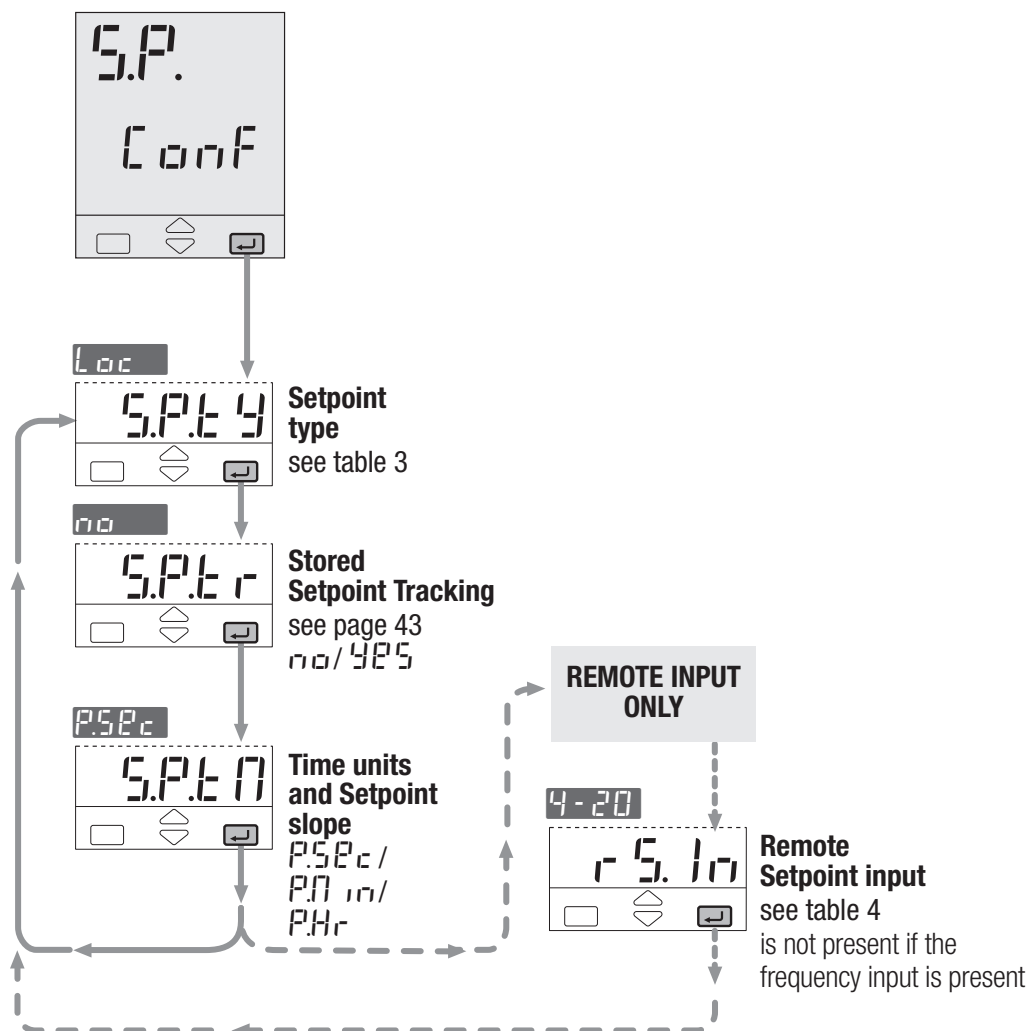
**Tab. 3 Setpoint type**

Value	Description	S.P.tY
Loc	Local only	
rEN	Remote only	
L-r	Local/remote only	
Loc.t	Local - trim	
rEN.t	Remote - trim	
Prog	Programmed (option)	

**Tab. 4 Rem. Setpoint** **r S. In**

Value	Description
0-5	0...5 Volt
1-5	1...5 Volt
0-10	0...10 Volt
0-20	0...20 mA
4-20	4...20 mA

### 4.3.3 OUTPUT CONFIGURATION

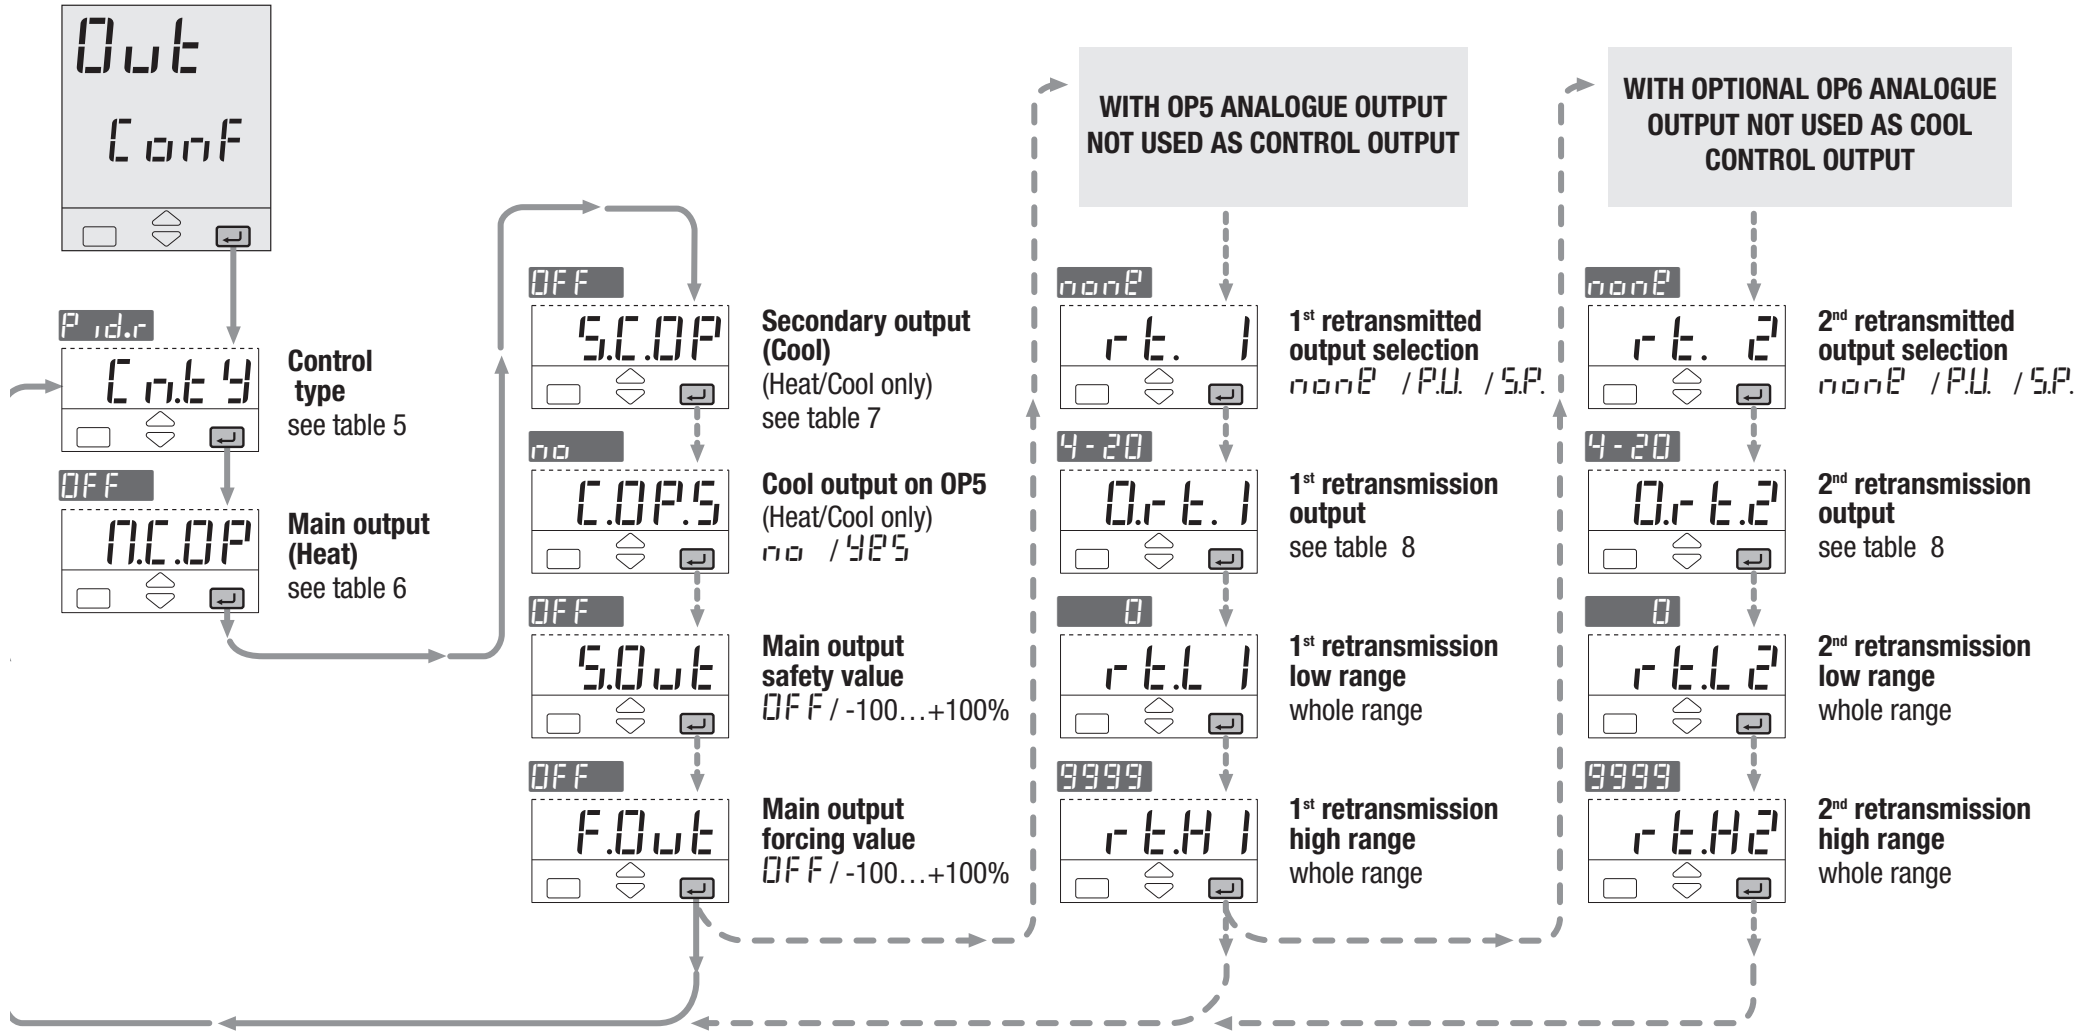

**Tab. 5 Control mode**

Value	Description	Control
OFF	Reverse action	On - Off
DIR	Direct action	
PID	Direct action	P.I.D.
PIR	Reverse action	
UDIR	Direct action	Modul. valves
URPI	Reverse action	
HCLN	Linear	Heat/ Cool
HCOL	Oil charac.	
HCH2	Water charac.	

**Tab. 6 Main Output (Heat)**

Value	Description	Control
OFF	Not used	None
OP1	Relay / Triac	Digital signal
L09	Digital	
0-5	0...5 Volt	DC signal
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

**Tab. 7 Secondary output (Cool)**

Value	Description	Control
OFF	Not used	None
OP2	Relay / Triac	Digital signal
L09	Digital	
0-5	0...5 Volt	DC signal
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

**Tab. 8 Retransmission outputs**

Value	Description	Control
OFF	Not used	None
OP5	Relay / Triac	Digital signal
L09	Digital	
0-5	0...5 Volt	DC signal
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

**RETRANSMISSION**

When OP5 and OP6 outputs are not configured as control output, they can retransmit the PV or SP linearised value.

**Retransmitted signal**

**Retransmitted signal**  
none PV / SP

**Output range**

**Output range**  
0-5 / 1-5 / 0-10  
0-20 / 4-20

The following parameters define the low and high range.


**Retransmission low range**

**Retransmission low range**

**Retransmission high range**


Example:

- T/C S, range 0...1600°C
- Output range, 4...20 mA
- Retransmitted signal PV on 800...1200°C range

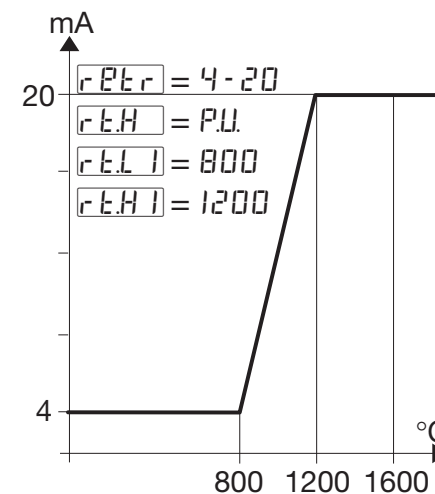

With  $rL1$  greater than  $rH1$  it is possible to obtain a reverse scale.


### 4.3.4 DIGITAL INPUTS CONFIGURATION

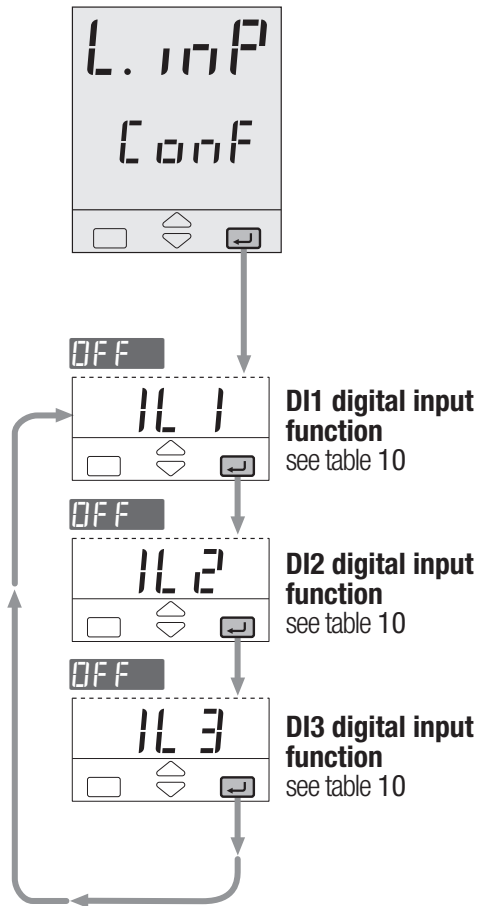


**Tab. 10 Digital Inputs functions**

Value	Description	
OFF	Not used	IL 1
L-r	Local/Remote	IL 2
Auto/Man		IL 3
S.P. 1	1 <sup>st</sup> stored Setpoint	
S.P. 2	2 <sup>nd</sup> stored Setpoint	
S.P. 3	3 <sup>rd</sup> stored Setpoint	
EEPb.1	Keyboard lock	
SLd.1	S.P. slope disable	
HPU	Measure hold	
F.OuT	Output forcing mode	
Pr 9.1	1 <sup>st</sup> program	up to 3
Pr 9.2	2 <sup>nd</sup> program	
Pr 9.3	3 <sup>rd</sup> program	
Pr 9.4	4 <sup>th</sup> program	
r.-H.	Program Run/Stop	
rSt	Program reset	
blck	Reset blocking	

### 4.3.5 ALARM S CONFIGURATION

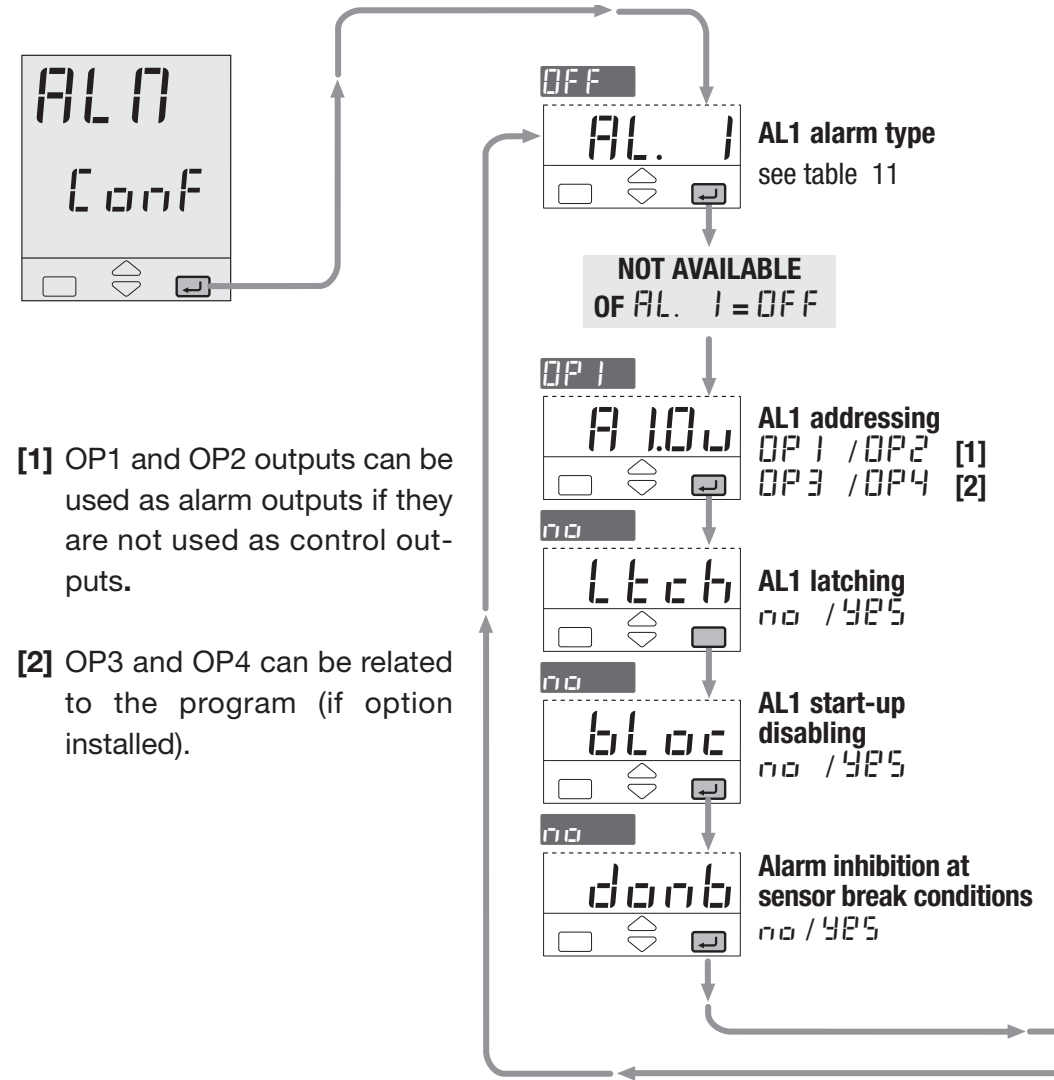

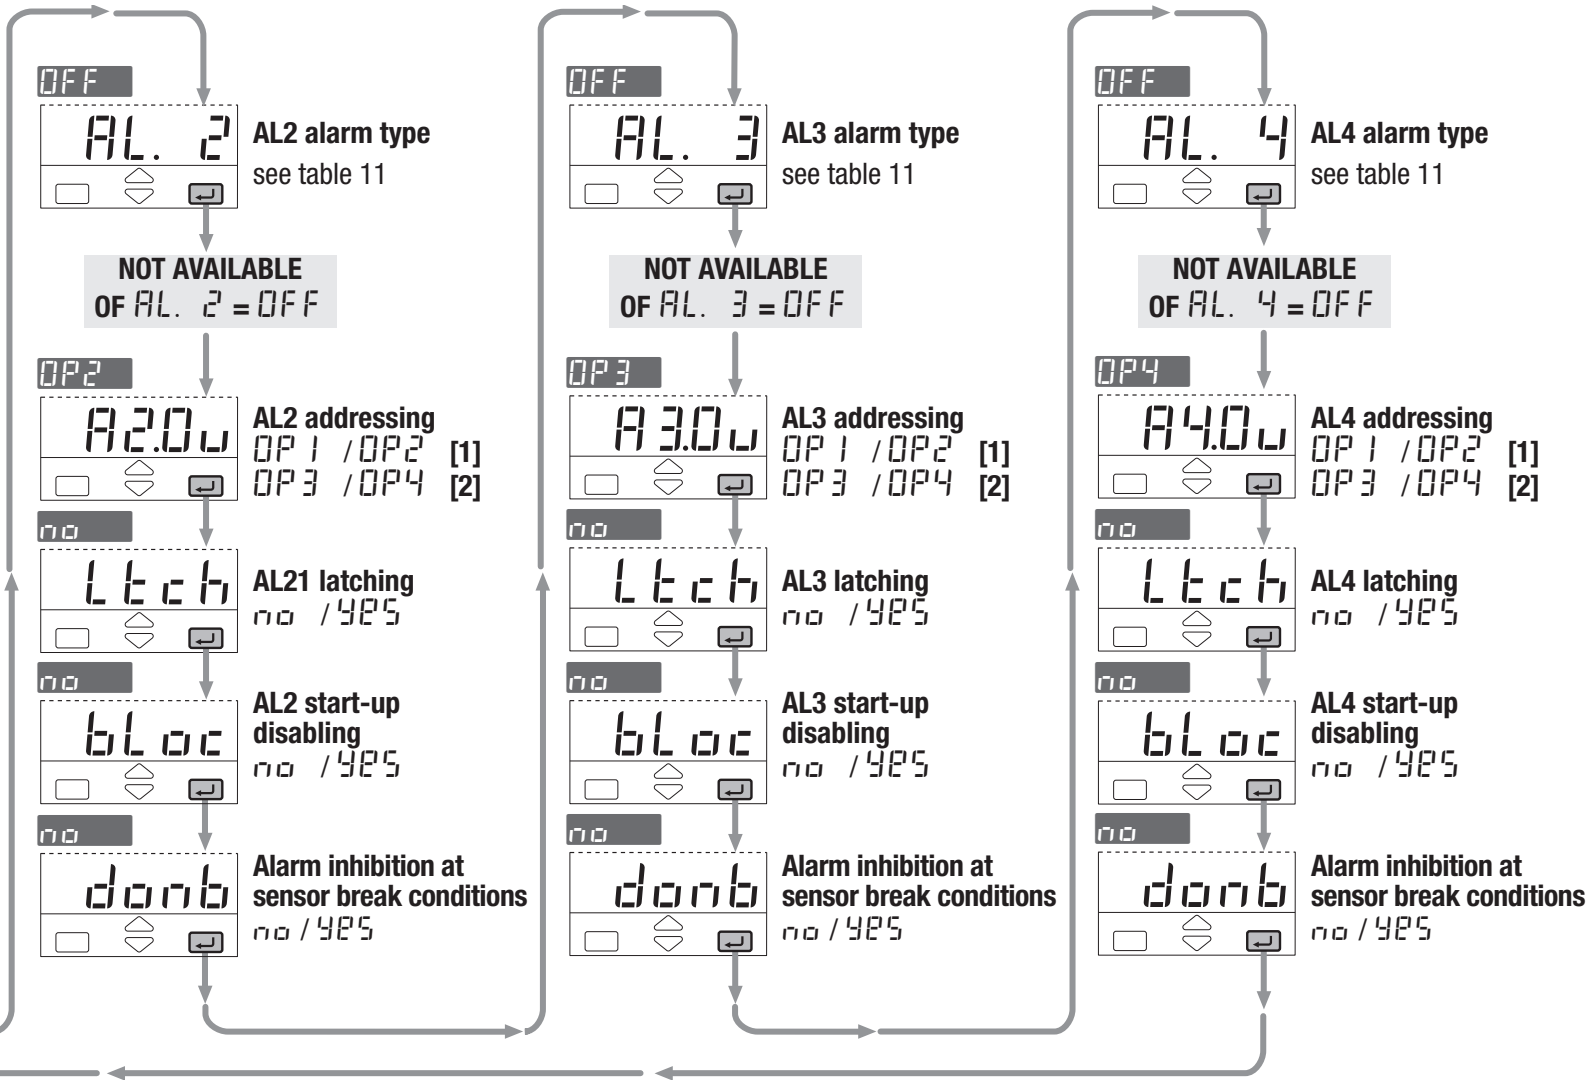

**Tab. 11 Alarm type**

Value	Description	
AL 1		
AL 2		
AL 3		
AL 4		
OFF	Not used or used by the programme (AL3/AL4)	
F5.H	High active	Absolute
F5.L	Low active	
dEUL	High active	Deviation
dEUL	Low active	
band	Out active	Band
Lbd	Loop break alarm (AL1 only)	



### 4.3.6 AL1, AL2, AL3, AL4 ALARMS CONFIGURATION

It is possible to configure up to 4 alarms: AL1, AL2, AL3, AL4 (see page 31) selecting, for each of them:

- A** the type and the operating condition of the alarm (table 11 page 31)
- B** the functionality of the alarm acknowledge (latching) **Ltch**
- C** the start-up disabling (blocking) **blck**
- D** the physical output of the alarm **OP1** **OP2** **OP3** **OP4**


The outputs can be used for alarms if they are not used as control outputs (see par. 3.3.7 page 20)

It is possible to route up to 4 alarm to a single output (OR of the alarms).

#### Alarm occurrence display

This function can be enabled by the configuration software. (please read the user instruction on the "X5000 LINE MODBUS /JBUS PROTOCOL", supplied separately)


The type of alarm is presented flashing, on the front panel in alternation with the PV value.

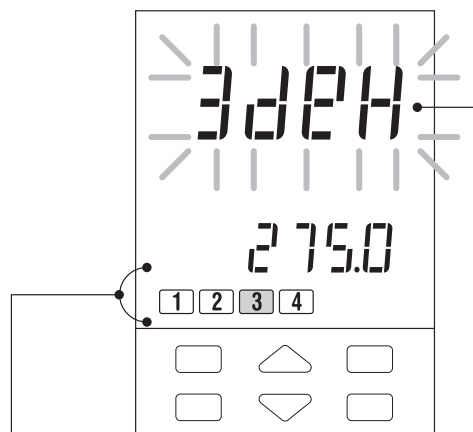


The red led of the activated alarm output is on.

### [A] OPERATING CONDITIONS


#### Absolute alarm

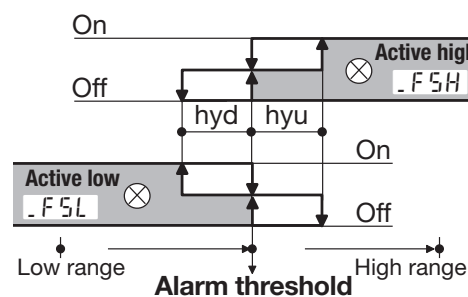

#### Deviation alarm

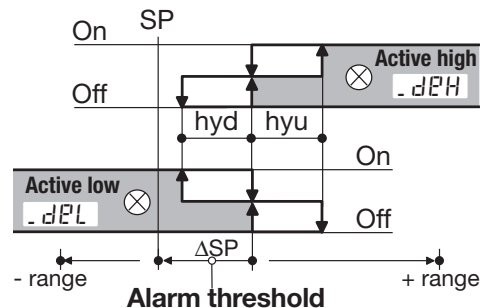


#### Band alarm

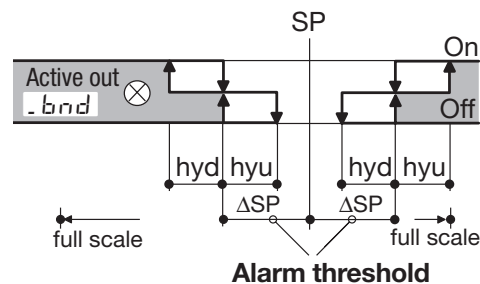

### [D] LOOP BREAK ALARM LBA

When the controller connection to the sensor is discontinued or other faults are detected in the control loop, the AL1 alarm becomes active, after a predefined time of 1 to 9999 sec., from the detection of the failure. (see page 22)  
The alarm state ceases when the fault condition is no longer present.

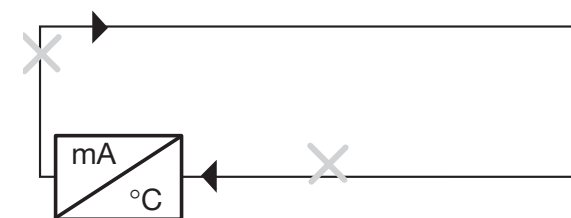

**⚠ In case of ON-OFF control, the LBA alarm is not active.**




**[B] LATCHING**

The alarm, once occurred, is presented on the display until the time of acknowledge. The acknowledge operation consists in pressing any key.







After this operation, the alarm leaves the alarm state only when the alarm condition is no longer present.

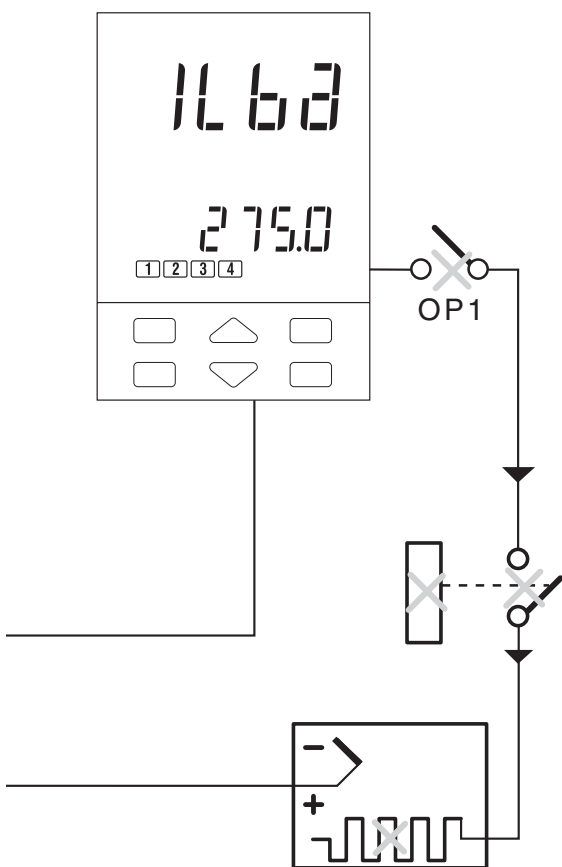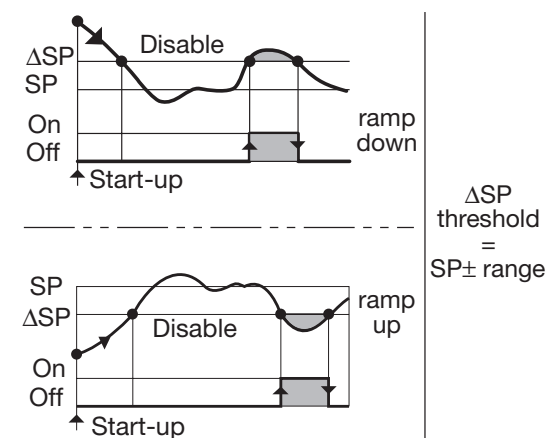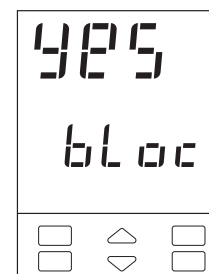**[C] BLOCKING**

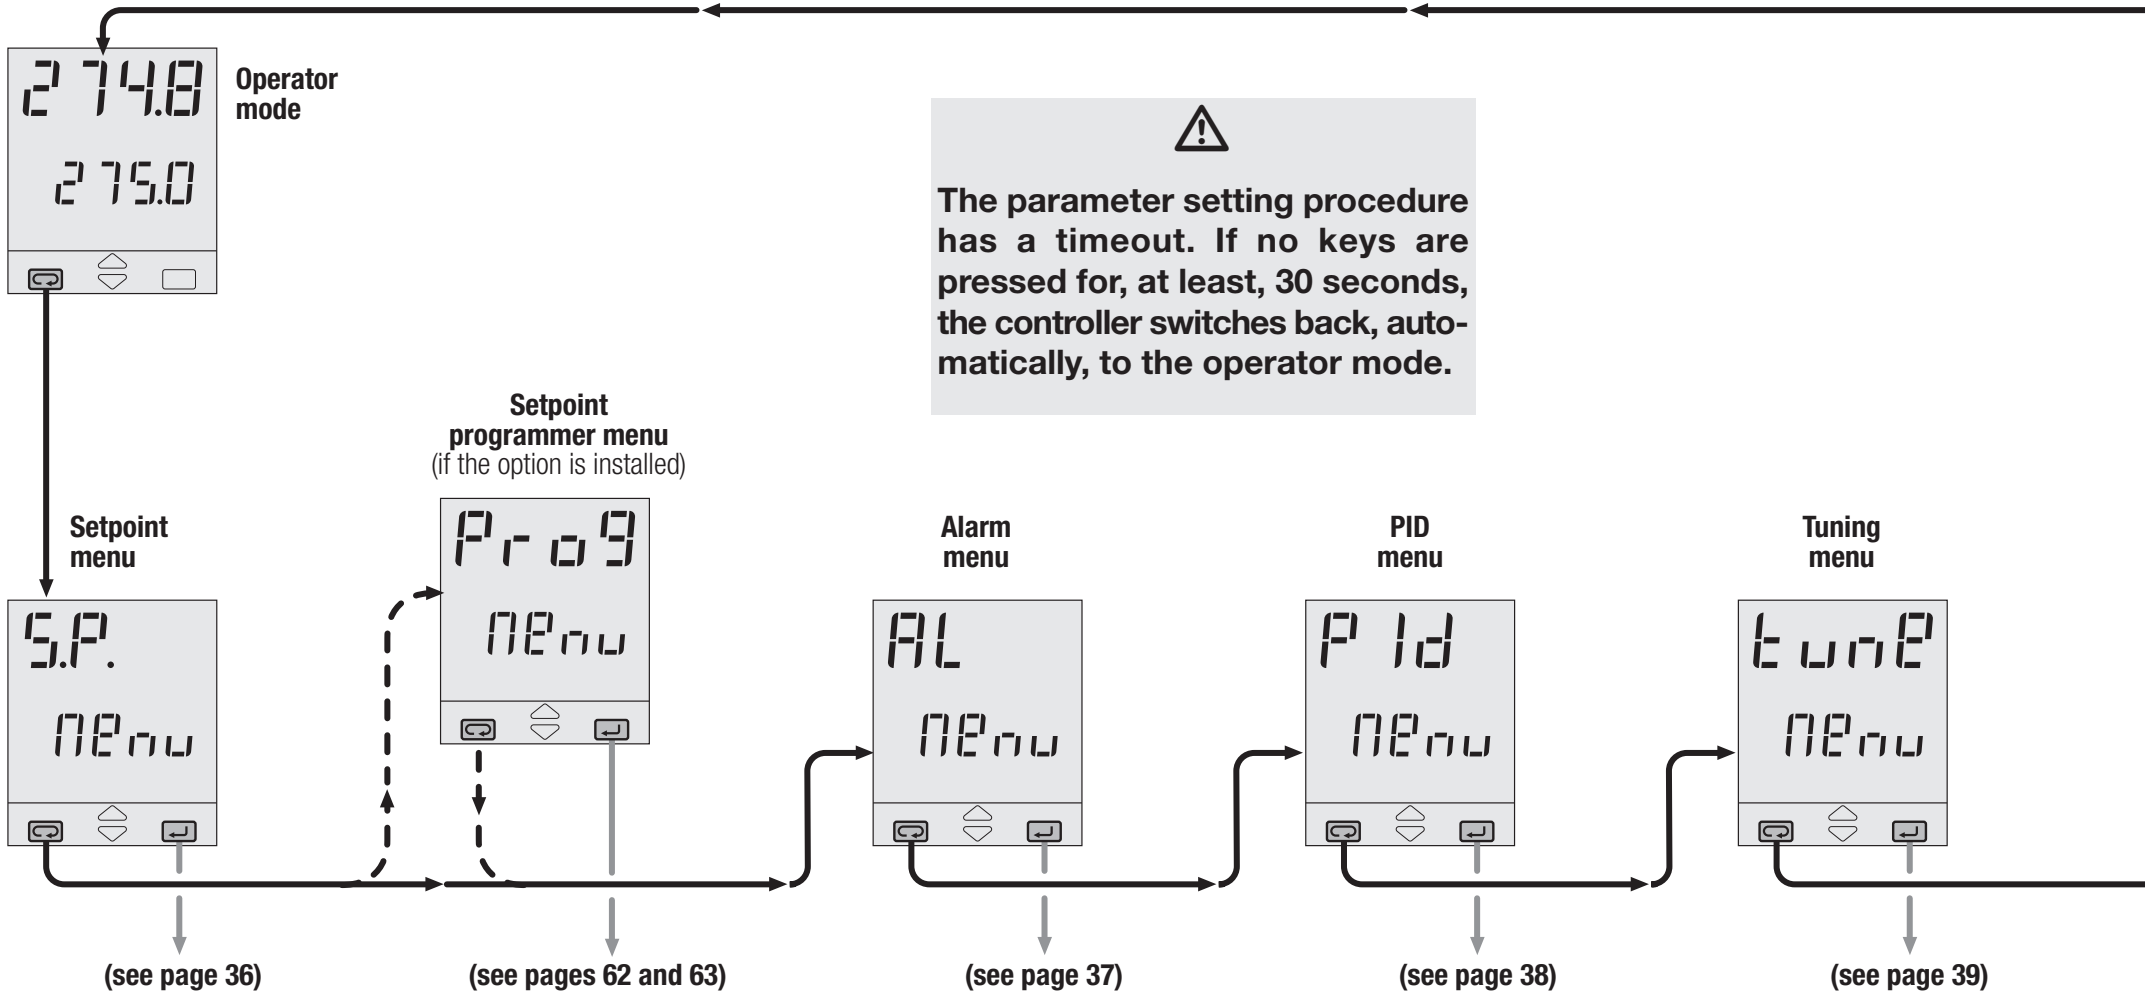



### 4.4 PARAMETERISATION - MAIN MENU




After having selected the parameter or the code, press  or  to modify the value (see page 24) The value is entered when the next parameter is selected, by pressing the  key.

Pressing  go back to the Operator mode

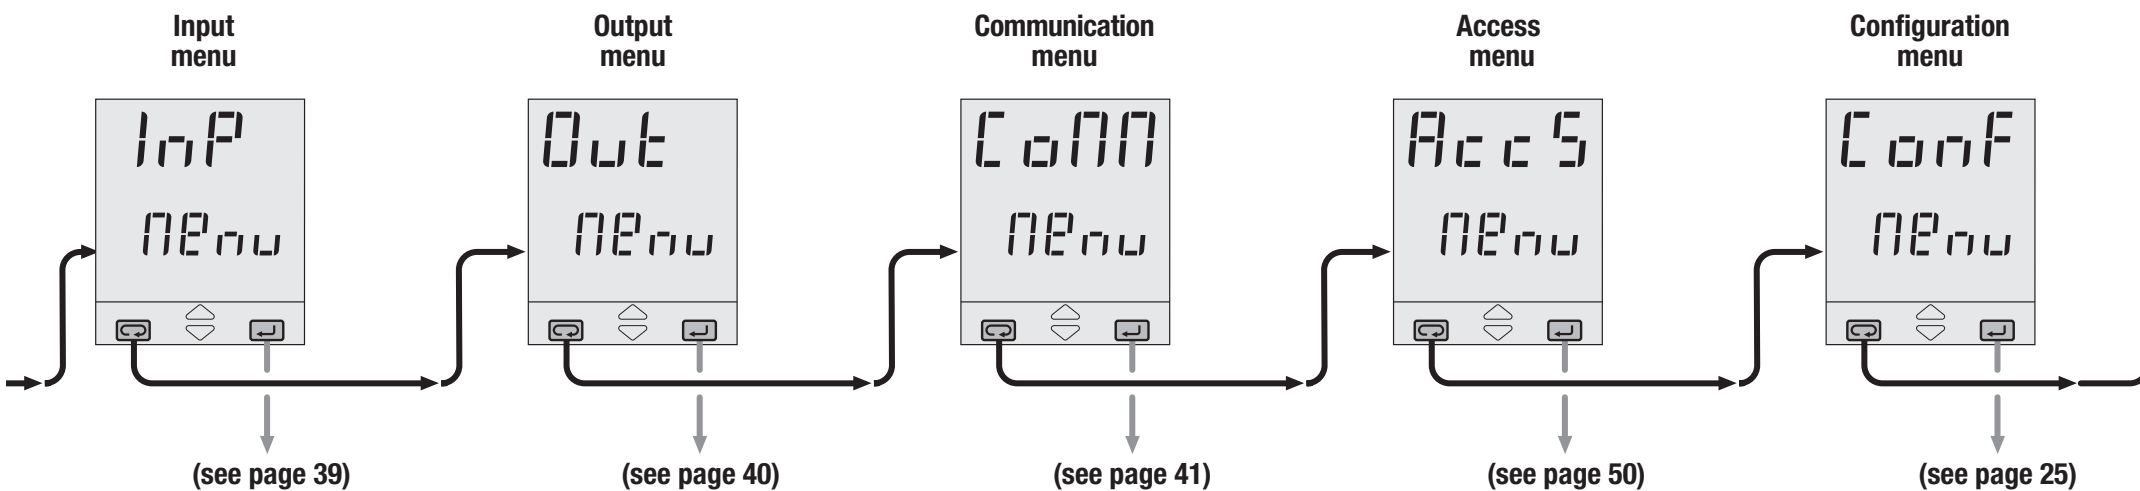

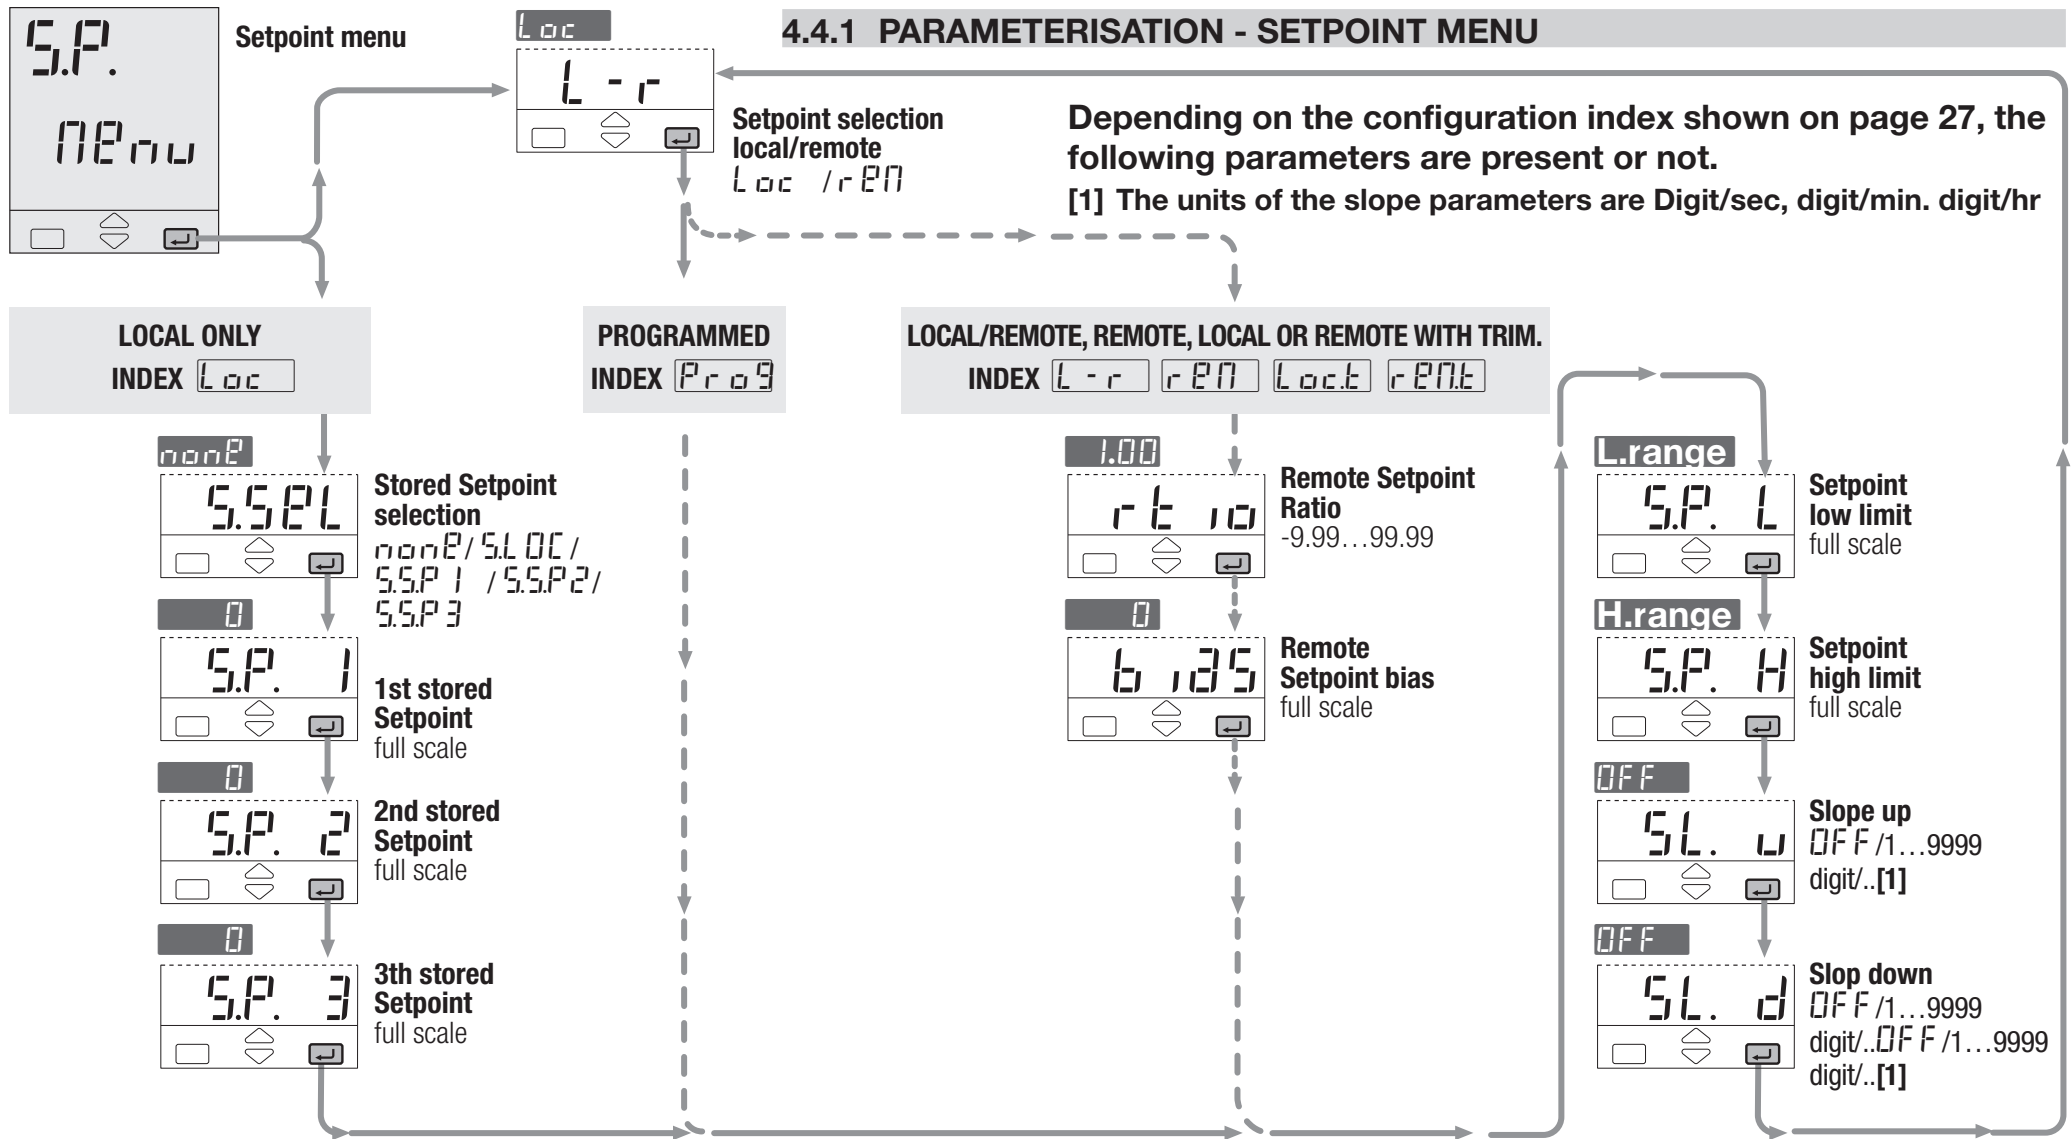


## 4.4.2 PARAMETERISATION - ALARMS MENU

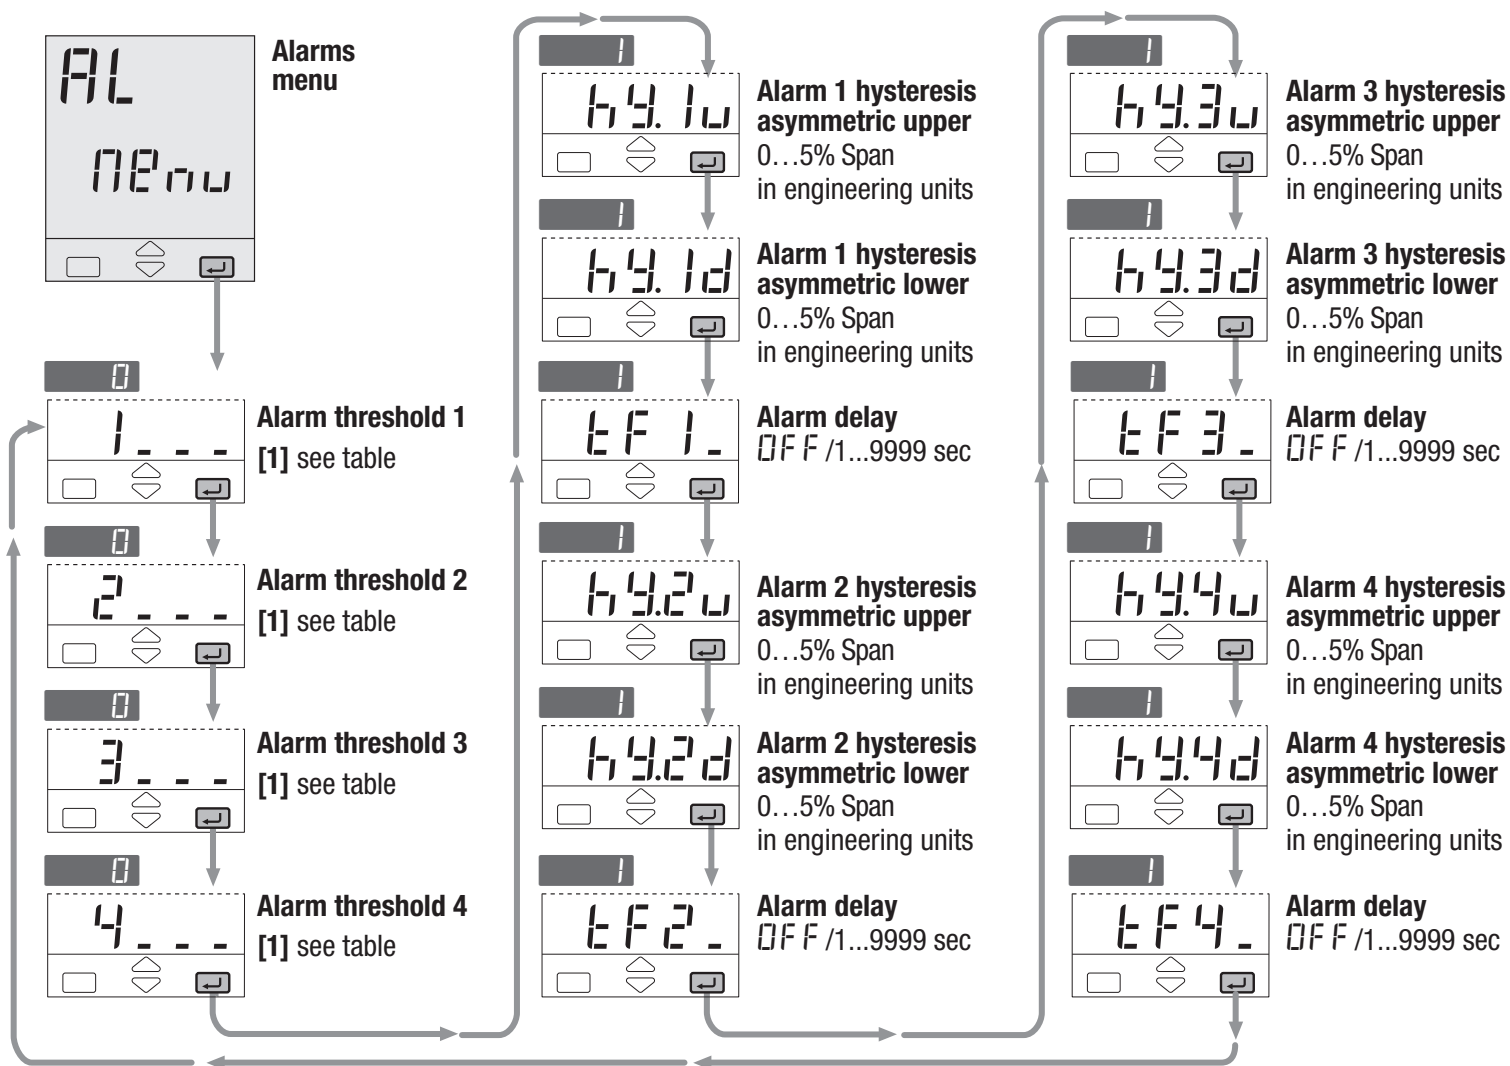


[1] A code, specifying the n° and the alarm type that has been configured (see page 31), is displayed. At this point, the user must enter the threshold value, according to the following table.

Type and value	Mode	N° and Param.
<b>Absolute</b> full scale	Active high	-F5.H
	Active low	-F5.L
<b>Deviation</b> full scale	Active high	-d2.H
	Active low	-d2.L
<b>Band</b> full scale	Active out of band	-brd
<b>L.B.A.</b> 1...9999 sec	Active high	-Lb2


4.4.3 PARAMETERISATION - PID MENU (not shown for ON-OFF control action)

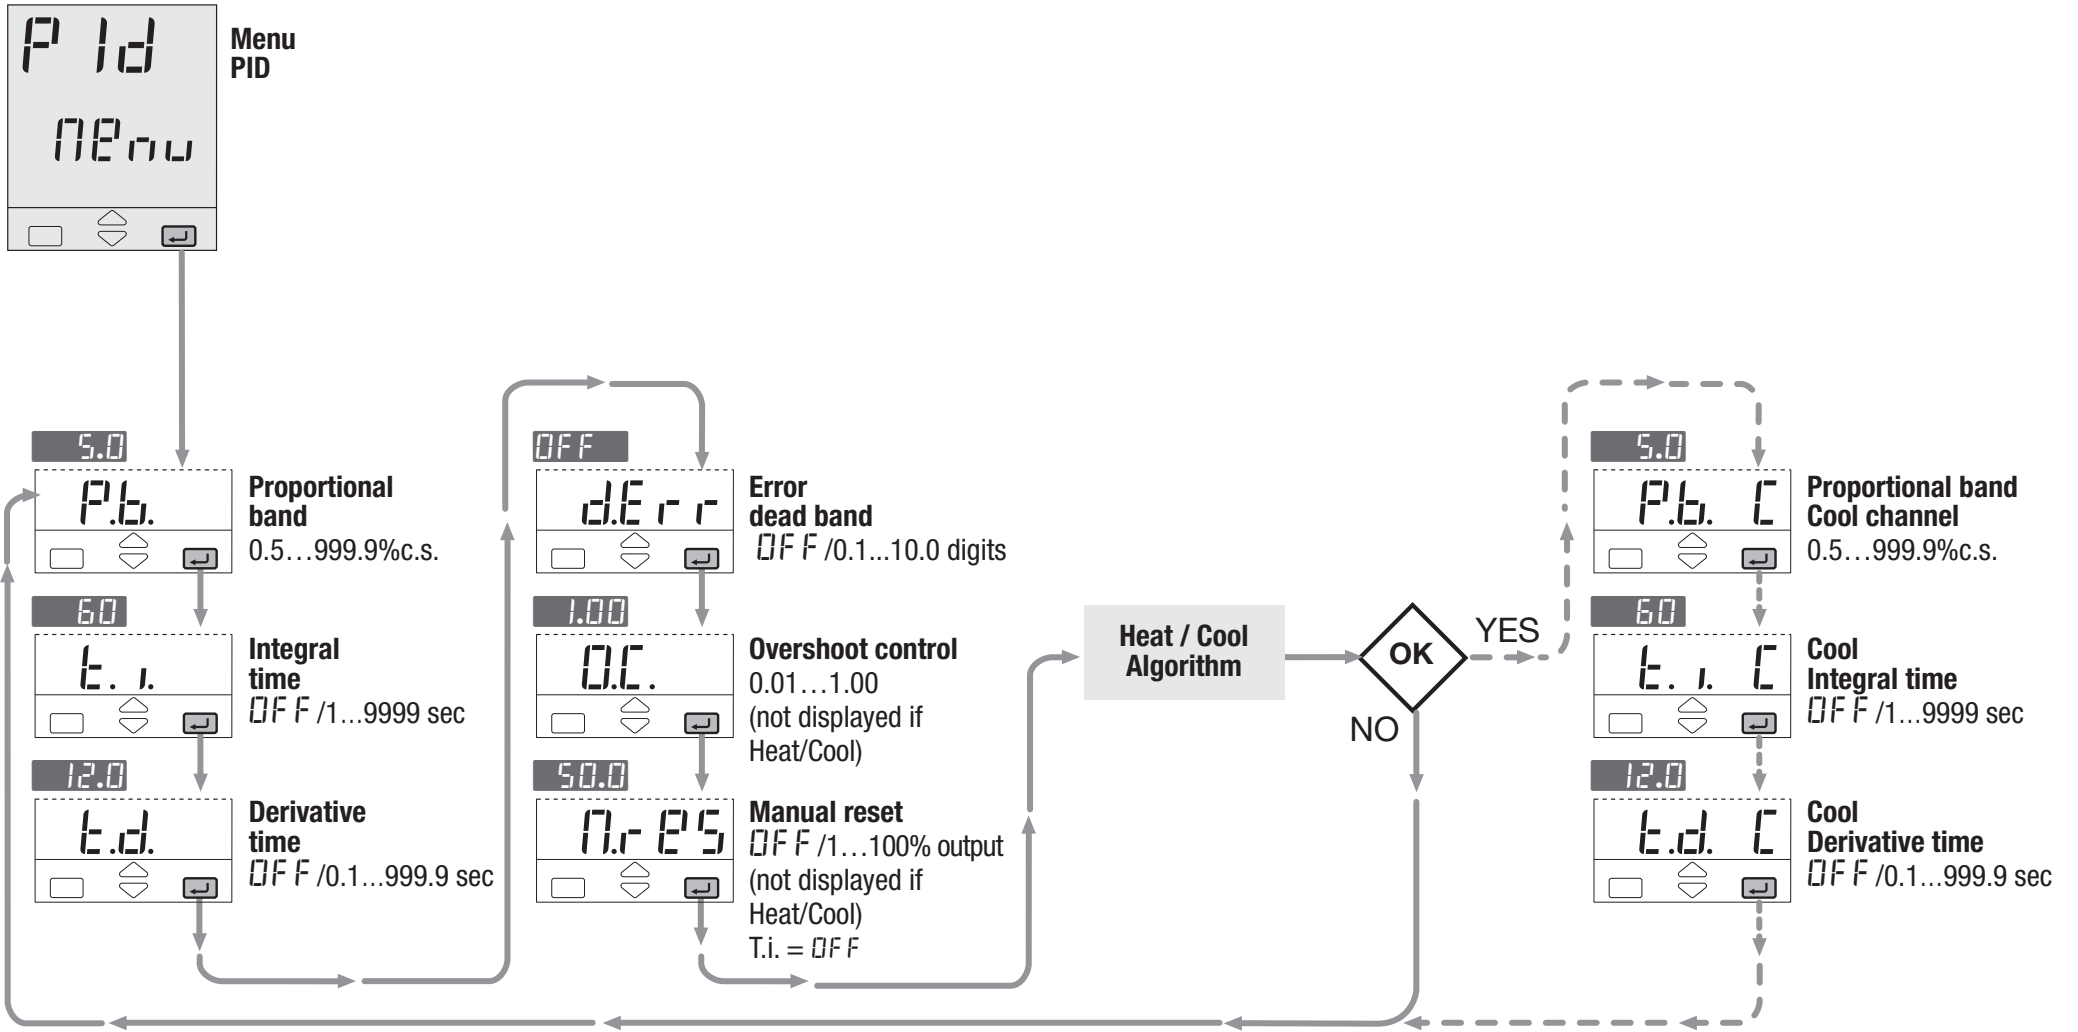

**4.4.4 PARAMETERISATION**  
**TUNING MENU** (not shown for ON-OFF control action)

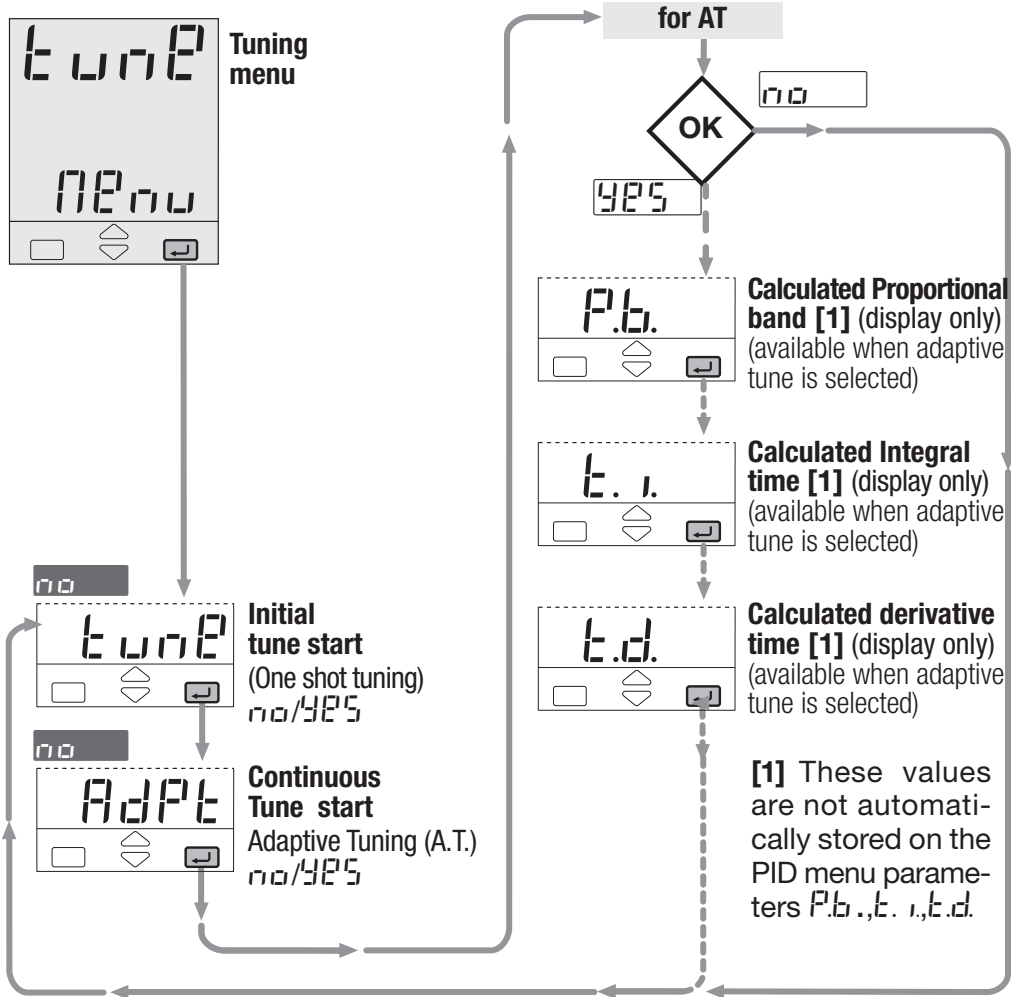


**4.4.5 PARAMETERISATION**  
**INPUT MENU**

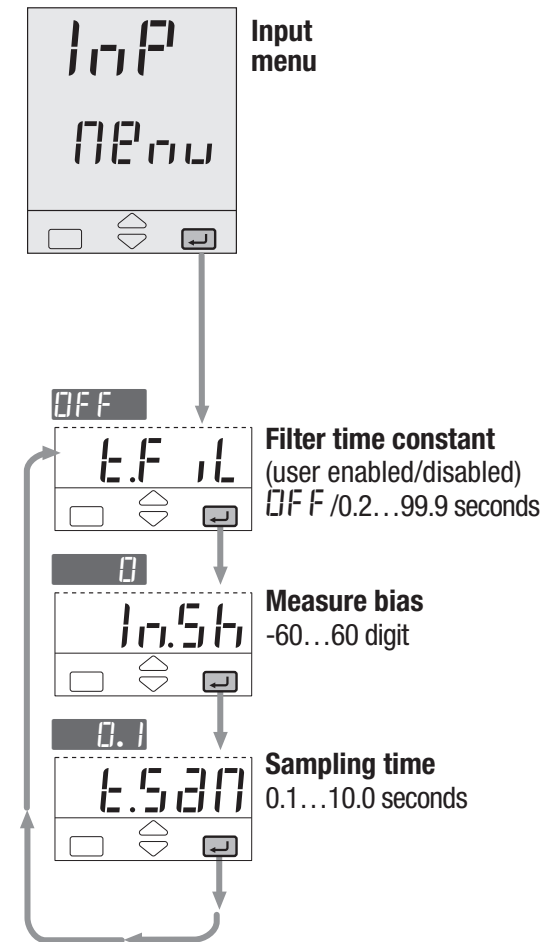




4.4.6 PARAMETERISATION - OUTPUT MENU

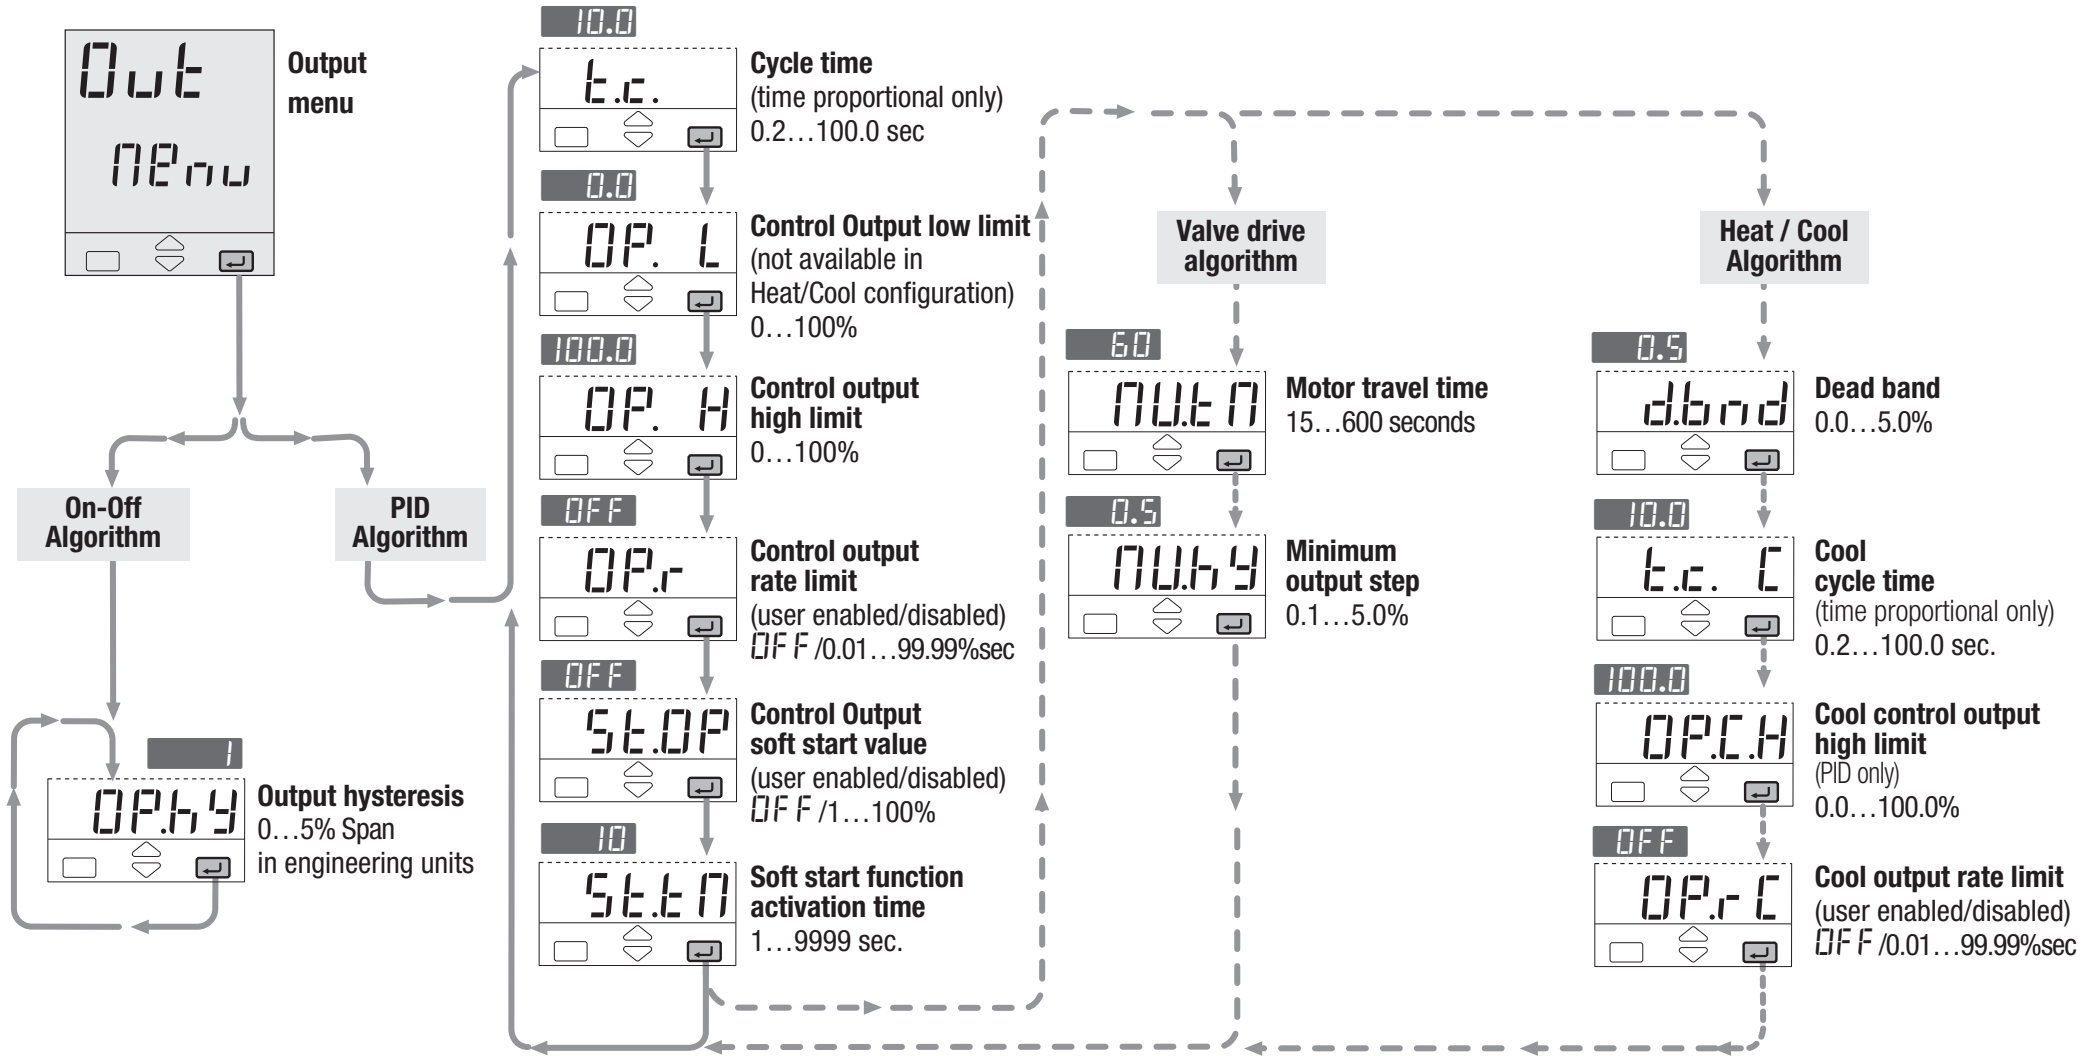

### 4.4.7 PARAMETERISATION - SERIAL COMMUNICATION MENU

Depending on serial communication chosen (see model code on page 5), there are the following parameters:

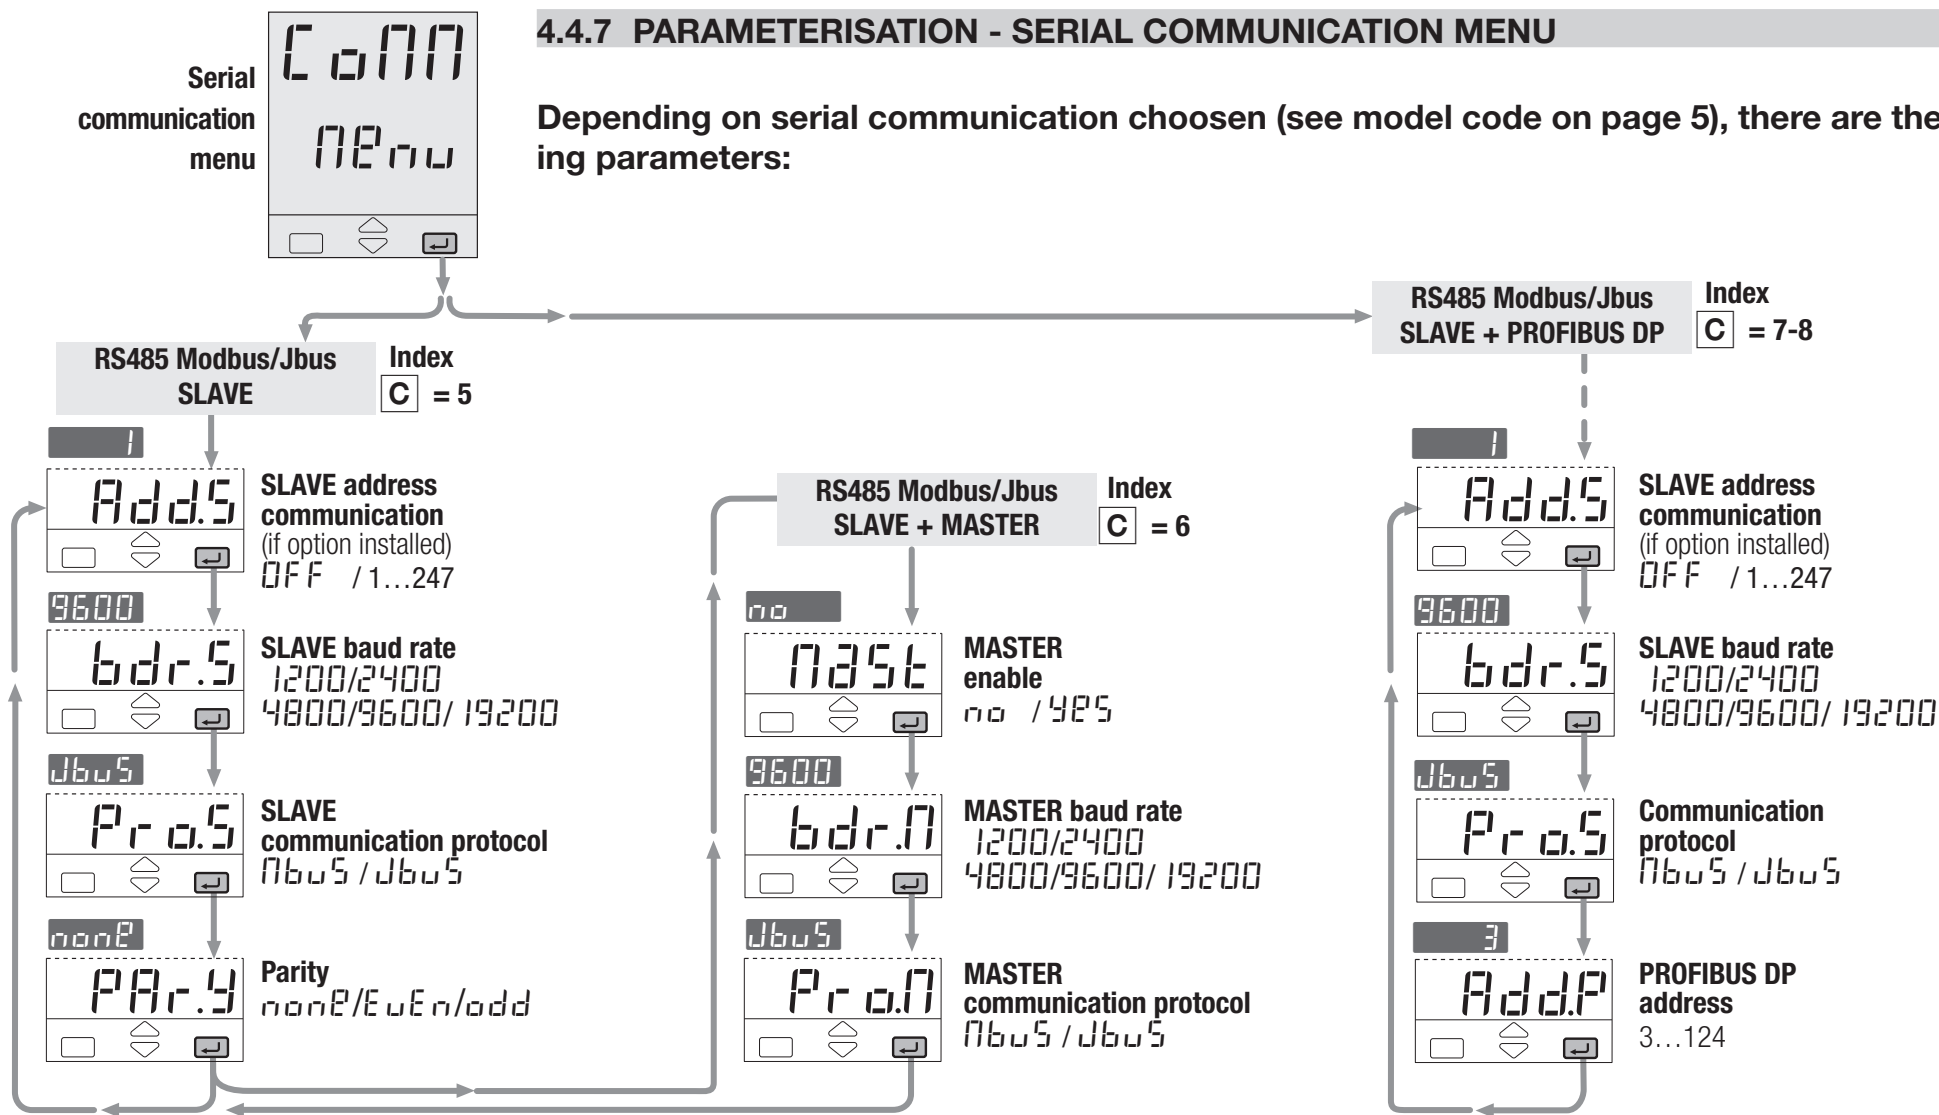

## 4.5 PARAMETERS

For a simpler use of the controller, its parameters have been organised in menu, according to their functionality area.

S.P. L

**Setpoint low limit**

S.P. H

**Setpoint high limit**

High and low limit of the Setpoint SP.

The minimum span (S.PL - S.PH) must be greater than 100 digit.

S.L. u

**Setpoint ramp up**

S.L. d

**Setpoint ramp down**

This parameter specifies the maximum rate of change of the Setpoint.

Adjustable in digit/sec., digit/min, and digit/hour (see page 27)

**When the parameter is OFF, this function is disabled and the new Setpoint is reached immediately after being entered.**

### 4.5.1 SETPOINT MENU

Otherwise, the Setpoint value is reached according to the configured rate of change.

The new Setpoint value is called "Target Setpoint". It can be displayed by means the parameter E.S.P. (see procedure at page 53).

When Remote Setpoint is configured, we suggest to disable S.L. u and S.L. d parameters OFF.

S.P. 1

**1st stored Setpoint**

S.P. 2


**2nd stored Setpoint**

S.P. 3

**3th stored Setpoint**

Values of the three Setpoints, that are activated by mean of logic inputs, communication parameters, and keyboard. The Setpoint active is indicated by the **S1**, **S2** or **S3** green led.

See also page 56.

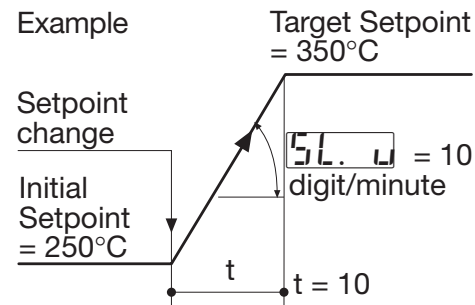

S.P.L.R

**Stored Setpoint tracking**

(see chapter 4.3.2 at page 27)  
Two different operation mode can be set:

A- Stand-by mode 00

The memorised Setpoint is active until its command is active too. Then the controller goes back to the Local Setpoint which becomes the operating one.

B- Tracking mode 925

Once the memorised Setpoint is active, it remains operating also when its command is not active anymore.

**The previous Local Setpoint value will be lost.**

r t 10

**Remote Setpoint Ratio**


Ratio is the coeff. which defines the remote Setpoint span with respect to the input span.

b 105

**Remote Setpoint Bias**

Bias defines the starting point of analogue Remote Setpoint in eng. units corresponding to the low limit (current or voltage) of the remote signal.

**Remote Setpoint Bias and Ratio**

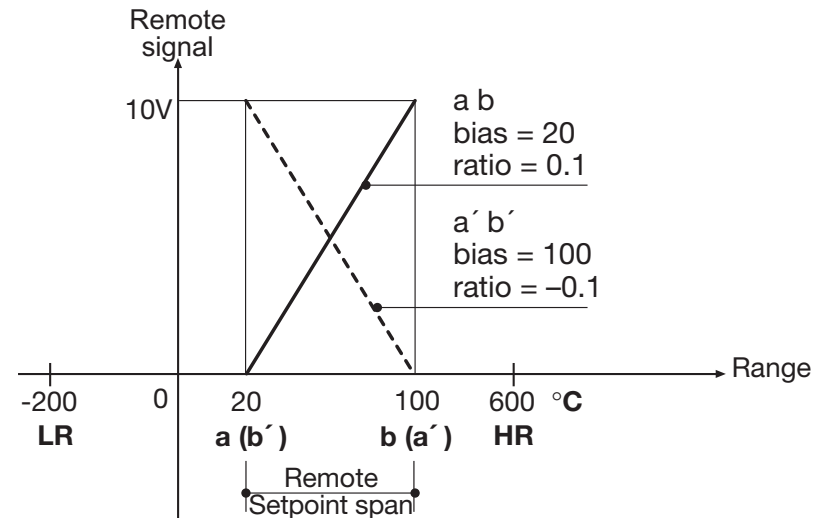

- PV = Process variable
- LR = PV low limit
- HR = PV high limit
- SR = Remote Setpoint
- a (a) = SR starting point
- b (b) = SR ending point

### 4.5.1 MENU SETPOINT

If SR starting point is **lower** then the ending point, both expressed in engineering units:

$b_{set}$  = starting point = a

$$r_{t_{10}} = \frac{b - a}{HR - LR}$$

Example:

$b_{set} = 20$

$r_{t_{10}} =$

$$\frac{100 - 20}{600 - (-200)} = \frac{80}{800} = 0.1$$

If SR starting point is **higher** then the ending point, both expressed in engineering units

$b_{set}$  = starting point = a'

$$r_{t_{10}} = \frac{b' - a'}{HR - LR}$$

Example:

$b_{set} = 100$

$r_{t_{10}} =$

$$\frac{20 - 100}{600 - (-200)} = \frac{-80}{800} = -0.1$$

#### Working Setpoint (SP) as combination of Local Setpoint (SL) and remote signal

Setpoint type *Local*

(table 3, page 27)

$$SP = SL + (r_{t_{10}} \cdot REM) + b_{set}$$

Setpoint type *Remote*

(table 3, page 27)

$$SP = REM + (r_{t_{10}} \cdot SL) + b_{set}$$

SIGN = Remote signal percentage

SPAN = HR-LR

$$REM = \frac{SIGN \cdot SPAN}{100}$$

Examples:

Local Setpoint (SL) with an external Trim with multiplying coeff. of 1/10:

Setpoint type = *Local*

$r_{t_{10}} = 0.1$

$b_{set} = 0$

Remote Setpoint (SR) with an internal Trim with multiplying coeff. of 1/5:

Setpoint type = *Remote*

$r_{t_{10}} = 0.2$

$b_{set} = 0$

Remote Setpoint range equal to the Input range:

Setpoint type = *Local*

$r_{t_{10}} = 1$

$b_{set} = LR$

$SL = 0$


## 4.5.2 ALARM MENU

(see also pages 32 and 33)

**h<sub>9</sub>.u** Asymmetric upper alarm hysteresis

**h<sub>9</sub>.d** Asymmetric lower alarm hysteresis

### Example with high absolute alarm

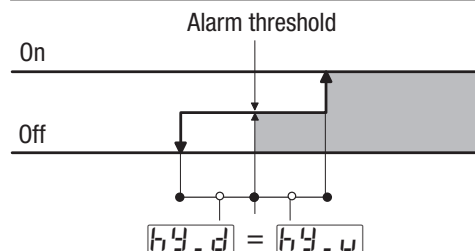

The parameter can be set between 0 and 5% of the configured Span and set in Engineering units. e.g.

Range = -200...600°C  
Span = 800°C  
Max Hysteresis = 5% 800° = 40°C

For symmetrical hysteresis set

**h<sub>9</sub>.d** = **h<sub>9</sub>.u**

**EF1** Alarm delay

Delay time for alarm activation.  
FFF: alarm activated immediately  
1...9999: alarm activated only if the condition persists for the set time

## 4.5.3 PID MENU

Not present with On-Off main output.

**P.b.** Proportional Band

**P.b.** Cool Proportional Band

This parameter specifies the proportional band coefficient that multiplies the error (SP - PV)

**E.i.** Integral Time

**E.i.** Cool integral Time

It is the integral time value, that specifies the time required by the integral term to generate an output equivalent to the proportional term. When FFF the integral term is not included in the control algorithm.

**E.d.** Derivative Time

**E.d.** Cool Derivative Time

It is the time required by the proportional term P to reach the level of D. When FFF it is not included.

**O.C.** Overshoot control

(Automatically disabled when the adaptive tune is running)

This parameter specifies the span of action of the overshoot control. Setting lower values (1.00 → 0.01) the overshoot generated by a Setpoint change is reduced. The overshoot control doesn't affect the effectiveness of the PID algorithm. Setting 1, the overshoot control is disabled.

### 4.5.3 PID MENU

**0.1 25**

**Manual reset**

This term specifies the value of the control output when  $PV = SP$ , in a PD only algorithm (lack of the Integral term).

**d.e r r**

**Error Dead Band**

Inside this band for  $(PV - SP)$ , the control output does not change to protect the actuator (output Stand-by)

### 4.5.4 TUNING MENU

(not shown for ON-OFF main control output)


See page also 57

Two tuning method are provided:

- Initial one shoot **Fuzzy-Tuning**
- Continuous, self learning **Adaptive Tuning**


The **Fuzzy-Tuning** determines automatically the best PID term with respect to the process behaviour. The controller provides 2 types of “one shot” tuning algorithm, that are selected automatically according to the process condition when the operation is started.

#### STEP response

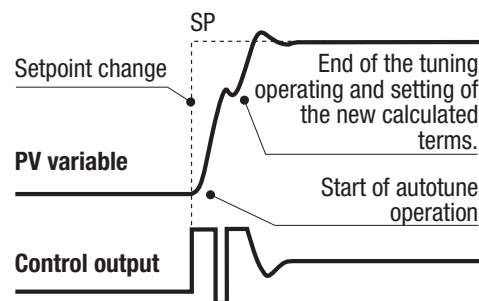

This type is selected when, at the start of the autotune operation, the PV is far from the Setpoint of more than 5% of the span. This method has the big advantage of fast calculation, with a reasonable accuracy in the term calculation.

#### Natural frequency

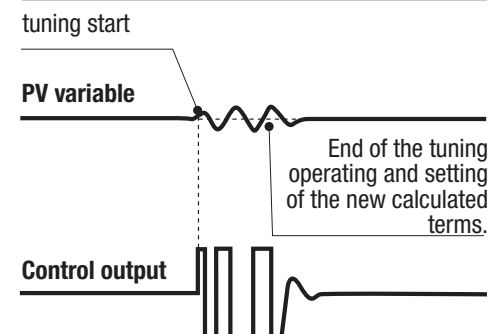


This type is selected when the PV is close to the SP Setpoint. This method has the advantage of a better accuracy in the term calculation with a reasonable speed calculation.

**The Fuzzy Tuning determines automatically the best method to use to calculate the PID term, according the process conditions.**

The self-learning **adaptive auto-tuning** is not intrusive. It doesn't affect the process, at all, during the phase of calculation of the optimal terms parameters.

#### Continuous adaptive tuning

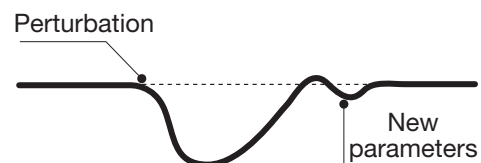

It is particularly suitable for controlling process whose control characteristics change with time or are not linear in relation to the Setpoint values. It doesn't require any operation by the user. It is simple and works fine: it samples continuously the process response to the various perturbations, determining the frequency and the amplitude of the signals. On the

basis of this data and their statistical values, stored in the instrument, it modifies automatically the PID term parameters.

It is the ideal for all applications where it is required to change continuously the PID terms parameters, in order to adjust the PID to the changes of the process dynamic conditions.

**In case of power off with the Adaptive Tuning enabled, the values of the PID terms parameters are stored, in order to be reused at the next power on.**


**At power on the Adaptive Tuning starts automatically.**

### 4.5.5 INPUT MENU

**EF 1L** Input filter

Time constant, in seconds, of the RC input filter on the PV input. When this parameter is **OFF** the filter is bypassed.

#### Filter response

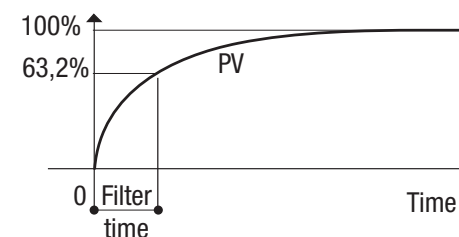

**17.56** Measure Bias

This value is added to the measured PV input value. Its effect is to shift the whole PV scale of its value ( $\pm 60$  digits).


**6.527** Sampling Time

Sampling time, in seconds, of the instrument. This parameter is normally used when controlling slow process, increasing the sampling time from 0.1 to 10 seconds.



### 4.5.6 OUTPUT MENU

#### OP.HY Control output hysteresis

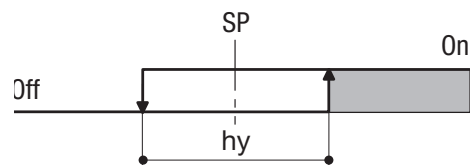

The parameter can be set between zero and 5% of the configured Span and set in Engineering units.

e.g.  
 Range = -200...600°C  
 Span = 800°C  
 Max Hysteresis = 5% 800° = 40°C

#### E.C. Control output cycle time

#### E.C. Cool cycle time

It's the cycle time of the logic control output. The PID control output is provided by the pulse width modulation of the waveform.

#### OP.L Control Output low limit

It specifies the minimum value of the control output signal. It is applied in manual mode, too.

#### OP.H Control output high limit

#### OP.CH Cool output high limit

It specifies the maximum value the control output can be set. It is applied in manual mode, too.

#### OP.r Heat output maximum rate

#### OP.rC Cool output maximum rate


This value, specified in %/seconds, with range from 0.01 to 99.99%/sec. provides the maximum rate of change of the output. When set to OFF this function is disabled.

#### SE.OP Soft start of the control output

It specifies the value at which the control output is set during the start up phase.

#### SE.T Soft start time

This value specifies the time the start up phase lasts. The start up phase starts at power up of the controller

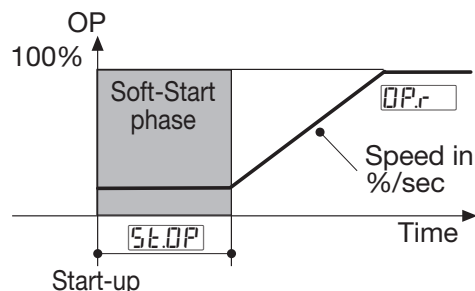

#### TR.T Travel time

It provides the time required to the motor positioner to go from the 0% position to 100%


#### TR.HY Minimum step

It specifies the minimum allowed time of activation of the output to a motor positioner that produces a sensible effect. It is related to the deadband of the positioner

#### d.bnd Heat/Cool deadband

This parameter specifies the width of the deadband between the Cool and the Heat channel

#### Heat / Cool Algorithm

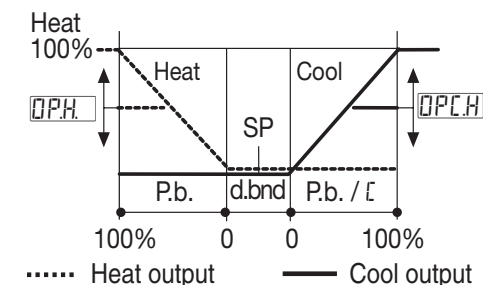

#### 4.5.7 SERIAL COMMUNICATION MENU (OPTION)

**Addr.S**

**SLAVE address communication**  
- 1...247

**Addr.P**

**SLAVE Profibus DP address**  
- 3...124

All the instrument connected to the same supervisor must have different addresses.

If set **OFF** the serial comm.s is not active.

**bdr.S**

**SLAVE Baud rate**

**bdr.M**

**MASTER Baud rate**

It provides the baud rate in the range from 1200 to 19.200 bit/sec.

**PAR.Y**

**Parity**

May be set even **EVEN** or odd **odd**.

If **none** is set, parity will be excluded.

Three serial comm.s options are available:

##### A - Modbus/Jbus SLAVE


The parameters value can be read and when possible modified.

##### B - Modbus/Jbus MASTER with Mathematical package

Mathematical package

The transmission and inquiry of parameters value to all the devices using Modbus/Jbus SLAVE (e.g. PLC, etc.) is allowed.

The mathematical package can manipulate the received data by means the serial comm.s.

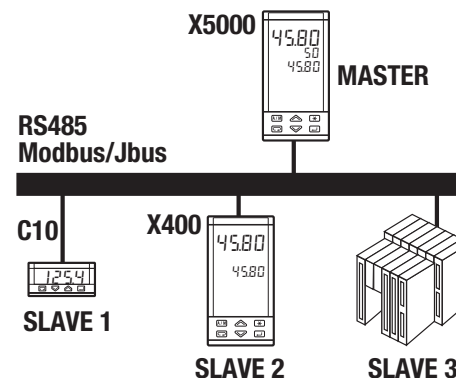

Example:

The MASTER (X5000) reads the process variable from SLAVE 1 (C10) and SLAVE 2 (X400). It compares the two values and send the higher to the SLAVE 3 (PLC).

**The available math. operations are:**



To define the controller operations of this option, the configuration software must be used (see separate user manual).

##### C - PROFIBUS DP SLAVE (Process Field bus protocol)


Industrial standard for peripheral devices connection to a machine in a plant.


The protocol installed in this controller, offers the following advantages against the standard normally supplied by other suppliers:

- Communications baudrate **Up to 12 Mb/sec with electric isolation.**
- The list of data transfer (profile file) **is user configurable.**

It can be set by means the configuration software (see separate manual)

4.6 PARAMETERISATION - ACCESS MENU - PASSWORD - CALIBRATION

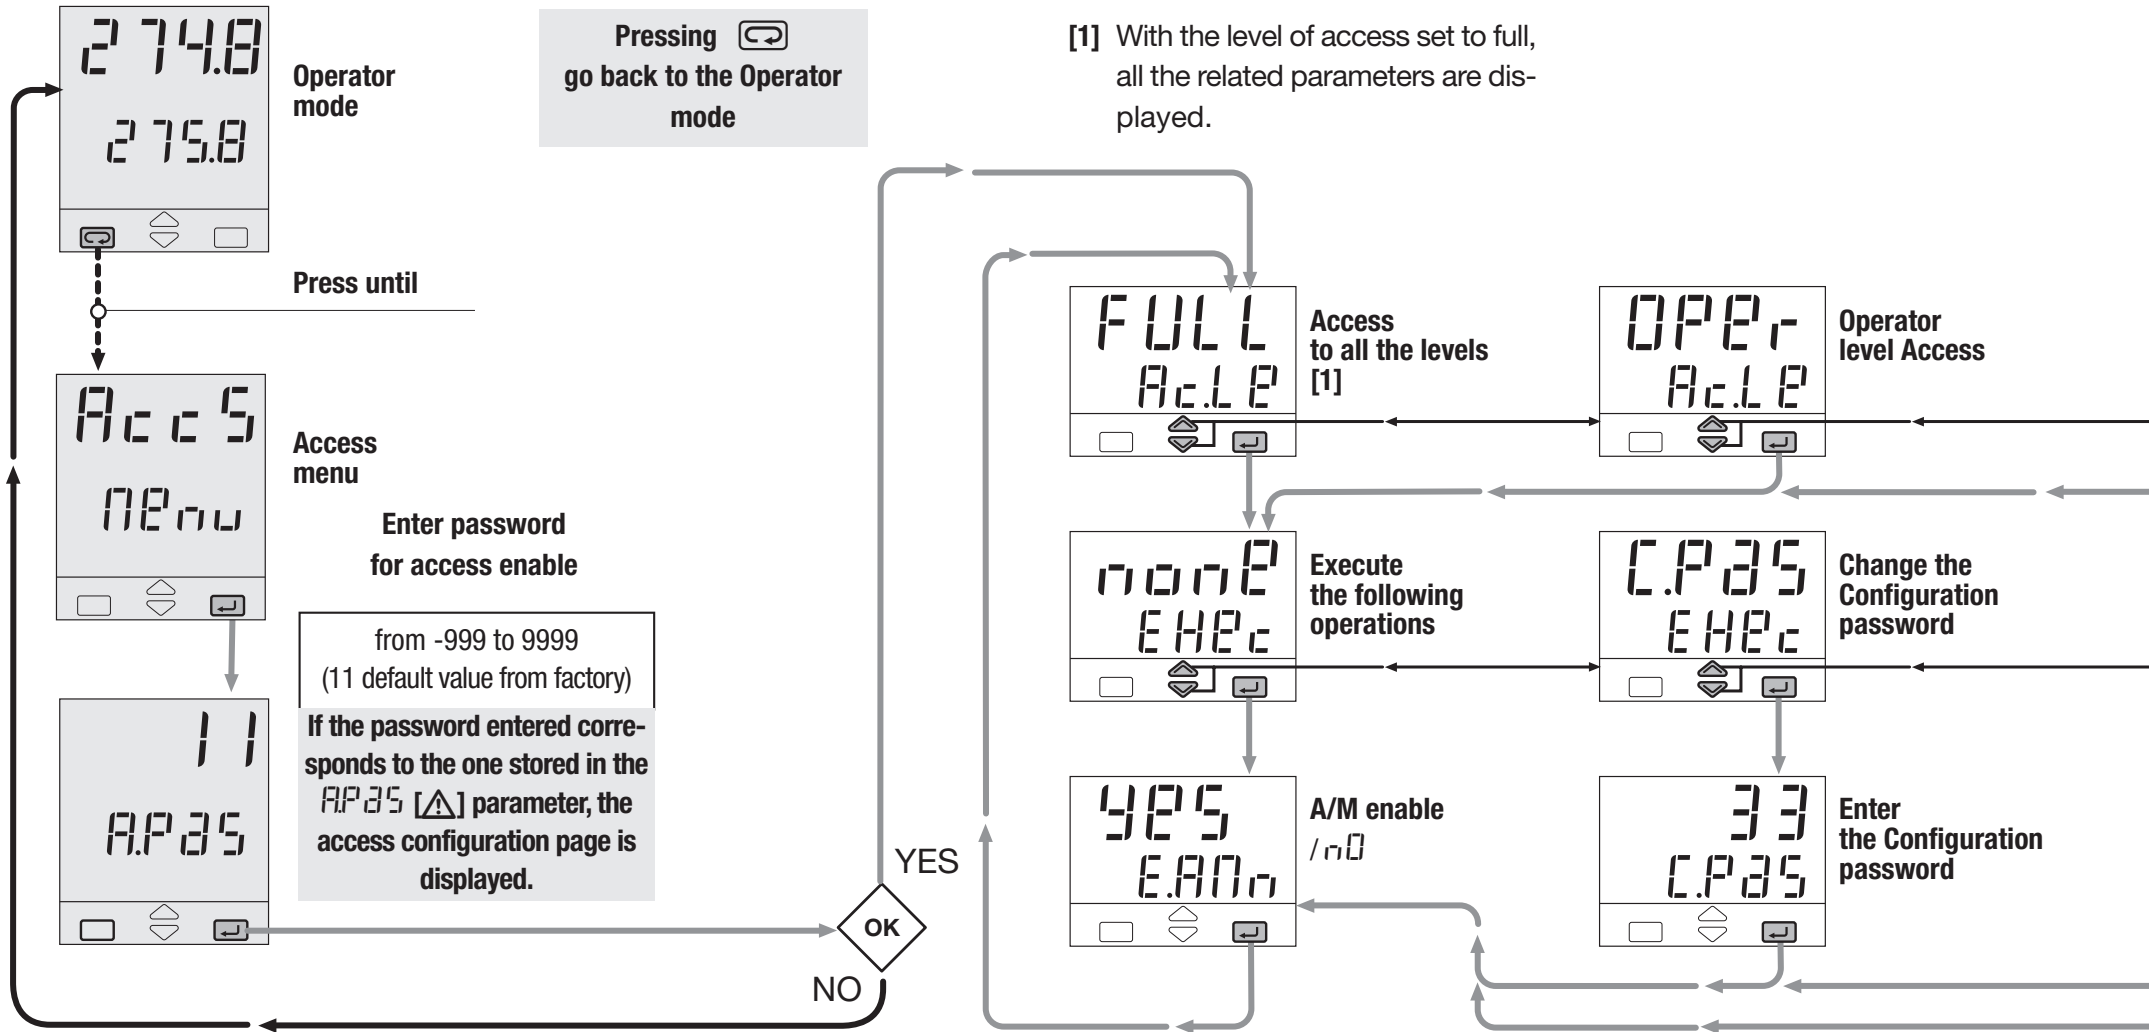

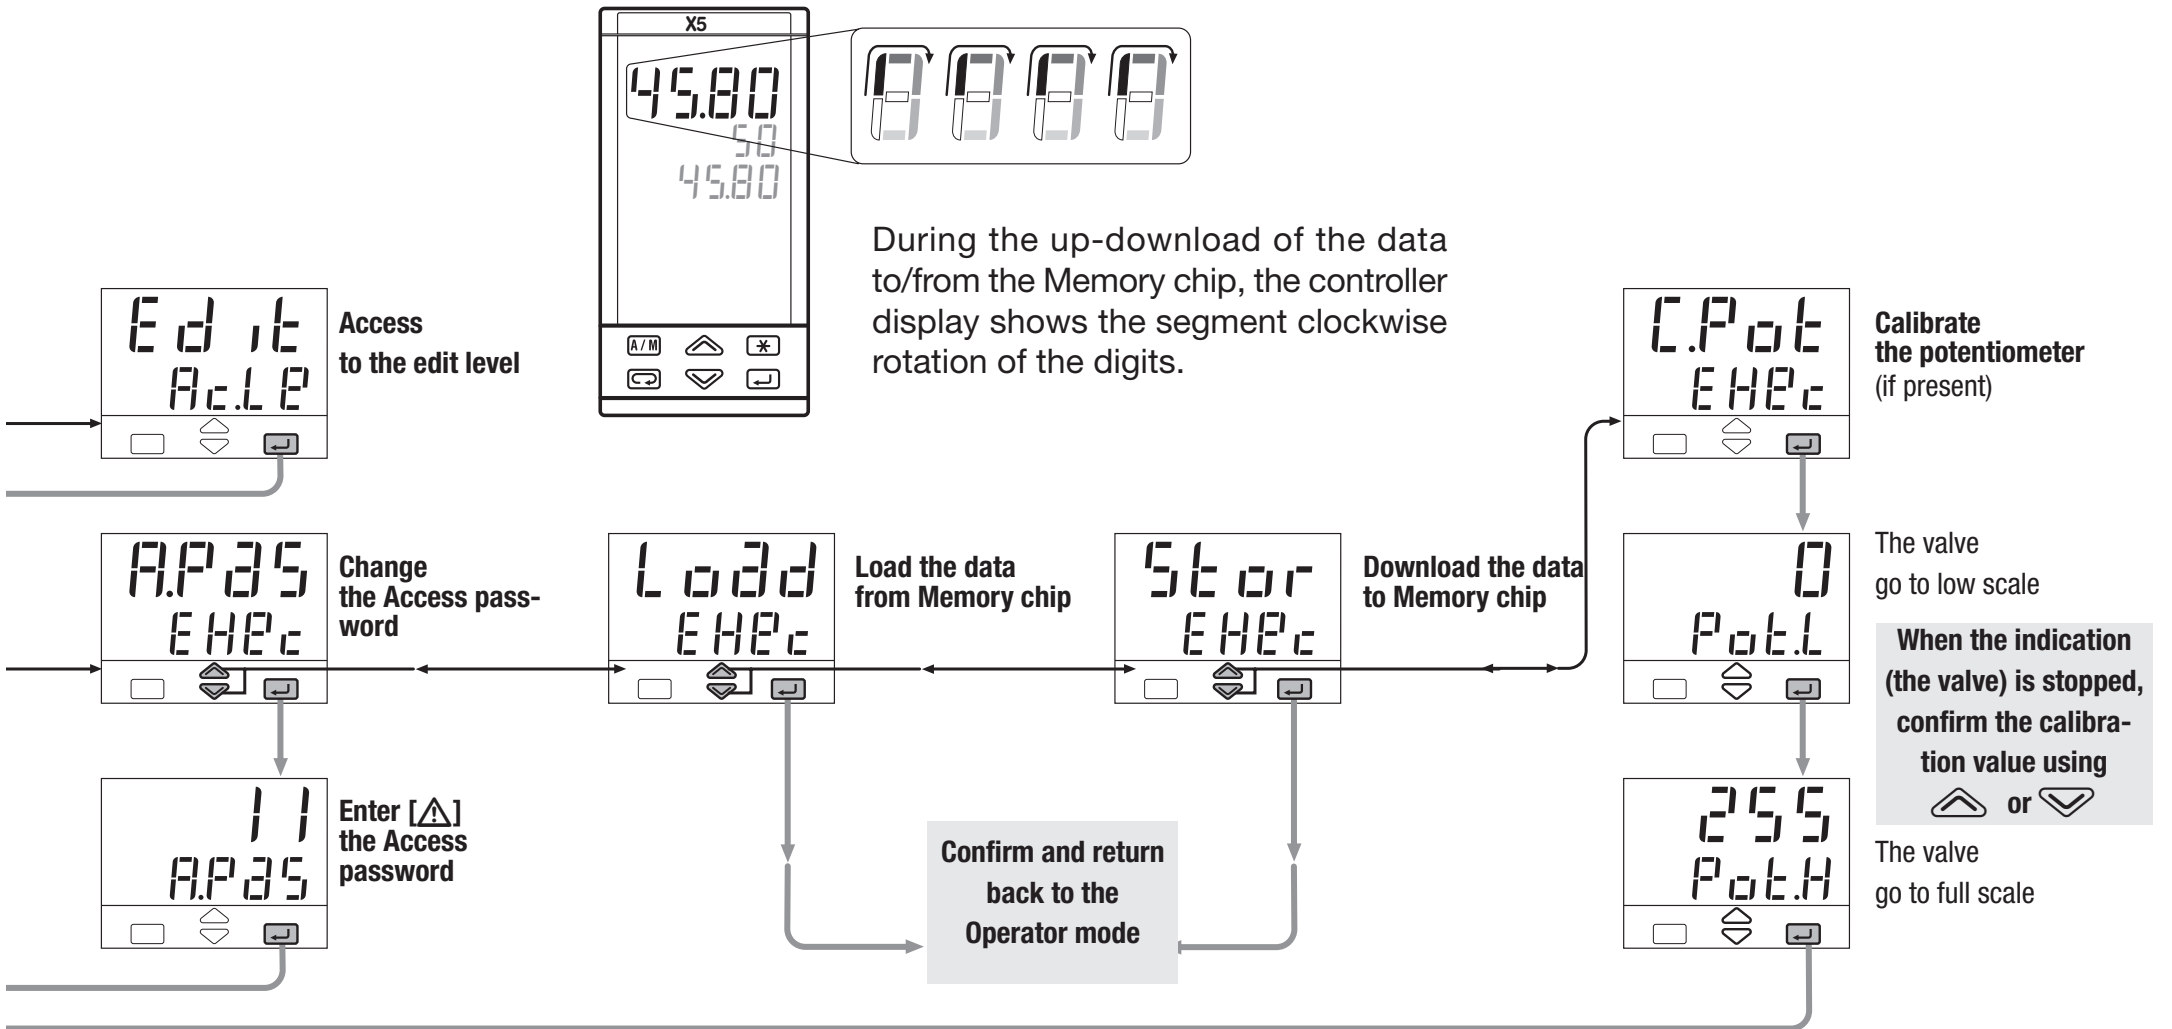



#### 4.6 PARAMETERISATION - ACCESS MENU - PASSWORD - CALIBRATION

With the access level Edit, the user defines which groups and parameters are accessible to the operator

After selecting and confirming the access level Edit, enter in the parameters menu. The code of the access level is displayed on the front panel.

Press the   keys to select the proper level.

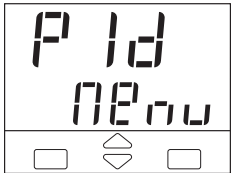Group of parameters	Code	Access level
	rEd	Visible
	HidE	Not visible

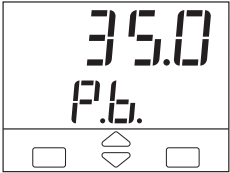
Group of parameters	Code	Access level
	AlEr	Visible and changeable
	Fast	<b>Included in "Fast view"</b>
	rEd	Visible only
	HidE	Not visible and not changeable

The parameters in the access level *Fast* are recalled on the front panel through the procedure of fast parameter access illustrated in par. 5.2 page 53. The maximum number of fast parameters is 10.

At the end of the parameter list of the selected group, the controller quits from the Edit access level.

**Therefore, the Edit level must be selected for each group of parameters**


The access level of groups and parameters, is activated through

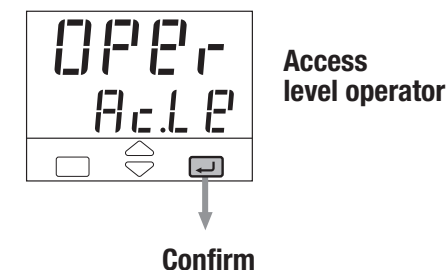

5

DISPLAYS

5.1 STANDARD DISPLAY

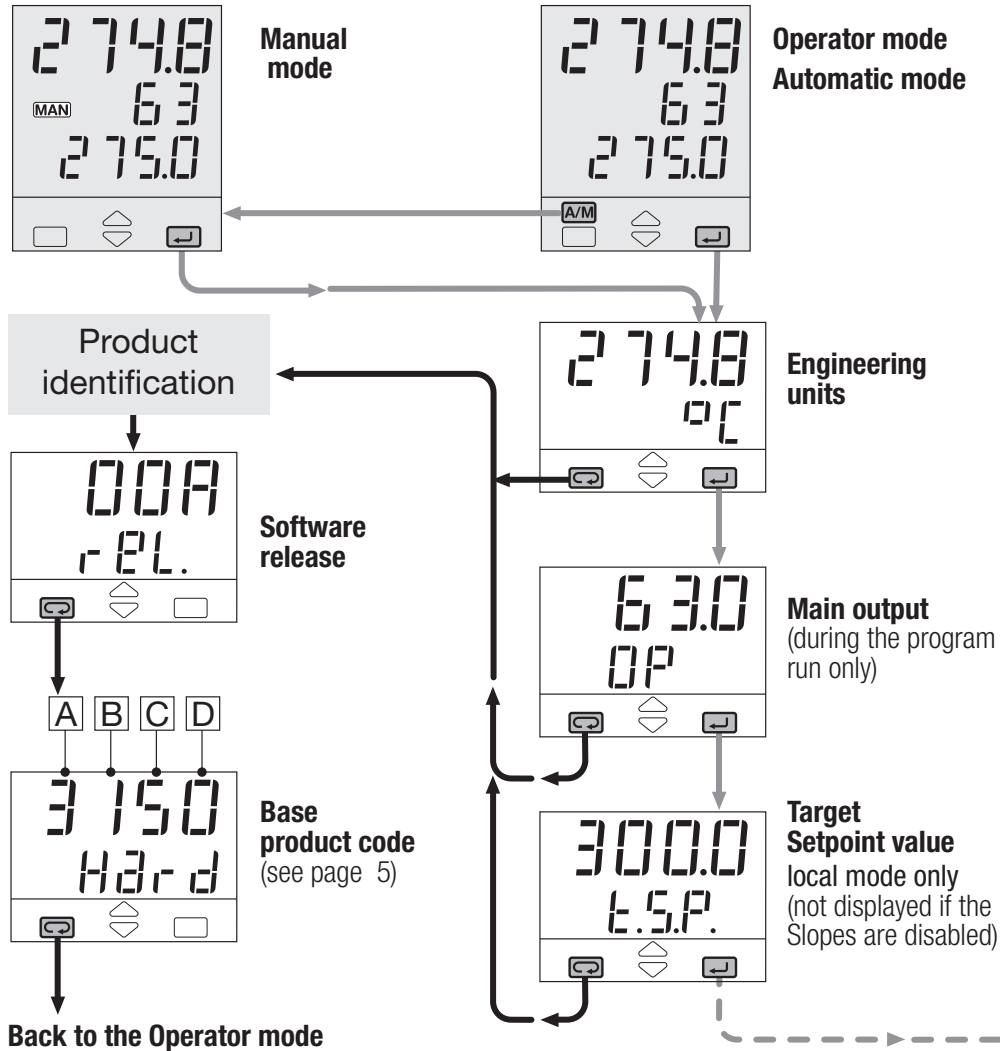


5.2 FAST VIEW

(fast access to the parameters)

With this procedure, simple and fast, up to 10 parameters, selected through the fast view (see par 4.6 page 52) are **displayed and can be modified by the operator without requiring the standard parameter setting procedure.**

Press in order to modify the parameters  
The value is entered by pressing key

On left side, please find as an example a list of parameters on Fast view menu.

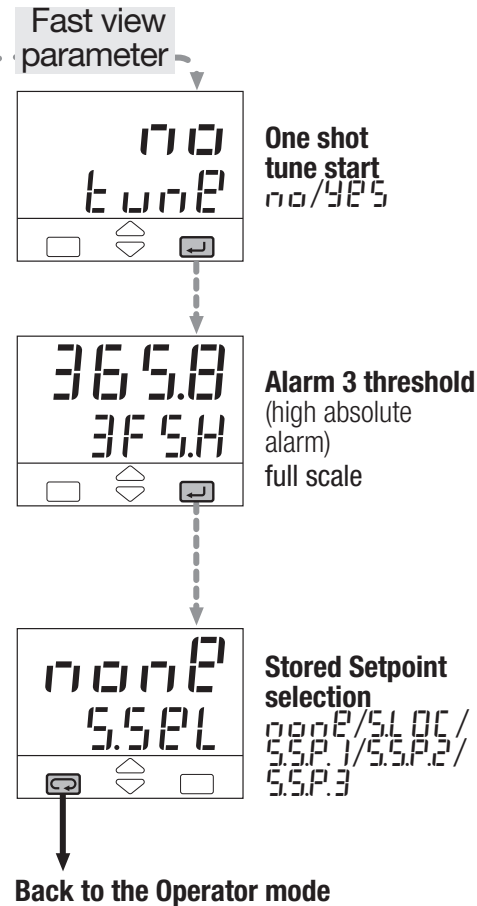

# 6 COMMANDS

## COMMANDS TO THE CONTROLLER AND OPERATING PHASES


The commands can be entered in 3 ways:



### 6.1 KEYPAD see page 55

- Setpoint modification
- Manual mode
- Local/remote selection
- Stored Setpoint display
- Tune Run / Stop
- Program start/stop (see page 66)

### 6.2 DIGITAL INPUTS see page 58

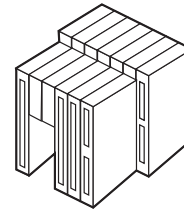




### 6.3 SERIAL COMMUNICATIONS see the manual on this topic




## 6.1 KEYPAD COMMANDS

### 6.1.1 SETPOINT MODIFICATION

The Setpoint is directly modified with the   keys. Once entered, the new value is checked and becomes operating after 2 seconds. The end of this phase is flagged by flashing momentarily the display with SP.

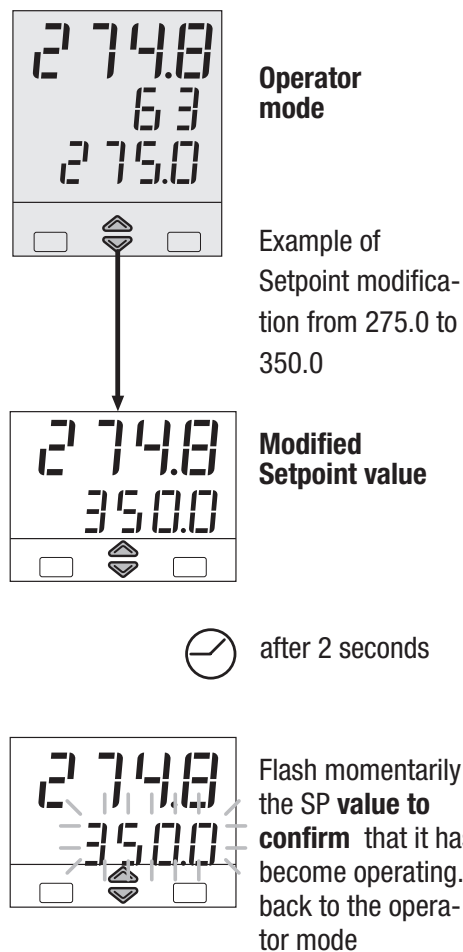


### 6.1.2 AUTO/MANUAL MODE

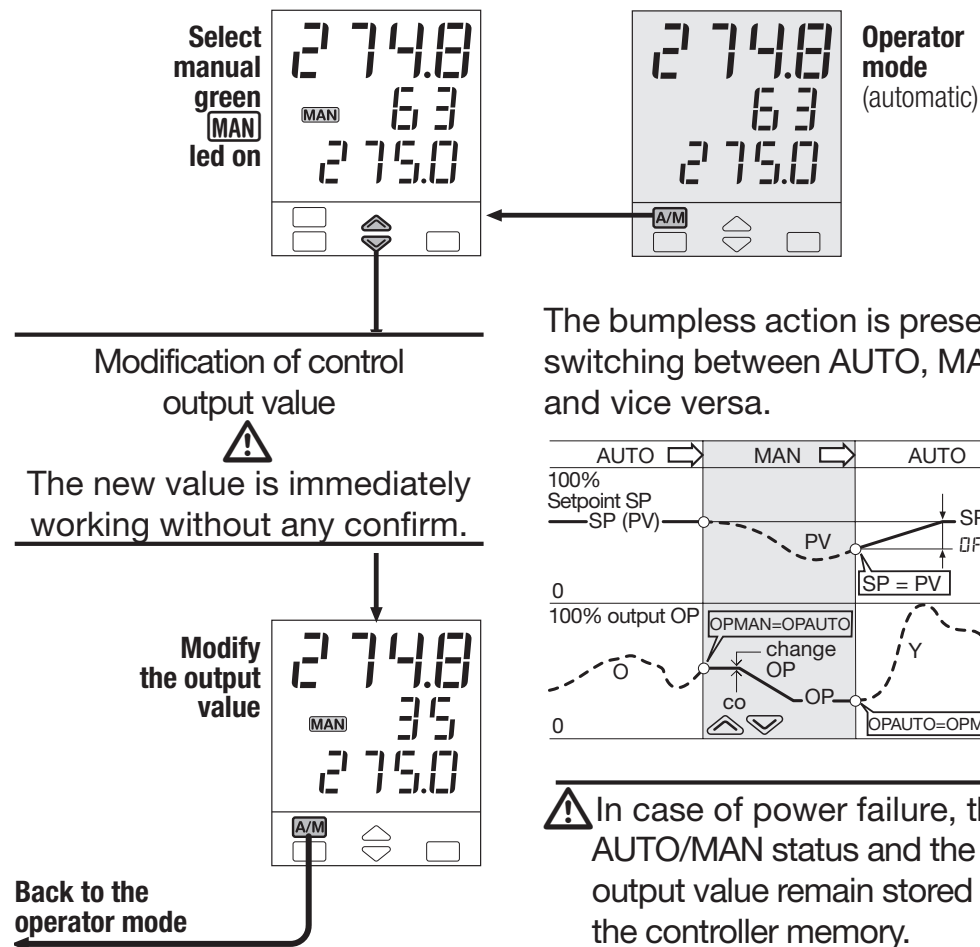




### 6.1.3 LOCAL/ REMOTE SELECTION

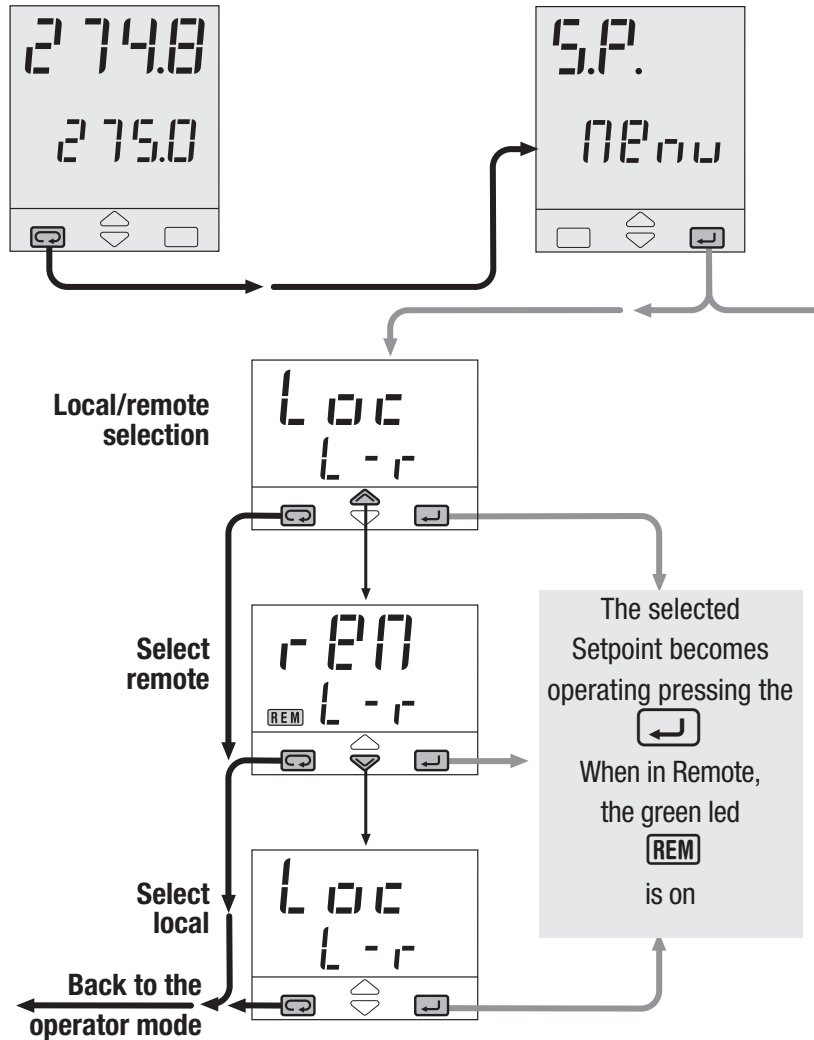

### 6.1.4 STORED SETPOINTS SELECTION (see also pages 42, 43)



The Setpoint is directly modified with the keys. Once entered, the new value is checked and becomes operating after 2 seconds. The end of this phase is flagged by flashing momentarily the display with SP.

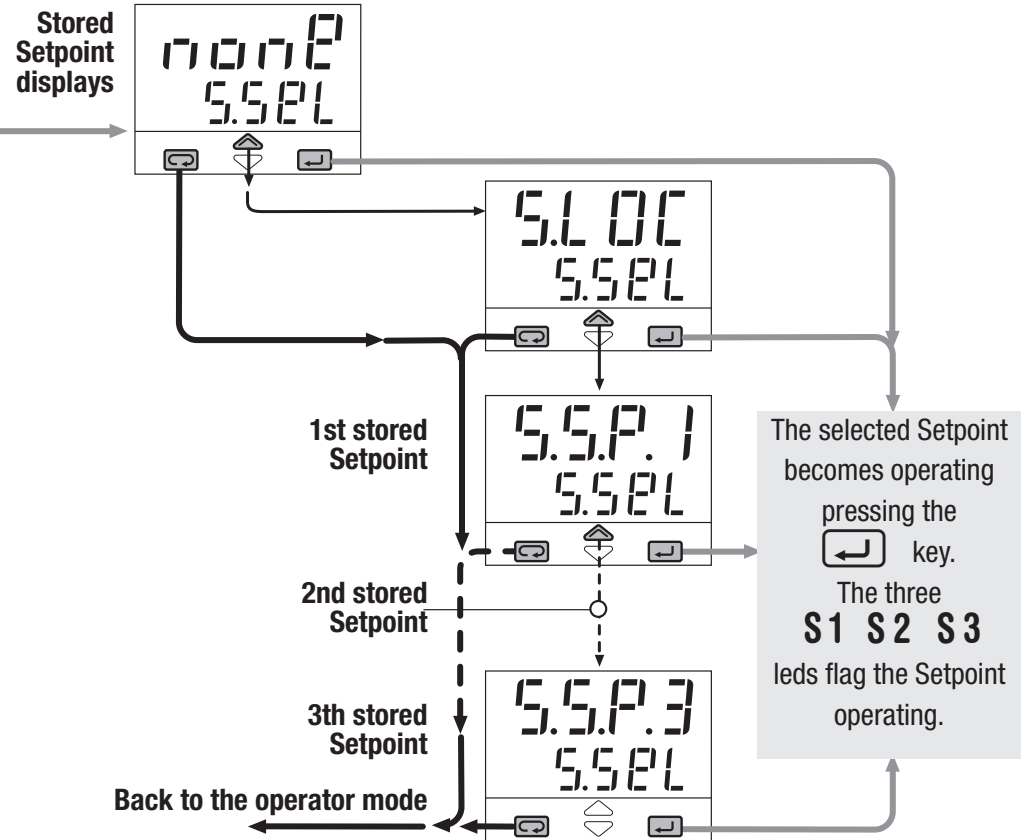

## 6.1.5 TUNE RUN / STOP

This controller is provided with 2 different Tuning algorithm:

- **Fuzzy tune (one shot tune)** for calculating the optimal PID terms parameters
- **Adaptive Tune** (continuous tune) for a continuous calculation of the PID terms parameters.

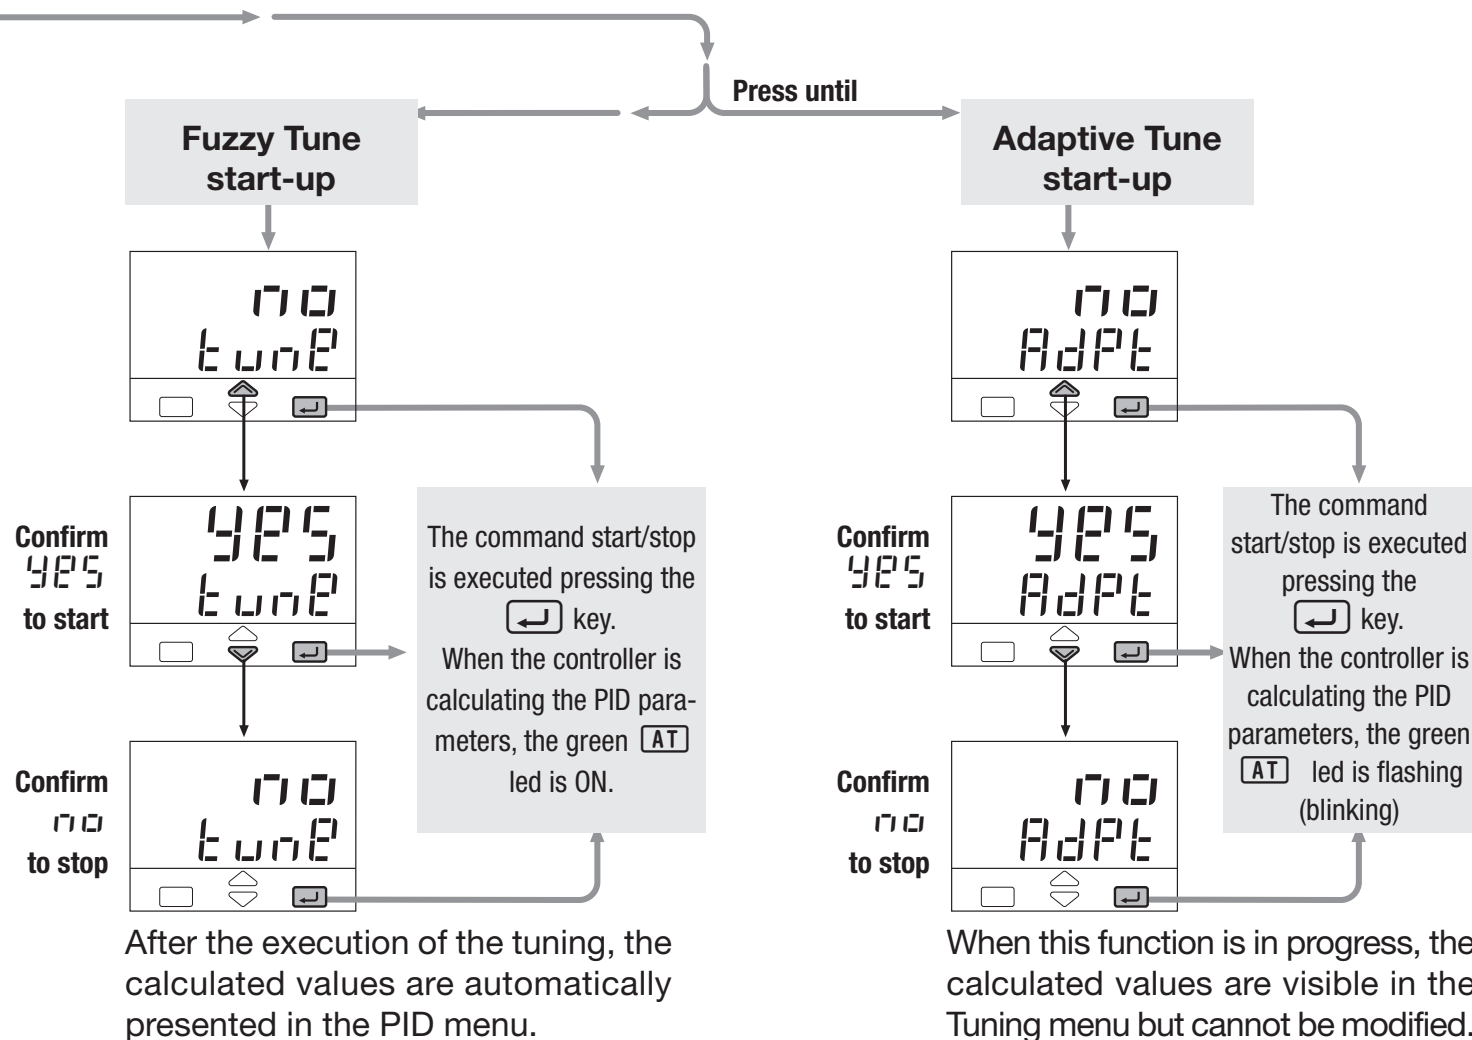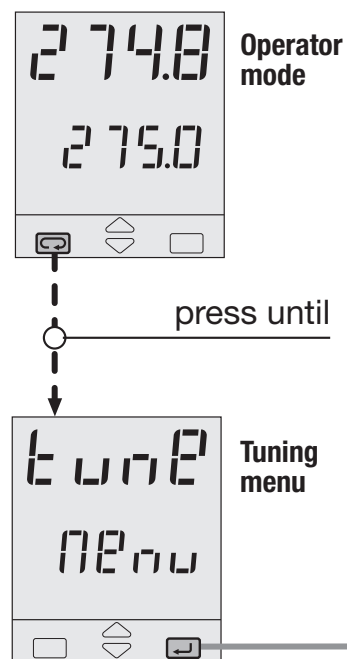














## 6.2 DIGITAL INPUTS COMMANDS

A function is assigned, through the configuration procedure to each DI1, DI3 and DI3 digital input. (see the parameters setting at tab. 10 at page 30).

The configured function is activated when the digital input (free voltage contact or open collector output) is in the On state (closed). It is deactivated by setting the input to the Off state (open).

The activation of the function through the digital input has the highest priority than through the keypad or through the serial communication.

### 6.2.1 DIGITAL INPUTS COMMANDS FOR LOCAL-REMOTE SETPOINT

Function	Parameter value	Performed operation		Notes
		 Off	 On	
None		—	—	Not used
Set manual mode		Automatic	Manual	
Keyboard lock		Unlock	Locked	With the keypad locked the commands from digital inputs and serial communications are still operating
PV measure hold		Normal operation	PV is hold	The value of PV is “frozen” at the time the digital input goes to the close state
Setpoint slopes inhibition		Rate limiting is active	Normal operation	When the input is in the on state, the Setpoint is changed in steps
Output forcing mode		Normal output	Forced output	With ON command the output is equal to the forced value ( see page 28)
1st stored Setpoint		Local	1st SP	The permanent closure <b>forces</b> the chosen stored value. Setpoint modification is not possible.
2nd stored Setpoint		Local	2nd SP	The impulsive closure, <b>selects</b> the stored value. Setpoint modification is allowed.
3th stored Setpoint		Local	3th SP	If more than one digital input is selecting a Setpoint, the last to be activated is the operating one. (see page 43)
Set Remote mode		Local	Remote	
Reactivation of blocking		—	Reactivation of blocking	The blocking function is activated on closing the command from digital inputs

# 7 PROGRAMMED SETPOINT

## INTRODUCTION

When the Setpoint programmer option (mod. X5000-3... **4** ) is present, up to four programs are available.

## MAIN CHARACTERISTICS


- 4 program, 16 segments max/program
- start, stop, hold etc, commands from the keypad
- time base in seconds, minutes or hours
- continuous or up to 1...9999 time cycling of the program
- two digital outputs (OP3 and OP4) related to the program.
- setting of the maximum allowed deviation from the Setpoint

## 7.1 PROGRAM STRUCTURE

The program consists of a sequence of segments.

For each segment, it is specified:

- the Setpoint to reach
  - the duration of the segment
  - the state of the OP3 output
- } always present

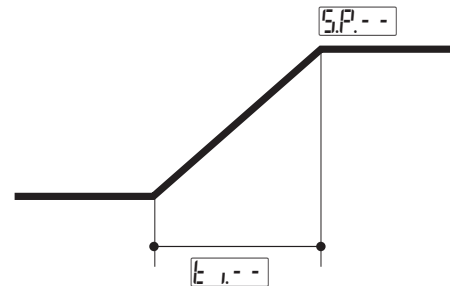

The program consists of:

- 1 initial segment named **I**
- 1 end segment named **F**
- 1...14 normal segments

### Initial segment - **I**

Its main purpose is to define the value the process variable has to maintain before starting the program.


### End segment - **F**

Its main purpose is to define the value the process variable has to maintain at the end of the program and until further changes of Setpoint.


### Normal segments - - - -

These segments build up the profile program. There are 3 types of segments:


### Ramp

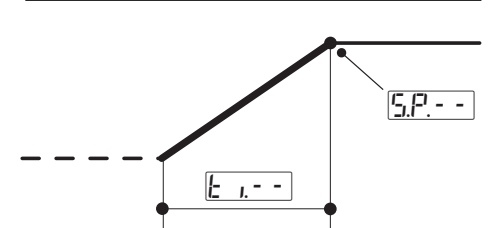

### Dwell

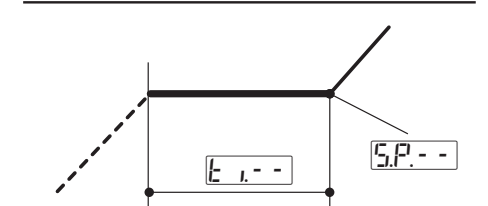


### Step

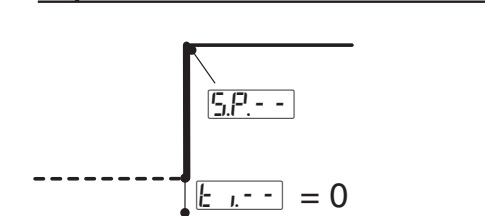

- S.P. = Target Setpoint
- t. i. = Duration
- - - - = Previous segment
- = Current segment
- = Next segment

**EXAMPLE OF SETPOINT PROFILE**

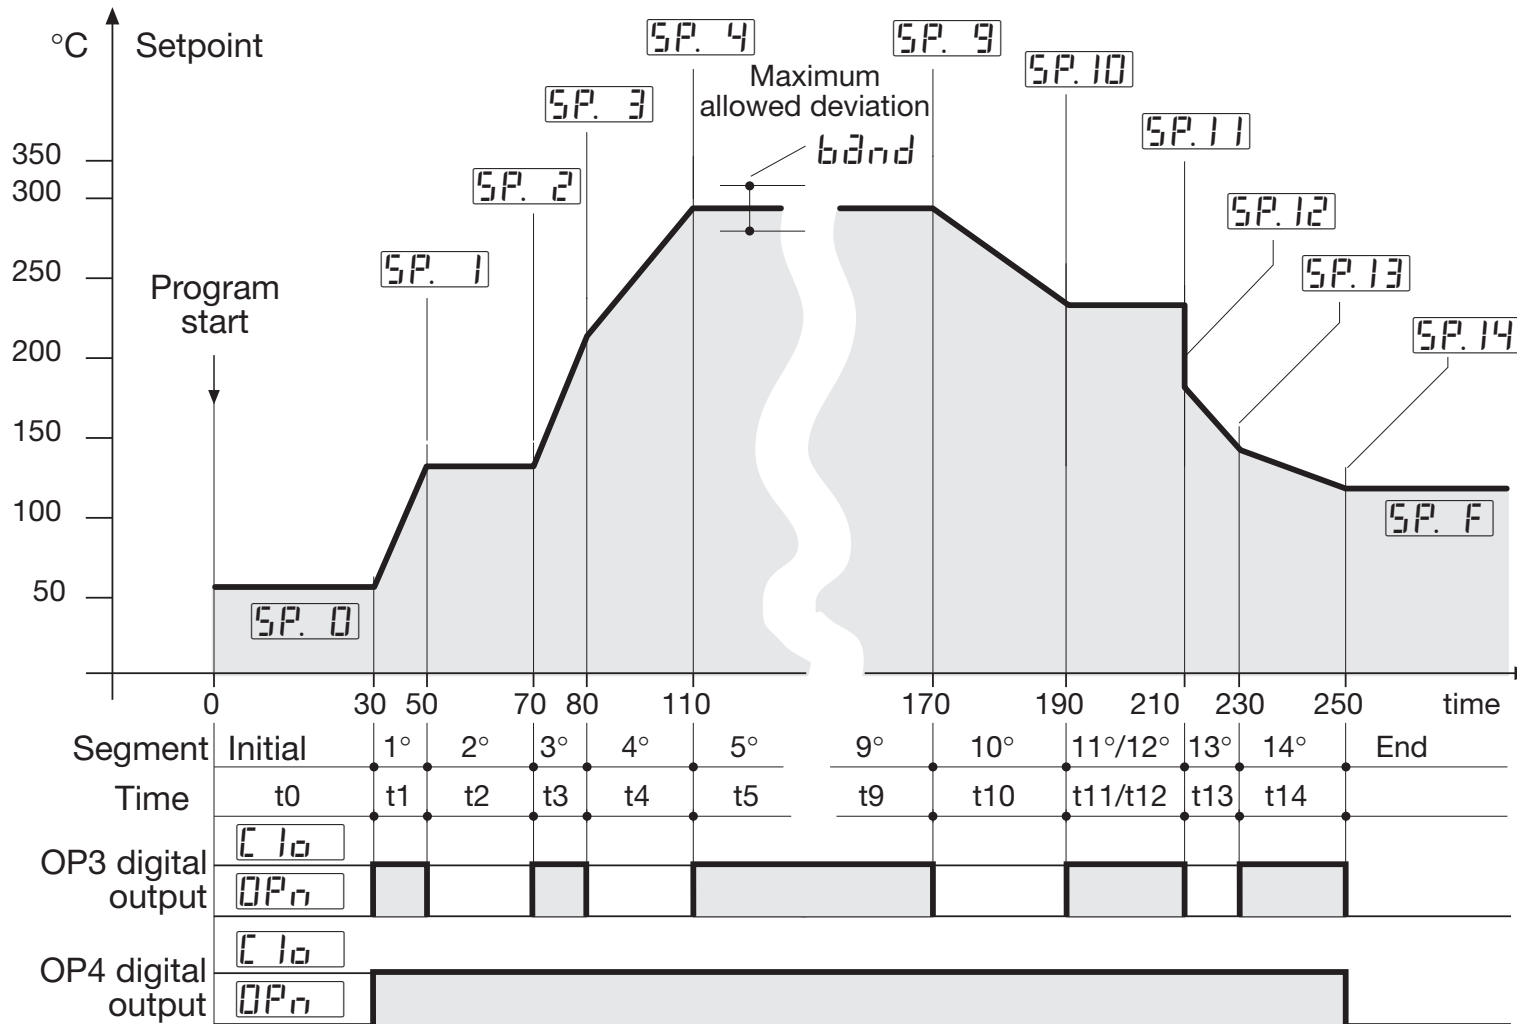


**7.2 SETPOINT PROGRAMMER**

**7.2.1 MAXIMUM ALLOWED DEVIATION (band)**


If the PV controlled input value exceeds the band, centred around the SP, the segment time is extended of the same time the PV input stays out of the band. The band width is defined in a parameter of the program segment. The actual segment period is calculated as  $t_{i-1} + t_i$

**OPERATION**

**A. Ramp**

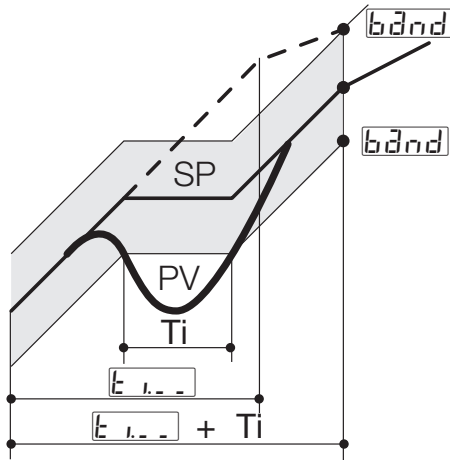

**B. Dwell**

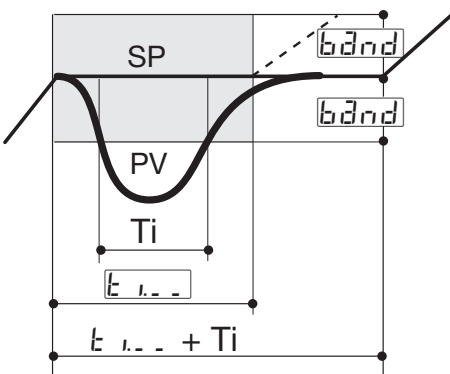


**7.2.2 RE-START OF A PROGRAM AFTER A POWER FAILURE**

The parameter `FdIL` specifies the behaviour of the programmer at power up (see page 62). Selected between the following 3 choices:

- `Cont` Continue
- `rES` Reset
- `rAMP` Ramp

If `Cont` is selected, the execution of the program starts from the point reached at the power failure time.

All the parameters, like Setpoint and the remaining time are restored at the values they had at power off.

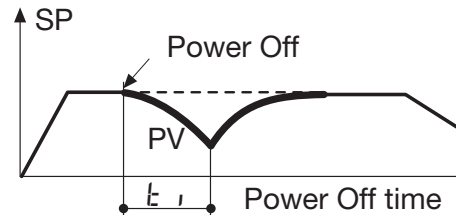


If `rES` is selected, at power on the program ends and goes back to local mode.


If `rAMP` is selected, the execution of the program starts from the point reached at the power failure time.

In this case, the programs continue with PV reaching SP with a ramp, whose slope corresponds to the one of the segment running at the power off.


**Power off during a dwell**

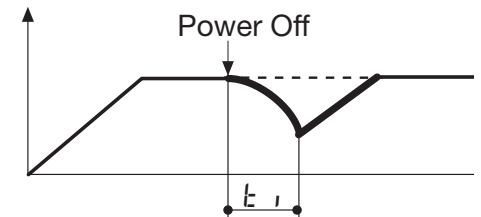


**Power off during a ramp**

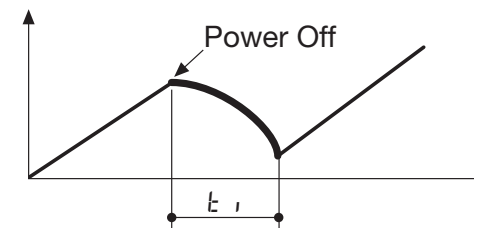

**7.3 PARAMETERISATION - PROGRAM MENU (OPTION)**

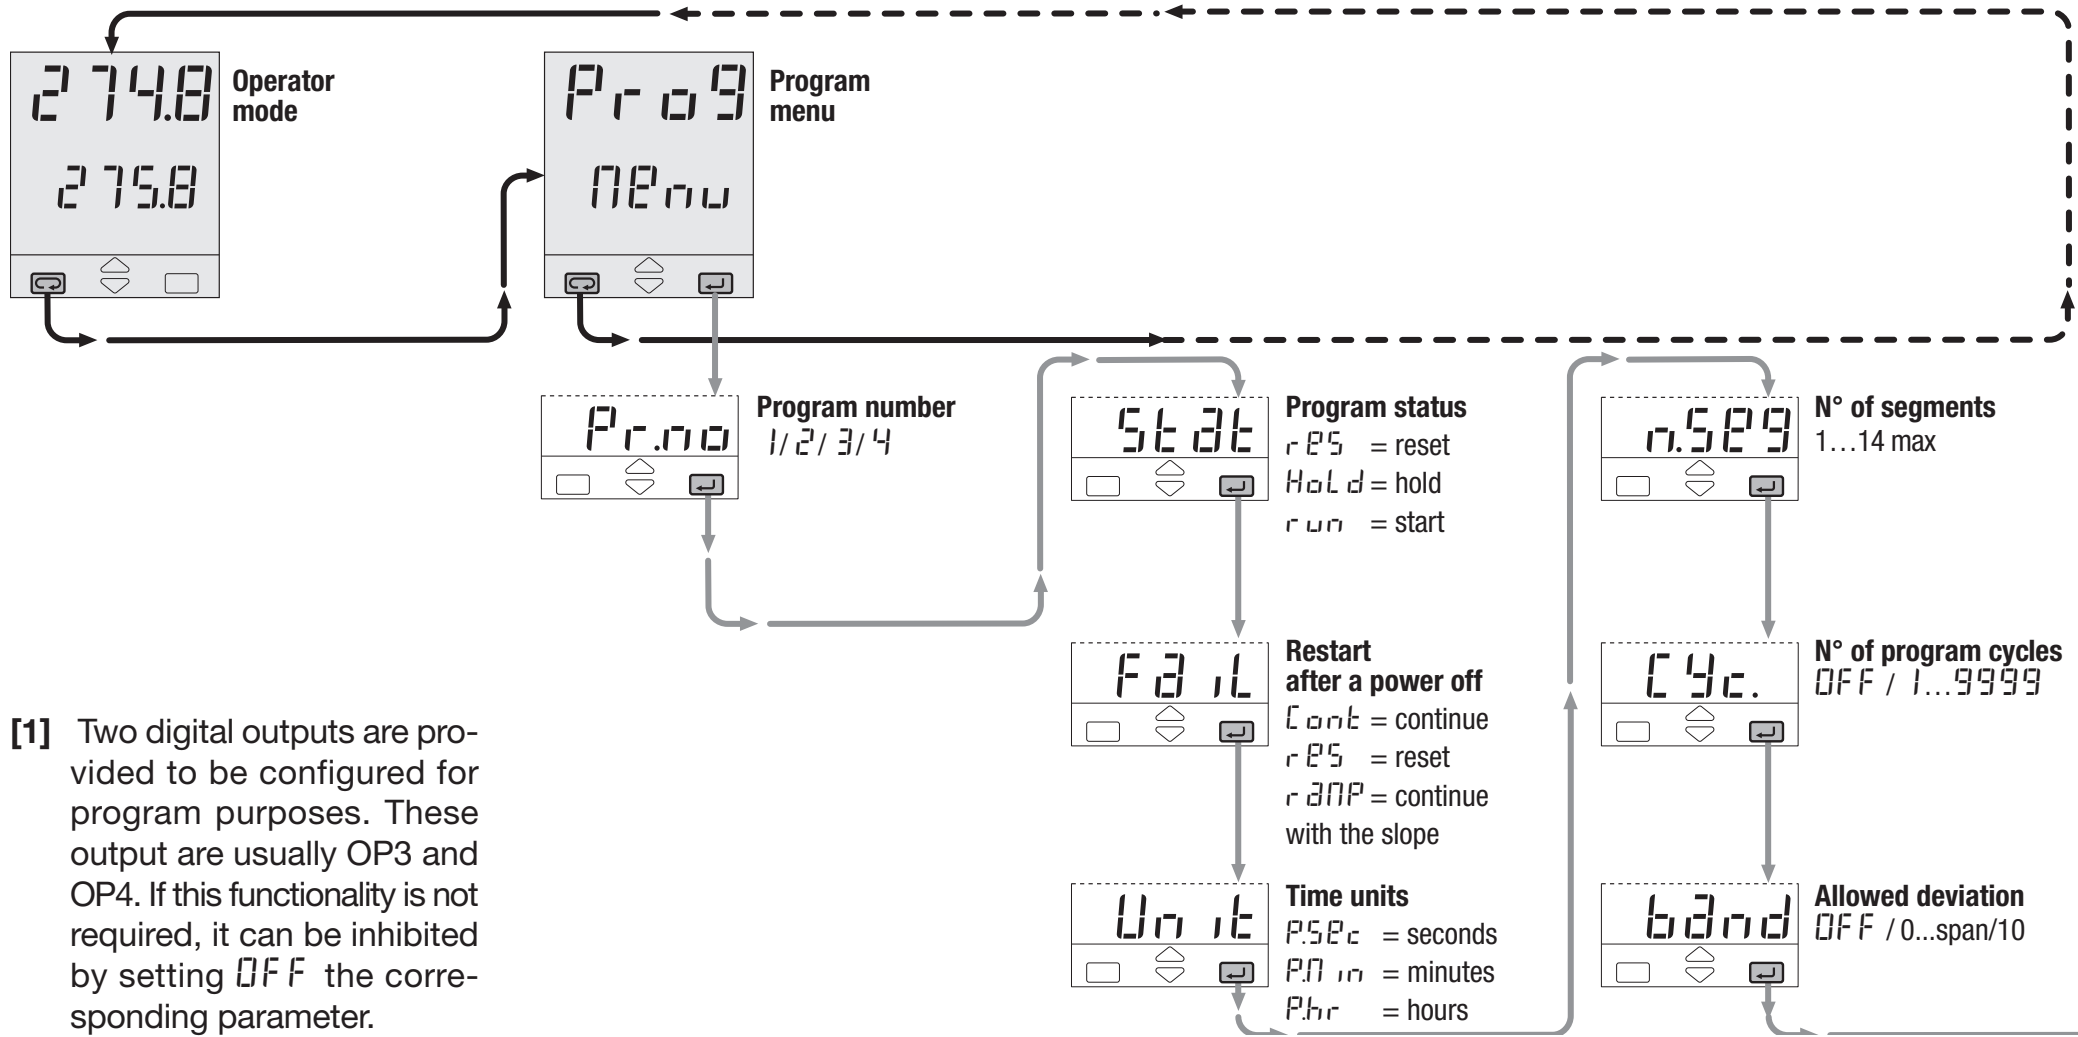

[1] Two digital outputs are provided to be configured for program purposes. These outputs are usually OP3 and OP4. If this functionality is not required, it can be inhibited by setting OFF the corresponding parameter.

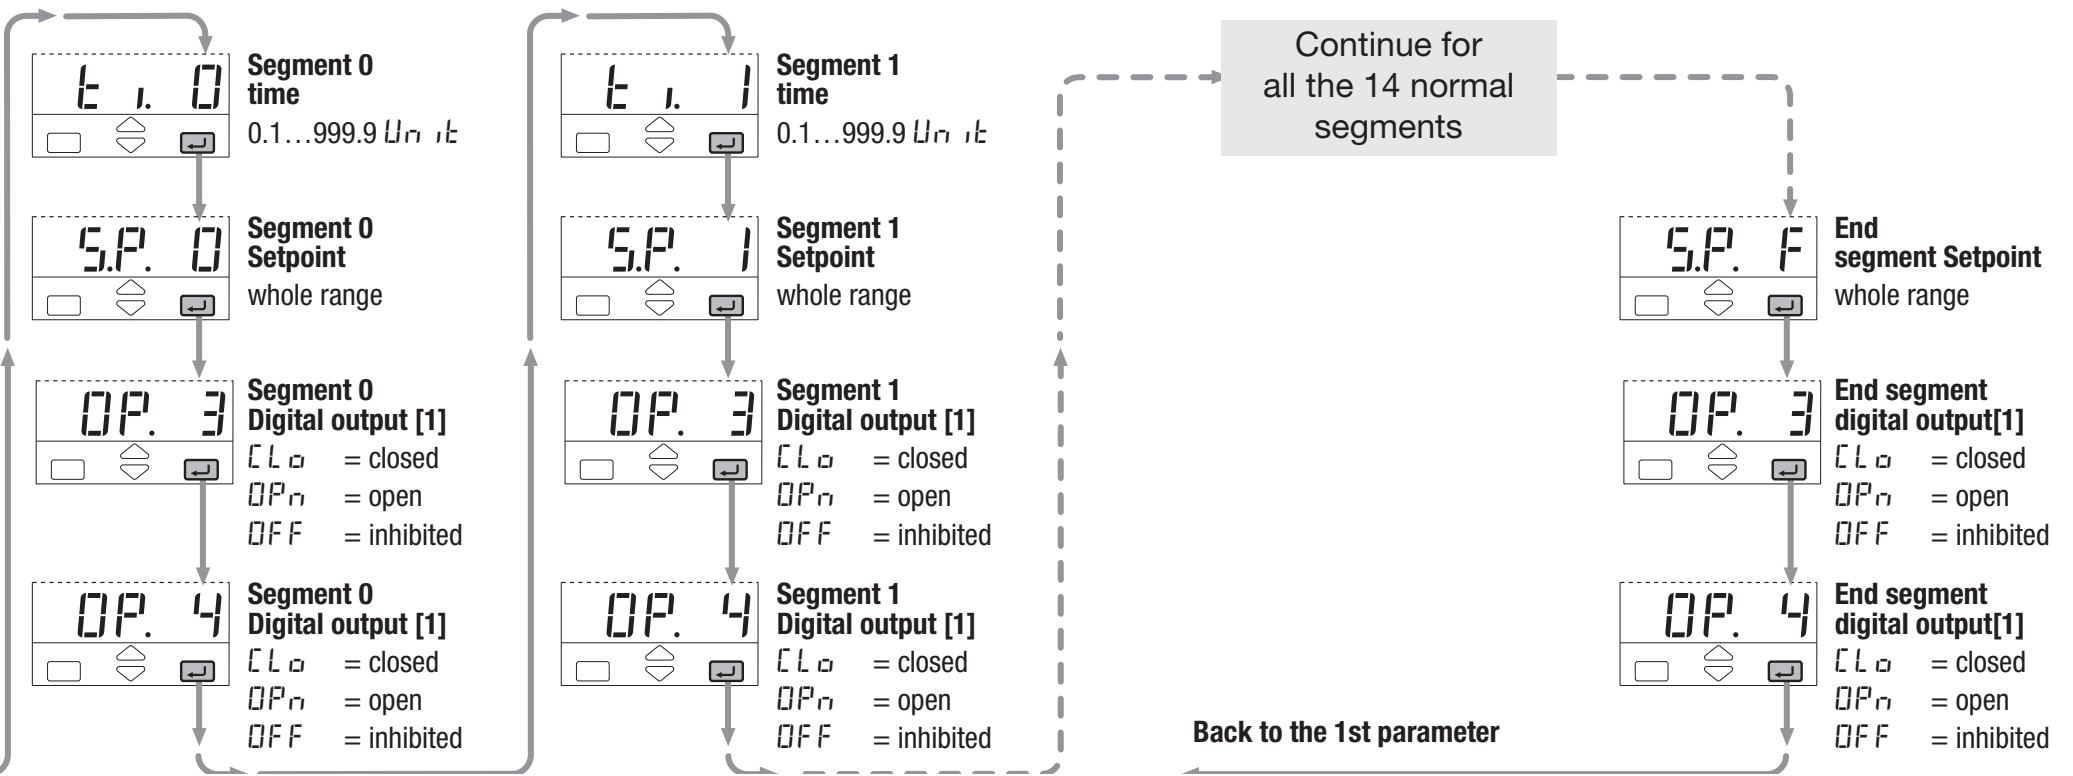




## 7.4 PROGRAM STATUS DISPLAYING

The function mode of the program as well its status is displayed clearly by means the **RUN** and **HLD**; leds as follows:

Function	Status	Led	
		<b>RUN</b>	<b>HLD</b>
Local	Reset	OFF	OFF
Program run	Run	ON	OFF
Program hold	Hold	ON	ON
Program hold for PV outside Error band	Hold back	ON	ON
Program end (reset)	End	ON	OFF

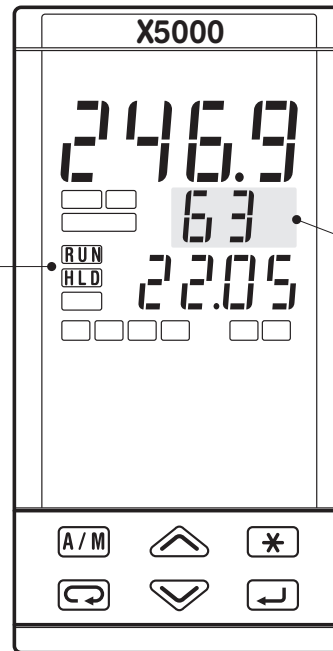

On program run mode, each 3 sec. the display shows alternatively:

- number of running program;
- number of operating segment as well its status.

The control output value can be displayed during the program run using the procedure at page 53.


	<b>Number of running Program</b> (program n° 3)
	each 3 sec. <b>Operating segment and its status</b>
	(Segment n°12) - ramp up
	(Segment n°12) - ramp down
	(Segment n°12) - dwell
	(End segment) <b>Program end</b>

## 7.5 START/STOP OF A PROGRAM

The various commands, supported by the controller, are different for each of the following operating phases:

- A] when in Local Setpoint mode
- B] during the execution of a program
- C] when the program is in hold

Commands supported by the controllers

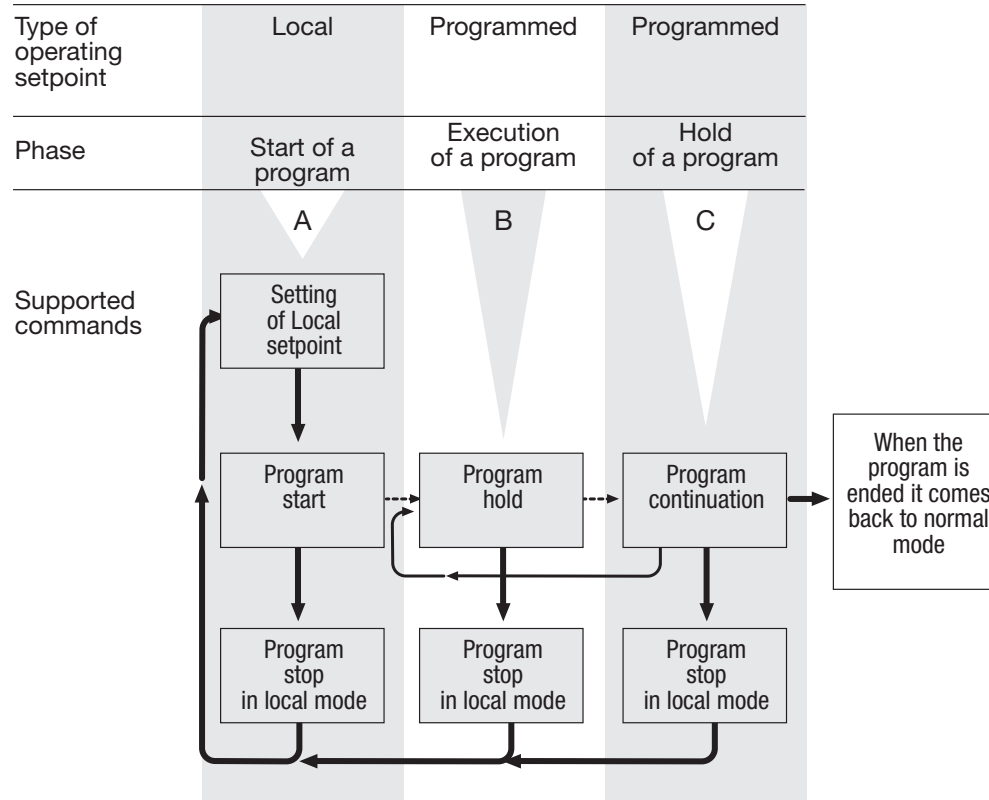


The different phase are displayed in a chained way, just for easing the understanding of the functionality.


Two different mode for starting and stopping a program are provided:

- direct mode with the \* key (see page 66)
- through the parameter menu (see page 67)

7.5.1 START/STOP OF A PROGRAM BY DIRECT MODE WITH \*

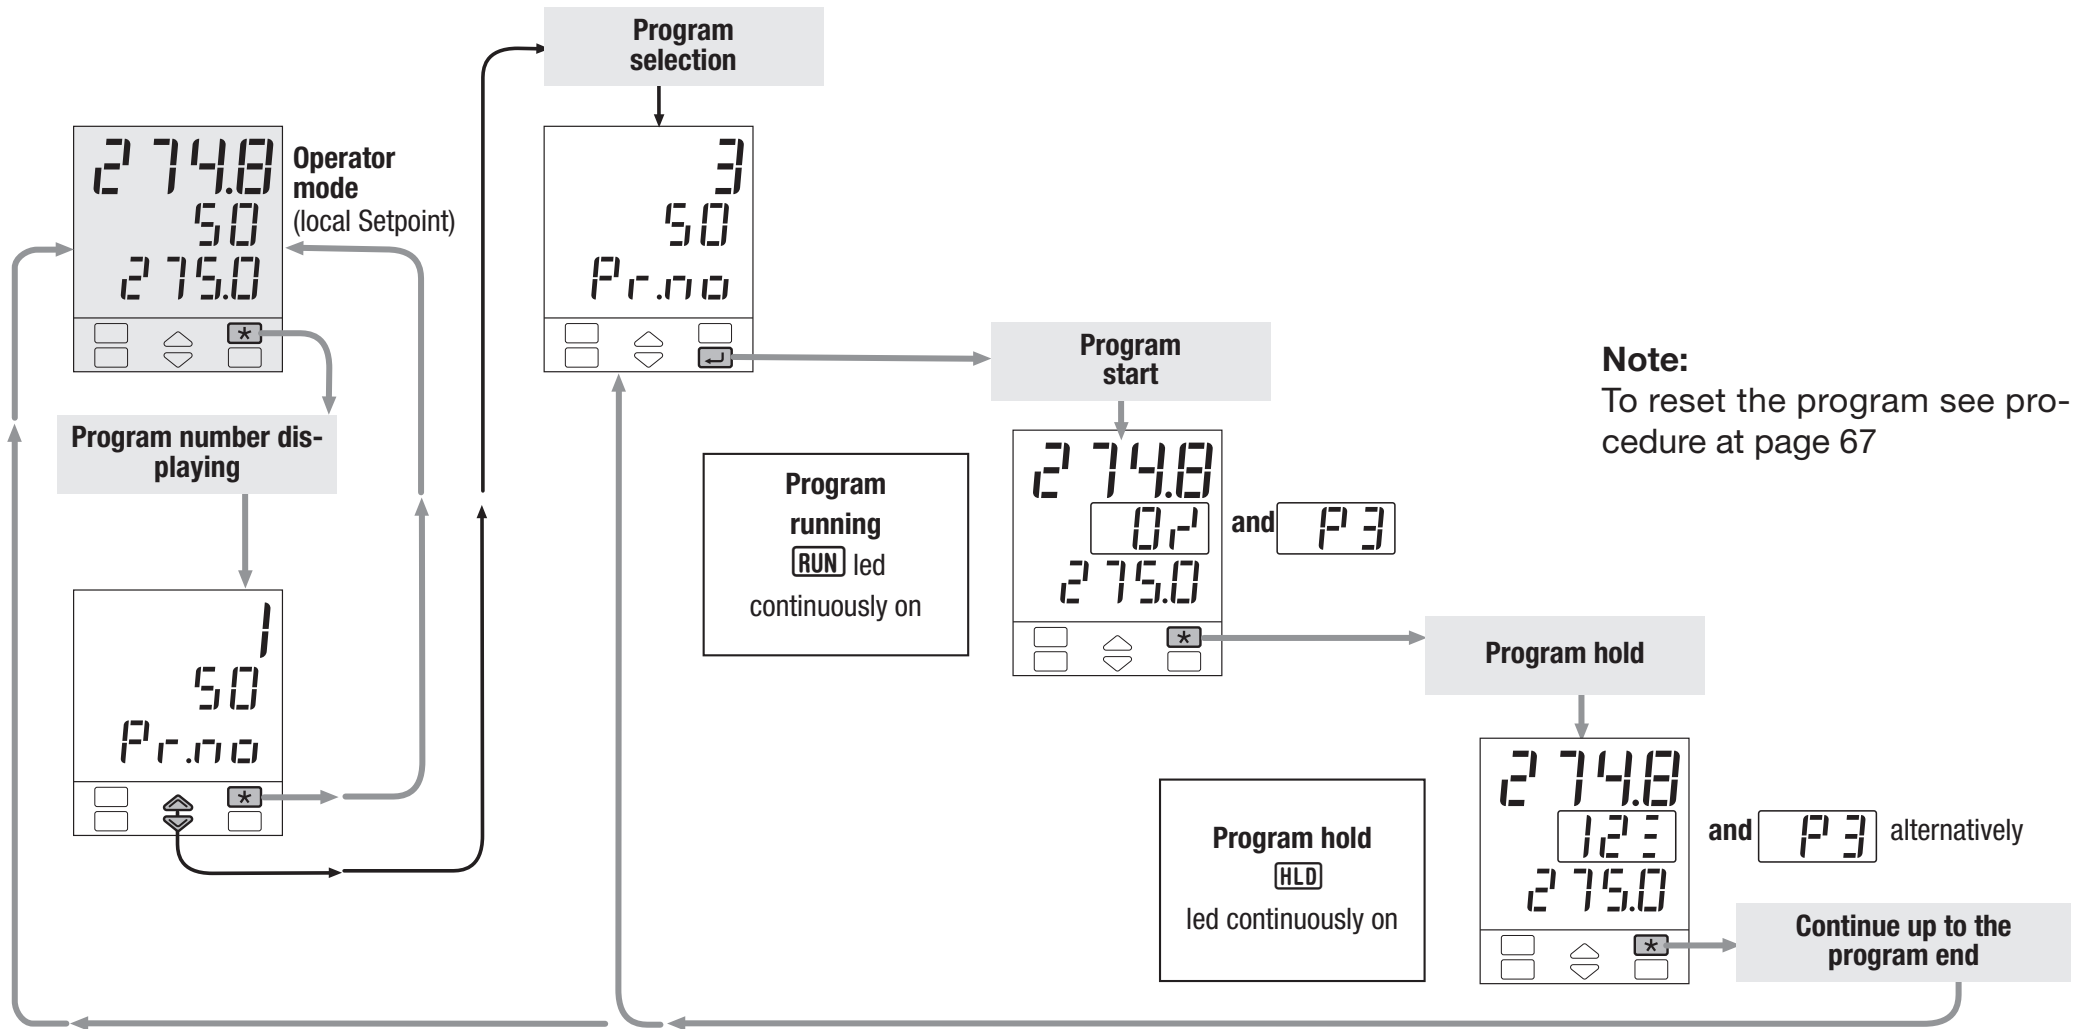



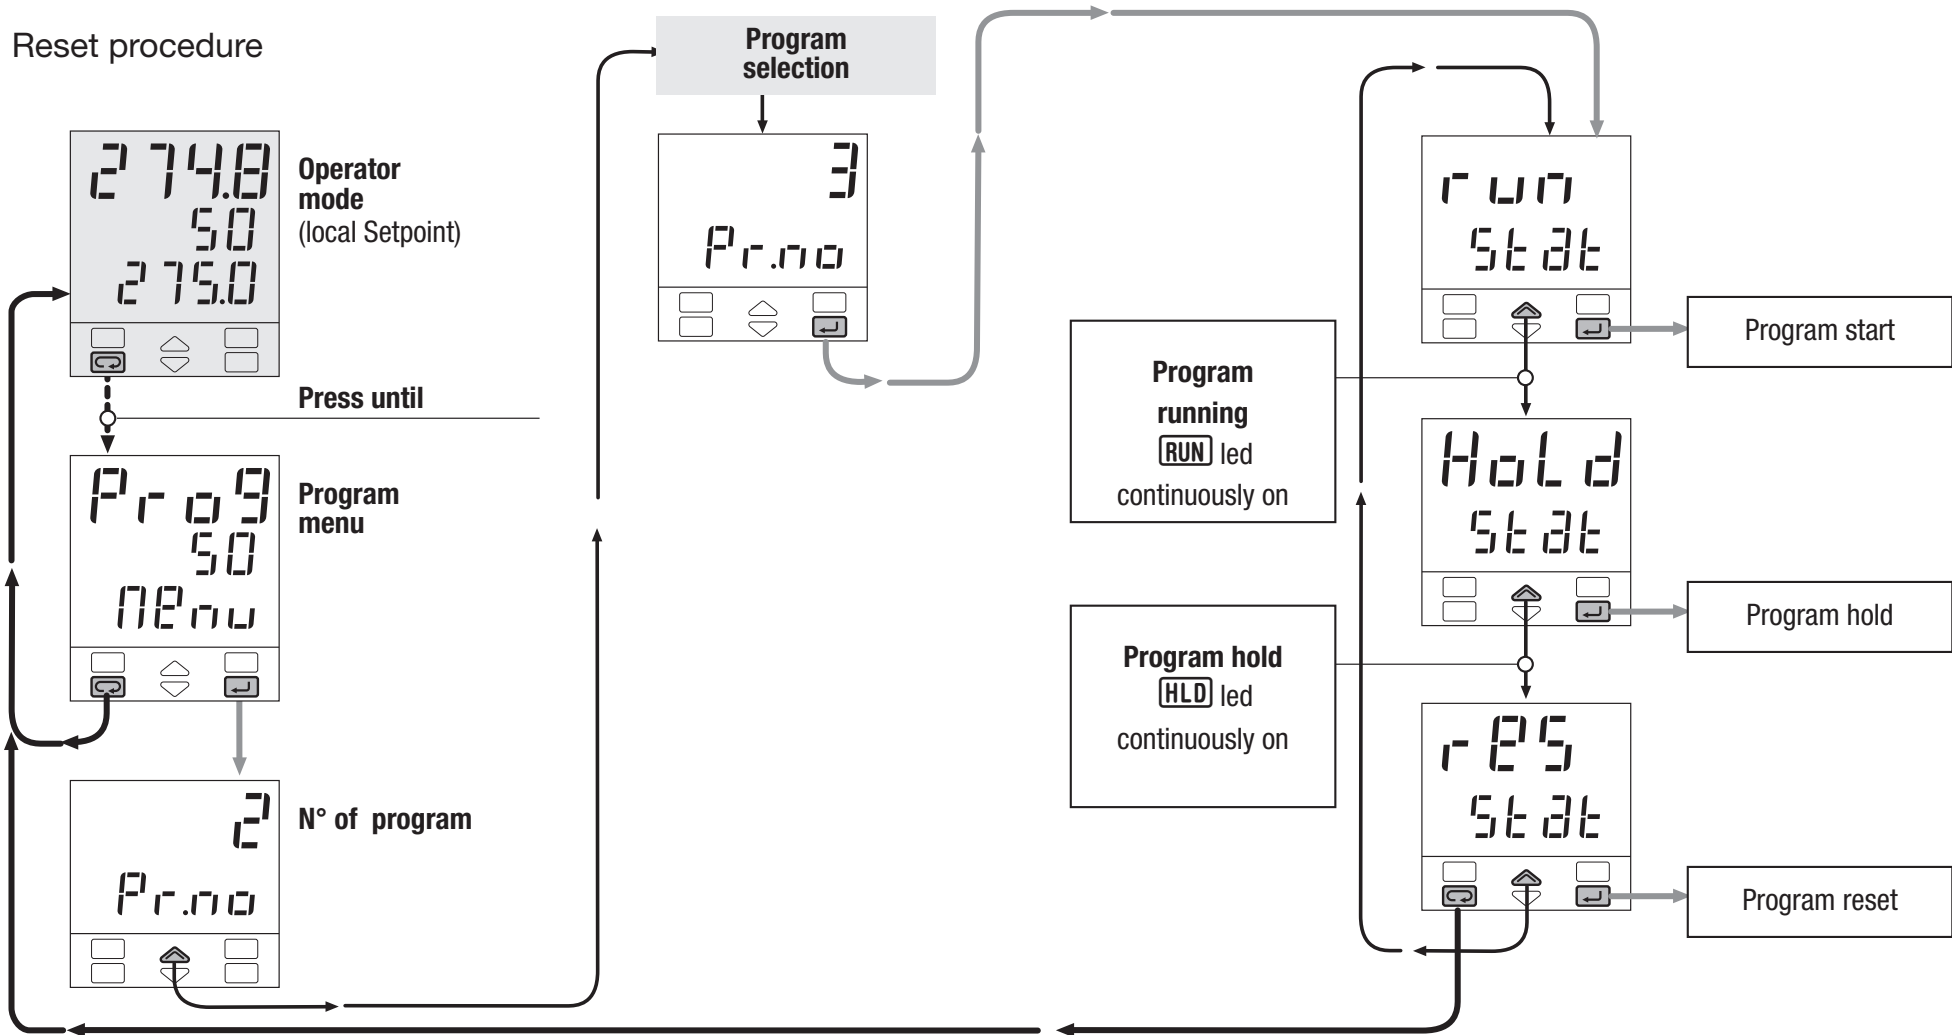












7.5.2 START/HOLD/STOP OF A PROGRAM THROUGH THE PARAMETER MENU



## 7 - Programmed Setpoint

### 7.5.3 DIGITAL INPUT COMMANDS FOR SETPOINT PROGRAMMER FUNCTION (OPTION)

Function	Parameter value	Performed operation		Notes
		 Off	 On	
None		—	—	Not used
Set manual mode		Automatic	Manual	
Keyboard lock		Unlock	Locked	With the keypad locked the commands from digital inputs and serial communications are still operating
PV measure hold		Normal operation	PV is hold	The value of PV is “frozen” at the time the digital input goes to the close state
Setpoint slopes inhibition		Rate limiting is active	Normal operation	When the input is in the on state, the Setpoint is changed in steps
Output forcing		Normal operation	Forced output value	Digital input ON means activation forcing output value (see page 28)
1 <sup>st</sup> Program selection		Local	1st program	Program selection by permanent closure of the digital input
2 <sup>nd</sup> Program selection		Local	2nd program	
3 <sup>rd</sup> Program selection		Local	3rd program	
4 <sup>th</sup> Program selection		Local	4th program	
Program Start/Hold		HOLD	RUN	When the input is in the On state, the program is executed up to the end. When off, the program is forced in hold.
Program reset		Normal operation	Program reset	Digital input ON means program reset and control switching to Local setpoint
Reactivation of blocking		—	Reactivation of blocking	The blocking function is activated on closing the command from digital inputs

## 8 TECHNICAL SPECIFICATIONS

Features at 25°C env. temp.	Description					
<b>Total configurability</b> (see chapter 4.3 page 25)	From keypad or serial communication the user selects: <ul style="list-style-type: none"> <li>- the type of Setpoint</li> <li>- the type of control algorithm</li> <li>- the type of input</li> </ul> <ul style="list-style-type: none"> <li>- the type and functionality of the alarms</li> <li>- control parameter values</li> <li>- access levels</li> </ul>					
<b>PV Input</b> (see pages 13, 14 and page 26)	Common characteristics		A/D converter with resolution of 160.000 points Update measurement time: 50 ms Sampling time: 0.1...10.0 sec. Configurable Input shift: - 60...+ 60 digit Input filter with enable/disable: 0.1...99.9 seconds			
	Accuracy	0.25% ± 1 digits for temperature sensors 0.1% ± 1 digits (for mV and mA) <span style="float: right;">Between 100...240V~ the error is minimal</span>				
	Resistance thermometer (for ΔT: R1+R2 must be <320Ω)	Pt100Ω a 0°C (IEC 751) °C/°F selectable	2 or 3 wires connection Burnout (with any combination)	Max. wire Res: 20Ω max (3 wires) Input Drift: 0.1°C/10° E. T. <0.1°C / 10Ω Wire Res.		
	Thermocouple	L, J, T, K, S, R, B, N, E, W3, W5 (IEC 584) Rj >10MΩ °C/°F selectable	Internal cold junction compensation with PTC Error 1°C/20°C ±0.5°C Burnout	Line: 150Ω max Input drift: <2μV/°C Env. Temp <5μV / 10Ω Wire Res.		
	DC input (current)	4-20mA, 0-20mA    Rj =30Ω	Burnout. Engineering units conf. decimal point position with or without √ Init. Scale -999...9999 Full Scale -999...9999 (min. range of 100 digits)			
	DC input (voltage)	0-50mV, 0-300mV    Rj >10MΩ			Input drift: <0.1% / 20°C Env. Temp. <5μV / 10Ω Wire Res.	
		1-5, 0-5, 0-10V    Rj >10KΩ				
Frequency (option) 0-2.000 / 0-20.000Hz	Low level ≤2V High level 4 - 24V					

8 - Technical Specifications

Features at 25°C env. temp.		Description								
Auxiliary inputs	<b>Remote Setpoint</b> Not isolated accuracy 0.1%	Current 0 / 4-20mA	Rj = 30Ω		Bias in engineering units and ± range Ratio from -9.99...+99.99 Local + Remote Setpoint					
		Voltage 1-5, 0-5, 0-10V	Rj = 300KΩ							
	<b>Potentiometer</b>	from 100Ω to 10KΩ			Feedback valve position					
Logic inputs 3 logic	The closure of the external contact produces any of the following actions:	Auto/Man mode change, Local/Remote Setpoint mode change, 3 Stored Setpoint activation, keypad lock, measure hold, slope inhibit and output forcing								
		Program hold/run (if option installed)								
Operating mode and Outputs	1 single or Heat/Cool PID loop or On/Off with 1, 2,3 or 4 alarms	Single output	<b>Control output</b>		<b>Alarm</b>	<b>Alarm</b>	<b>Alarm</b>	<b>Alarm</b>	<b>Retransmission</b>	
			<b>Main (Heat)</b>	<b>Secondary (Cool)</b>	<b>AL1</b>	<b>AL2</b>	<b>AL3</b>	<b>AL4</b>	<b>PV / SP</b>	
			<b>OP1</b> Relay/Triac			<b>OP2</b> Relay/Triac	<b>OP3</b> Relay	<b>OP4</b> Relay	<b>OP5</b> Analog./Logic	<b>OP6</b> Analog./Logic
		<b>OP5</b> Analog./Logic		<b>OP1</b> Relay/Triac	<b>OP2</b> Relay/Triac	<b>OP3</b> Relay	<b>OP4</b> Relay		<b>OP6</b> Analog./Logic	
		Heat / Cool	<b>OP1</b> Relay/Triac	<b>OP2</b> Relay/Triac			<b>OP3</b> Relay	<b>OP4</b> Relay	<b>OP5</b> Analog./Logic	<b>OP6</b> Analog./Logic
			<b>OP1</b> Relay/Triac	<b>OP5</b> Analog./Logic		<b>OP2</b> Relay/Triac	<b>OP3</b> Relay	<b>OP4</b> Relay		<b>OP6</b> Analog./Logic
			<b>OP5</b> Analog./Logic	<b>OP2</b> Relay/Triac	<b>OP1</b> Relay/Triac		<b>OP3</b> Relay	<b>OP4</b> Relay		<b>OP6</b> Analog./Logic
			<b>OP5</b> Analog./Logic	<b>OP6</b> Analog./Logic	<b>OP1</b> Relay/Triac	<b>OP2</b> Relay/Triac	<b>OP3</b> Relay	<b>OP4</b> Relay		
		Valve drive	<b>OP1</b> Relay/Triac	<b>OP2</b> Relay/Triac			<b>OP3</b> Relay	<b>OP4</b> Relay	<b>OP5</b> Analog./Logic	<b>OP6</b> Analog./Logic

Features at 25°C env. temp.	Description			
<b>Control mode</b>	Algorithm	PID with overshoot control or On-off - PID with valve drive algorithm, for controlling motorised positioners		
	Proportional band (P)	0.5...999.9%		
	Integral time (I)	1...9999 sec	DFF = 0	Single output PID algorithm
	Derivative time (D)	0.1...999.9 sec		
	Error dead band	0.1...10.0 digit		
	Overshoot control	0.01...1.00		
	Manual reset	0...100%		
	Cycle time (Time proportional only)	0.2...100.0 sec		
	Min./Max output limits	0...100% separately adjustable		
	Control output rate limit	0.01...99.99%/sec	DFF = 0	
	Soft-start output value	1...100% - Time 1...9999 sec		
	Output safety value	-100...100%		
	Control output forcing value	-100...100%		
	Control output hysteresis	0...5% Span in engineering units		On-Off algorithm
	Dead band	0.0...5.0%		Heat/Cool PID algorithm
	Cool proportional band (P)	0.5...999.9%		
	Cool integral time (I)	1...9999 sec	DFF = 0	
	Cool derivative time (D)	0.1...999.9 sec		
	Cool cycle time (Time proportional only)	0.2...100.0 sec		
	Control output high limit	0...100%		
	Cool output max. rate	0.01...99.99%/sec	DFF = 0	
	Motor travel time	15...600 sec		Valve drive PID algorithm Open/Stop/Close
	Motor minimum step	to 0.1...5.0%		
	Feedback potentiometer	100Ω ...10KΩ		



8 - Technical Specifications

Features at 25°C env. temp.	Description		
<b>OP1-OP2 outputs</b>	SPST Relay N.O., 2A/250V~ for resistive load Triac, 1A/250V~ for resistive load		
<b>OP3 output</b>	SPDT relay N.O., 2A/250V~ for resistive load		
<b>OP4 output</b>	SPST relay N.O. 2A/250V~ for resistive load		
<b>Analogue / digital OP5 and OP6 (option) outputs</b>	Control or PV/SP retransmission	Galvanic isolation: 500 V~/1 min Short circuit protected Resolution 12bit Accuracy: 0.1 %	Analogue: 0/1...5V, 0...10V, 500Ω / 20mA max, 0/4...20mA, 750Ω / 15V max Logic: 0/24V- ±10%- 30mA max for solid state relay
<b>AL1 - AL2 - AL3 - AL4 alarms</b>	Hysteresis 0...5% Span in engineering units		
	Action	Active high	Action type Deviation threshold ±range Band threshold 0...range Absolute threshold whole range
		Active low	
	Special functions	Sensor break, heater break alarm	
		Acknowledge (latching), activation inhibit (blocking)	
Connected to Timer or program (if options installed) (only OP3-OP4)			
<b>Setpoint</b>	Local + 3 Stored		Up and down ramps 0.1...999.9 digit/min or digit/hour (OFF=0) Low limit: from low range to high limit High limit: from low limit to high range
	Remote only		
	Local and Remote		
	Local with trim		
	Remote with trim		
	Programmable	If option installed	

Features at 25°C env. temp.	Description	
<b>Programmable Setpoint</b> (optional)	4 programs, 16 segments (1 initial and 1 end) From 1 to 9999 cycles or continuous cycling (□FF) Time values in seconds, minutes and hours Start, stop, hold, etc. activated from the keypad, digital input and serial communications	
<b>Tuning</b>	<b>Fuzzy-Tuning type</b> . The controller selects automatically the best method according to the process conditions	Step response Natural frequency  <b>Adaptive Tuning</b> self-learning, not intrusive, analysis of the process response to perturbations and continuously calculation of the PID parameters
<b>Auto/Man station</b>	Standard with bumpless function, by keypad, digital input or serial communications	
<b>Serial comm.</b> (option)	RS485 isolated, SLAVE Modbus/Jbus protocol, 1200, 2400, 4800, 9600, 19.200 bit/sec, 3 wires RS485 isolated, MASTER Modbus/Jbus protocol, 1200, 2400, 4800, 9600, 19.200 bit/sec, 3 wires RS485 asynchronous / isolated, PROFIBUS DP protocol, from 9600 bit/sec at 12MB/sec selectable, max lenght 100m (at 12 Mb/sec.)	
<b>Auxiliary Supply</b>	+24V– ± 20% 30mA max - for external transmitter supply	
<b>Operational safety</b>	Measure input	Detection of out of range, short circuit or sensor break with automatic activation of the safety strategies and alerts on display
	Control output	Safety and forcing value -100%...100% separately adjustable
	Parameters	Parameter and configuration data are stored in a non volatile memory for an unlimited time
	Access protection	Password to access the configuration and parameters data - Fast wiew
<b>General characteristics</b>	Power supply (fuse protected)	100 - 240V~ (-15% + 10%) 50/60Hz or 24V~ (-15% + 25%) 50/60Hz e 24V– (-15% + 25%)
	Safety	Compliance to EN61010-1 (IEC 1010 – 1), installation class 2 (2500V) pollution class 2, <b>instrument class II</b>
	Electromagnetic compatibility	Compliance to the CE standards (see page 2)
	Approvals	UL, cUL
	Protection EN60529 (IEC 529)	IP65 front panel
	Dimensions	1/8 DIN - 48 x 96, depth 110 mm, weight 380 gr. max



































## WARRANTY

We warrant that the products will be free from defects in material and workmanship for 3 years from the date of delivery.

The warranty above shall not apply for any failure caused by the use of the product not in line with the instructions reported on this manual.

# ICONS TABLE

Main universal input	Digital input	Digital input connected functions
 Thermocouple	 Isolated contact	 Auto/Manual
 RTD (Pt100)	 NPN open collector	 Run, Hold, Reset and program selection
 Delta Temp (2x RTD)	 TTL open collector	 PV hold
 mA and mV		 Setpoint slopes inhibition
 Custom	<b>Setpoint</b>	
 Frequency	 Local	<b>Output</b>
	 Stand-by	 SPST Relay
<b>Auxiliary input</b>	 Keypad lock	 Triac
 Current transformer	 Outputs lock	 SPDT Relay
 mA Remote setpoint	 Start-up function	 mA
 Volt Remote setpoint	 Timer function	 mA mV
 Feedback potentiometer	 Memorized	 Logic
	 Remote	
	 Setpoint programmer	